


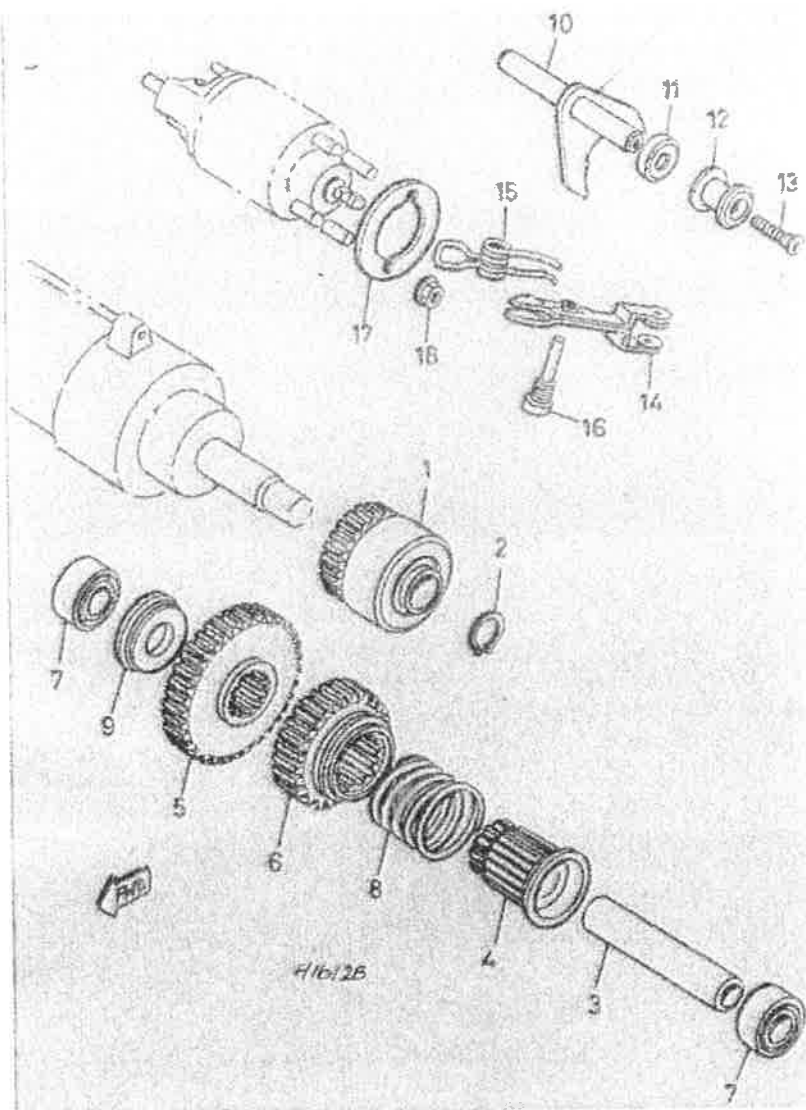

30.7 Starter clutch details (XV1000, XV1100 and 1986 and later XV700 and XV750 models)

- | | | | |
|---|------------------|----|-------------------|
| 1 | Starter clutch | 10 | Drive lever shaft |
| 2 | Snap-ring | 11 | Oil seal |
| 3 | Shaft | 12 | Collar |
| 4 | Starter wheel | 13 | Screw |
| 5 | Inner idler gear | 14 | Drive lever |
| 6 | Outer idler gear | 15 | return spring |
| 7 | Thrust collar | 16 | Pivot bolt |
| 8 | Spring | 17 | Gasket |
| 9 | Collar | 18 | Nut |

7 Remove the thrust collar (see illustration). Remove the O-ring, shaft, starter wheel, spring, outer idler gear, inner idler gear and remaining thrust collar.

8 Remove the snap-ring, starter clutch and remaining snap-ring.

9 Remove the drive lever collar screw (see illustration 30.6).

10 Remove the two solenoid securing nuts. Remove the solenoid