



YAMAHA

PARTS CATALOGUE

XV1000'82 (19T)

EUROPE

1219T-300E1

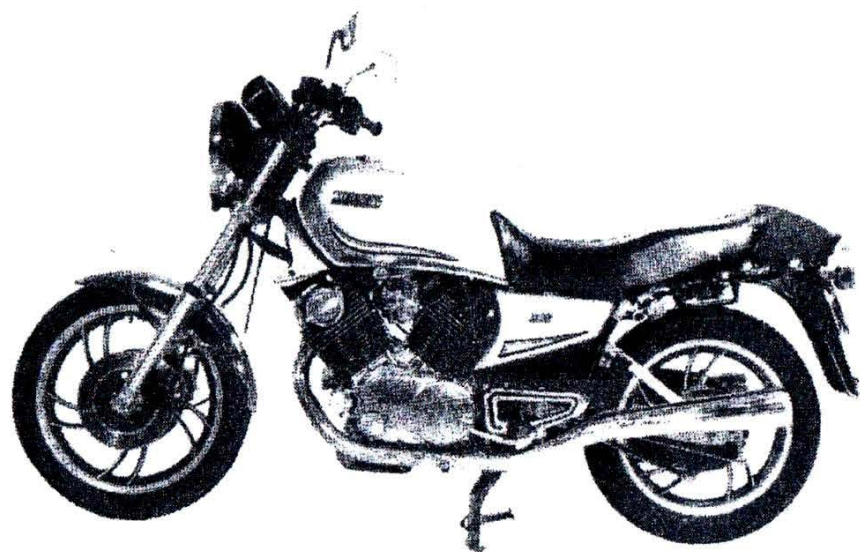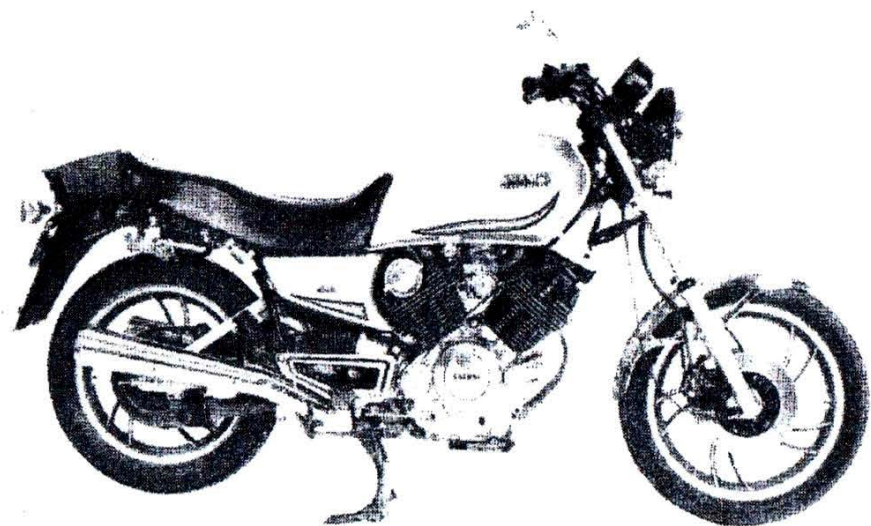

FOREWORD

This Parts Catalogue is related to the parts in use for the Yamaha XV1000'82 (19T)
When you are ordering replacement parts for the XV1000'82 (19T), refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.
It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

- U.R. Use size (thickness) and/or number as required.
- U.N. Use as many as you need.
- A.P. Alternate Parts
- L.M. Local Made
- F# Frame No. (Applicable machine No.)

3. The parts marked with (*) in the parts number column of this Catalogue are not supplied with by Yamaha, those have to be found locally.
4. Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put against the name of each part.

EXAMPLE CARBURETOR ASS'Y
 . JET, pilot
 . NOZZLE, main

5. Indication of No. of constituent parts for assembly



The numeral appearing to the right of each constituent part under the description indicates the quantity of such parts for each individual assembly unit.

EXAMPLE

Part No.	Description	Q'ty	Remarks
2F5-83310-60	FRONT FLASHER LIGHT ASS'Y	2	
115-83311-60	. BULB (6V-18W)	1	
1M1-83309-60	. REFLECTOR	1	

6. Initial Serial No. and Color Code

(A) Frame Serial No.	5A8-120101 and following
(B) Engine Serial No.	5A8-120101 and following

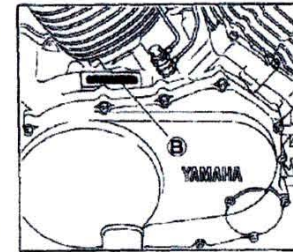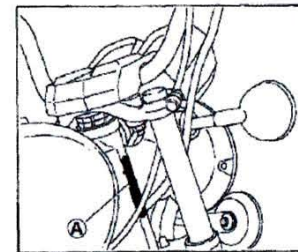

Color Code	Color Name	Abbreviate
63	BRILLIANT RED	BR

7. Applicable colors of graphics are represented in the "Remarks" column by the letter(s) appropriately picked out of the full word(s) showing such colors.

EXAMPLE

Part No.	Description	Q'ty	Remarks
2N4-24110-00-X5	FUEL TANK COMP.	1	MAXIM RED
3J1-24240-10	. GRAPHIC, fuel tank set	1	for MXR

CONTENTS

GENERAL SPEC.

ENGINE

Fig. 1	CYLINDER HEAD	1
Fig. 2	CYLINDER	3
Fig. 3	CRANKSHAFT · PISTON	4
Fig. 4	CAMSHAFT · CHAIN	6
Fig. 5	VALVE	7
Fig. 6	OIL PUMP	8
Fig. 7	OIL CLEANER	9
Fig. 8	INTAKE	10
Fig. 9	CARBURETOR	12
Fig. 10	EXHAUST	14
Fig. 11	CRANKCASE	16
Fig. 12	CRANKCASE COVER	17
Fig. 13	A.C. GENERATOR	19
Fig. 14	STARTING MOTOR	20
Fig. 15	STARTER CLUTCH	21
Fig. 16	CLUTCH	22
Fig. 17	TRANSMISSION	24
Fig. 18	SHIFT CAM · FORK	26
Fig. 19	SHIFT SHAFT · PEDAL	27

CHASSIS

Fig. 20	FRAME	28
Fig. 21	FRONT FENDER · REAR FENDER	30
Fig. 22	SIDE COVER · TOOL	31
Fig. 23	REAR ARM	33
Fig. 24	REAR SUSPENSION	35
Fig. 25	FRONT FORK	36
Fig. 26	STEERING	38
Fig. 27	FUEL TANK	40
Fig. 28	SEAT	42

Fig. 29	FRONT WHEEL	44
Fig. 30	FRONT BRAKE CALIPER	45
Fig. 31	REAR WHEEL	46
Fig. 32	HANDLEBAR · CABLE	48
Fig. 33	FRONT MASTER CYLINDER	49
Fig. 34	STAND · FOOTREST	50
Fig. 35	FLASHER LIGHT	52
Fig. 36	SPEEDOMETER · TACHOMETER	53
Fig. 37	HEADLIGHT	55
Fig. 38	TAILLIGHT	56
Fig. 39	ELECTRICAL 1	57
Fig. 40	ELECTRICAL 2	59
Fig. 41	HANDLE SWITCH · LEVER	60

INDIVIDUAL SPEC.

FOR AUSTRIA, BELGIUM, HOLLAND, ITALY

Fig. 42	CHASSIS	64
Fig. 43	TAILLIGHT	65
Fig. 44	ELECTRICAL	66

FOR DENMARK, FINLAND, NORWAY SWEDEN, SWITZERLAND

Fig. 45	CHASSIS	68
Fig. 46	TAILLIGHT	69
Fig. 47	ELECTRICAL	70

INDEX (GENERAL SPEC.)


NUMERICAL INDEX
PARTS NAME INDEX

INDEX (INDIVIDUAL SPEC.)

NUMERICAL INDEX

GENERAL SPEC.


FIG. 1 CYLINDER HEAD

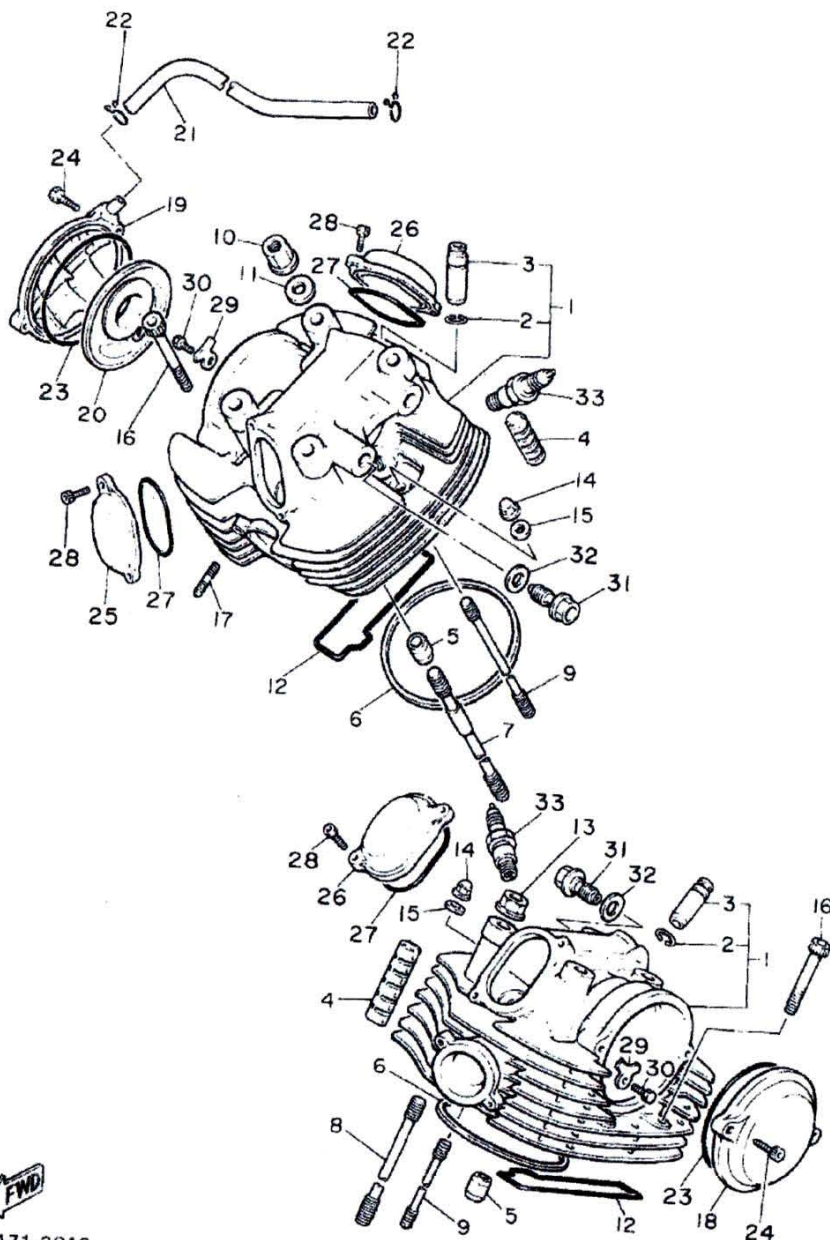

11K171-2010

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-11110-00	CYLINDER HEAD ASSY	2	
2	93440-14086	.CIRCLIP	2	
3	4X7-11133-10	.GUIDE, in./ex. valve	2	1st 0/s
4	4X7-11127-00	ABSORBER 3	8	
5	91800-06030	PIN, dowel	4	
6	5A8-11181-00	GASKET, cylinder head 1	2	
7	4X7-11363-00	BOLT, cylinder holding 3	4	
8	90116-12350	BOLT, stud	4	
9	90116-10344	BOLT, stud	2	
10	90179-12326	NUT	4	
11	90201-125A3	WASHER, Plate	4	
12	4X7-11355-00	SEAL, cylinder 1	2	
13	90179-12325	NUT	4	
14	90176-10033	NUT, crown	2	
15	90201-101A4	WASHER, Plate	2	
16	91316-08050	BOLT	4	
17	95611-08625	BOLT, stud	4	
18	4X7-11185-00	COVER, cylinder head side 1	1	
19	4X7-1111H-00	COVER, cylinder head side 4	1	
20	4X7-11165-00	PLATE, breather	1	
21	5A8-11166-00	PIPE, breather 1	1	
22	90467-14015	CLIP	2	
23	93210-92448	O-RING	2	
24	91311-06025	BOLT	4	
25	4X7-11186-00	COVER, cylinder head side 2	2	
26	4X7-11187-00	COVER, cylinder head side 3	2	
27	93210-62446	O-RING	4	
28	91311-06016	BOLT	8	

FIG. 1 CYLINDER HEAD

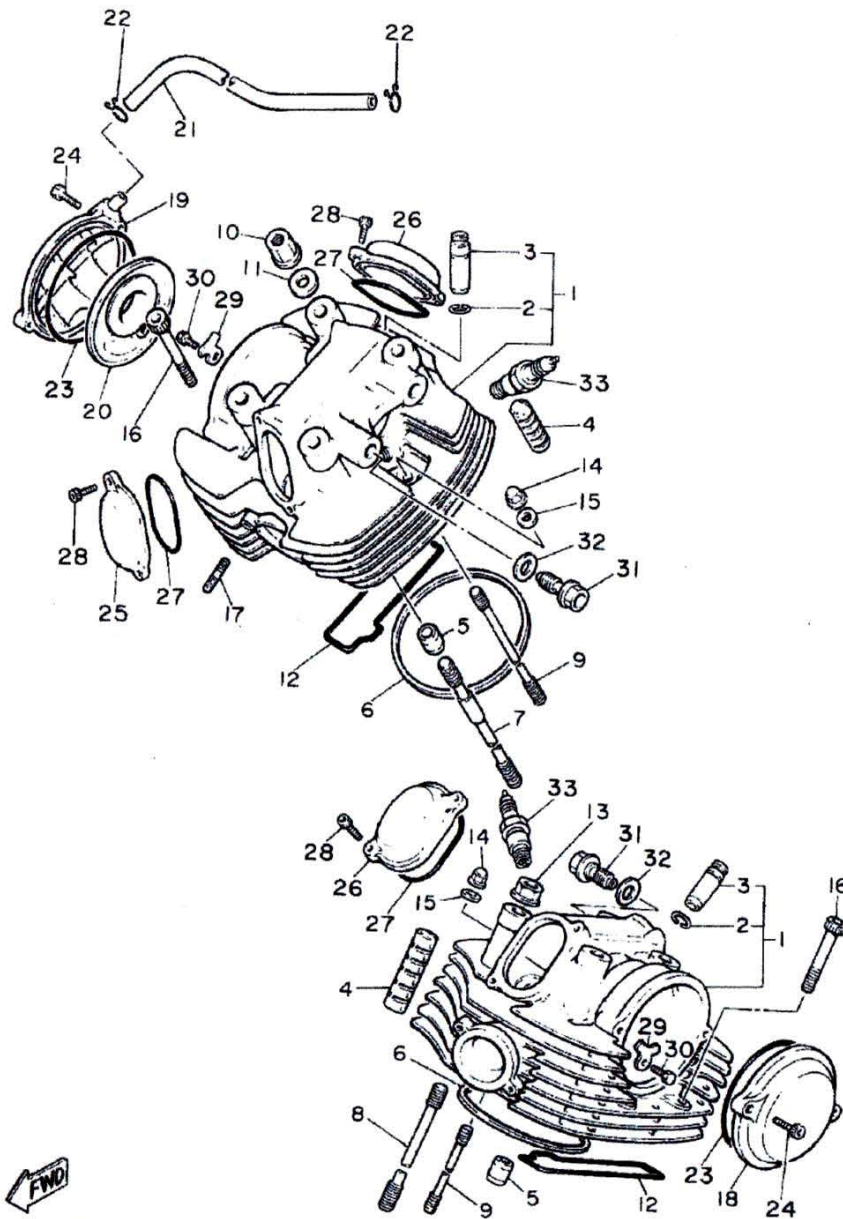


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4X7-1111F-00	PLATE	2	
30	97311-08020	BOLT	2	
31	90401-16073	BOLT, union	2	
32	90430-17168	GASKET	2	
33	94701-00117	PLUG, sPark (NGK BP-7ES)	2	




11K171-2010

FIG. 2 CYLINDER

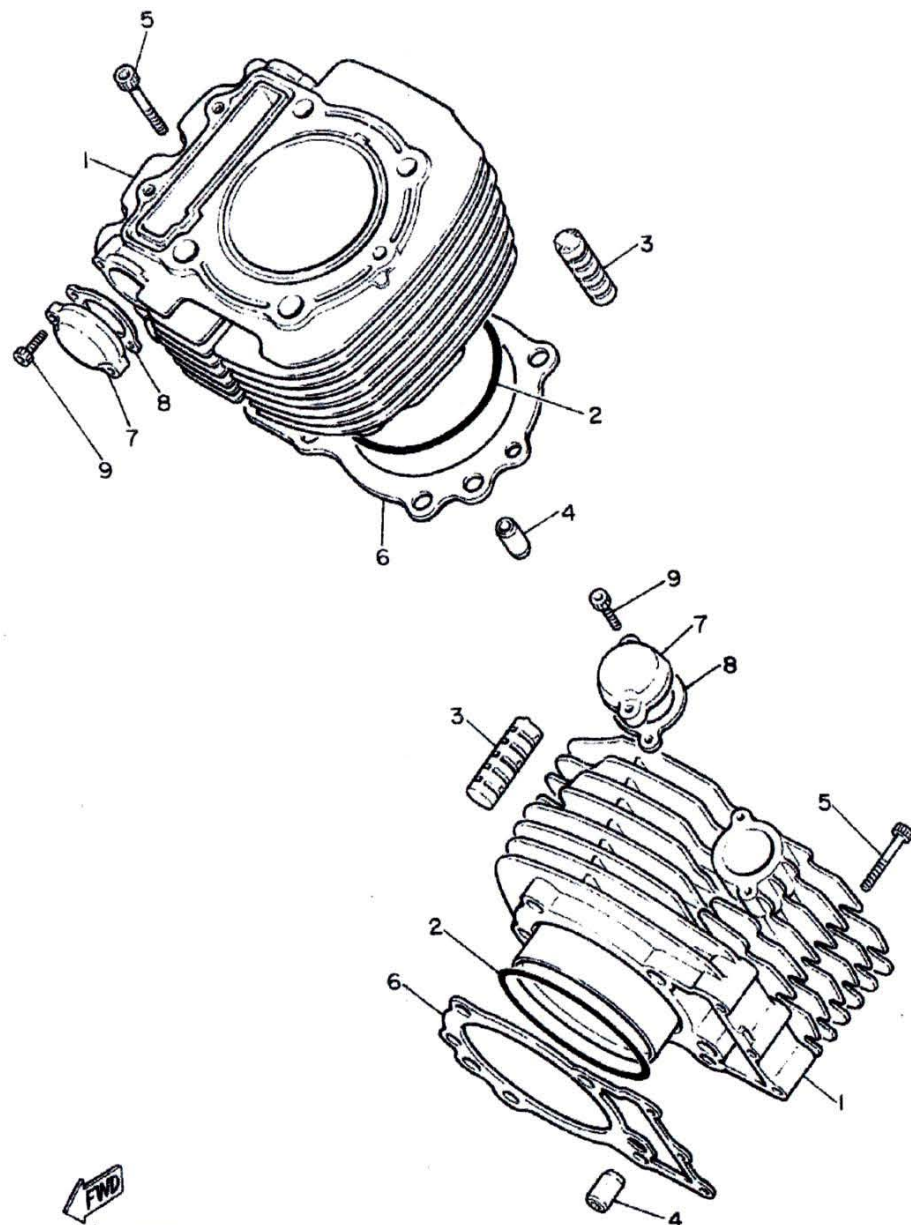

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-11310-01	CYLINDER	2	
2	93211-01467	O-RING	2	
3	4X7-11161-00	ABSORBER 1	4	
4	90387-087A5	COLLAR	4	
5	91316-06040	BOLT	6	
6	5A8-11351-00	GASKET, cylinder	2	
7	5A8-12215-00	CAP, tensioner case	2	
8	4X7-12213-00	GASKET, tensioner case	2	
9	91316-06025	BOLT	4	

FIG. 3 CRANKSHAFT·PISTON

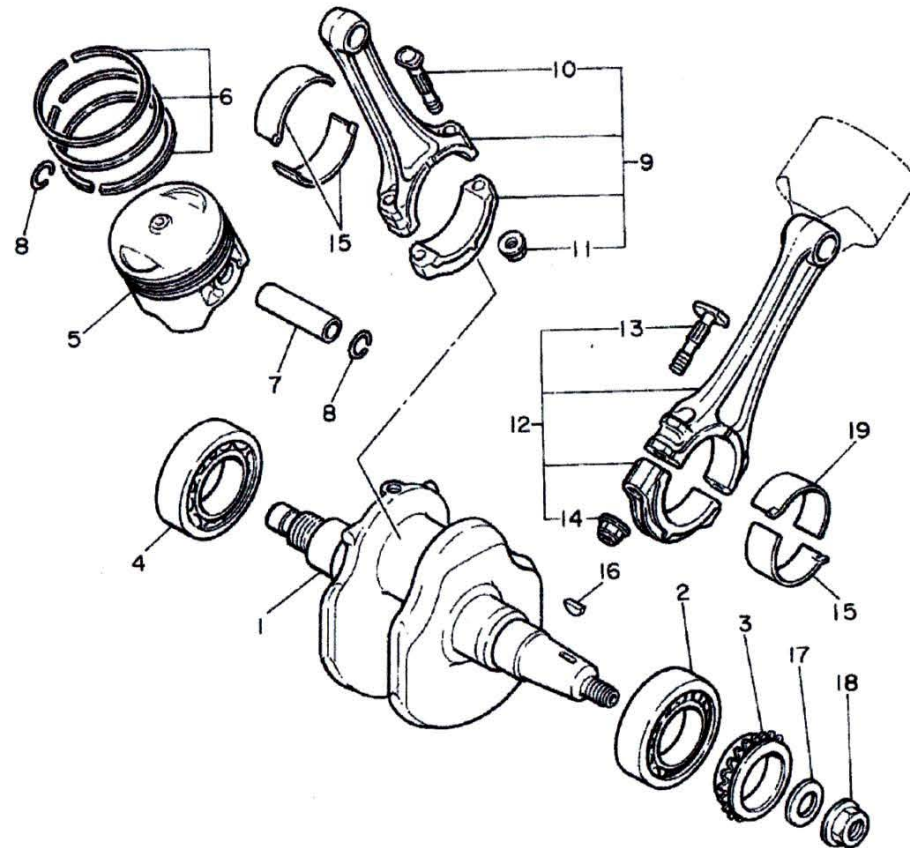

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-11411-00	CRANKSHAFT	1	
2	93306-30807	BEARING (B6308C4 SPECIAL)	1	
3	4X7-13354-00	SPROCKET, drive	1	
4	93306-30806	BEARING (B6308C3 SPECIAL)	1	
5	5A8-11631-00-A0	PISTON (STD)	2	UR size a
	5A8-11631-00-X0	PISTON (STD)	2	UR size b
	5A8-11636-00	PISTON (1ST O/S 0.25MM)	2	AP
	5A8-11636-00	PISTON (2ND O/S 0.50MM)	2	AP
	5A8-11637-00	PISTON (3RD O/S 0.75MM)	2	AP
	5A8-11638-00	PISTON (4TH O/S 1.00MM)	2	AP
6	5A8-11610-00	PISTON RING SET (STD)	2	AP
	5A8-11610-10	PISTON RING SET (1ST O/S)	2	AP
	5A8-11610-20	PISTON RING SET (2ND O/S)	2	AP
	5A8-11610-30	PISTON RING SET (3RD O/S)	2	AP
	5A8-11610-40	PISTON RING SET (4TH O/S)	2	AP
7	5A8-11633-00	PIN, Piston	2	
8	93450-24028	CIRCLIP	4	
9	5A8-Y1165-00	CONNECTING ROD ASSY	1	
10	4X7-11654-01	•BOLT, connecting rod	2	
11	90179-09331	•NUT	2	
12	5A8-Y1166-00	CONNECTING ROD ASSY	1	
13	4X7-11654-01	•BOLT, connecting rod	2	
14	90179-09331	•NUT	2	
15	4X7-11656-00	PLANE BEARING, connecting rod	3	UR blue
	4X7-11656-10	PLANE BEARING, connecting rod	3	UR black
	4X7-11656-20	PLANE BEARING, connecting rod	3	UR brown
	4X7-11656-30	PLANE BEARING, connecting rod	3	UR green
	4X7-11656-40	PLANE BEARING, connecting rod	3	UR yellow

5A8310-1030

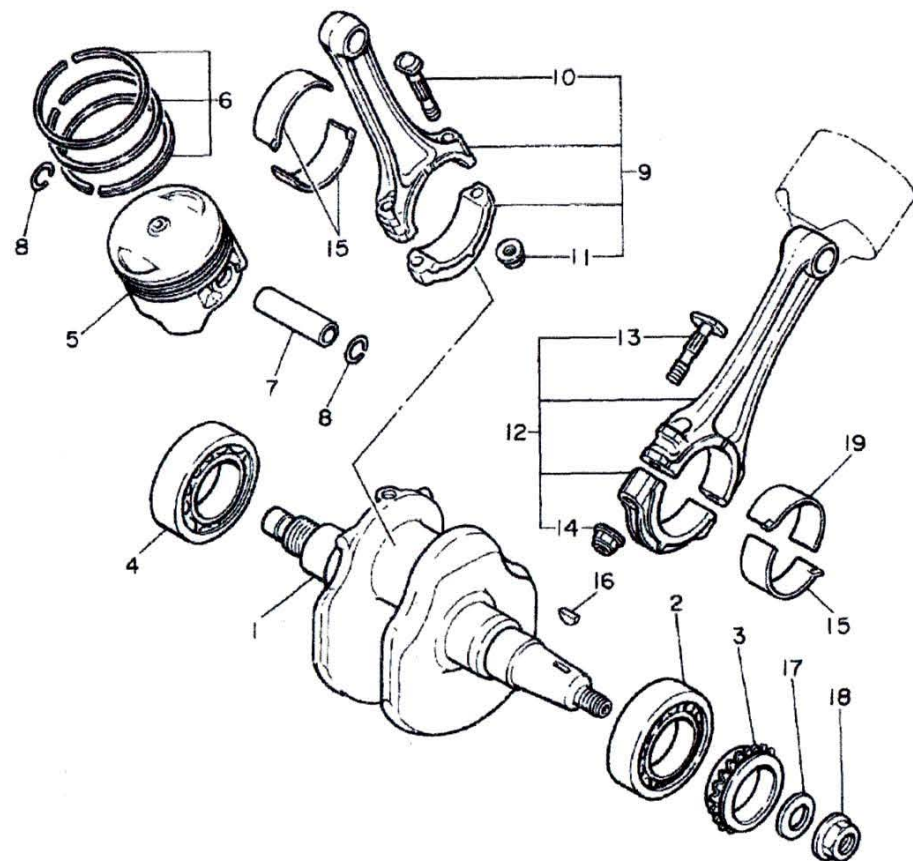


FIG. 3 CRANKSHAFT-PISTON


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
16	90280-05013	KEY, woodruff	1	
17	90201-14226	WASHER, Plate	1	
18	90179-14317	NUT	1	
19	5G5-11656-00	PLANE BEARING, connecting rod	1	UR black
	5G5-11656-10	PLANE BEARING, connecting rod	1	UR brown
	5G5-11656-20	PLANE BEARING, connecting rod	1	UR green

CONNECTING ROD BEARING SELECTION

Housing No. - Shaft No. = Bearing No.

BEARING No.	PART No.	COLOUR
BEARING 1	4X7-11656-00	BLUE
BEARING 2	4X7-11656-10	BLACK
BEARING 3	4X7-11656-20	BROWN
BEARING 4	4X7-11656-30	GREEN
BEARING 5	4X7-11650-40	YELLOW

FIG. 4 CAMSHAFT.CHAIN

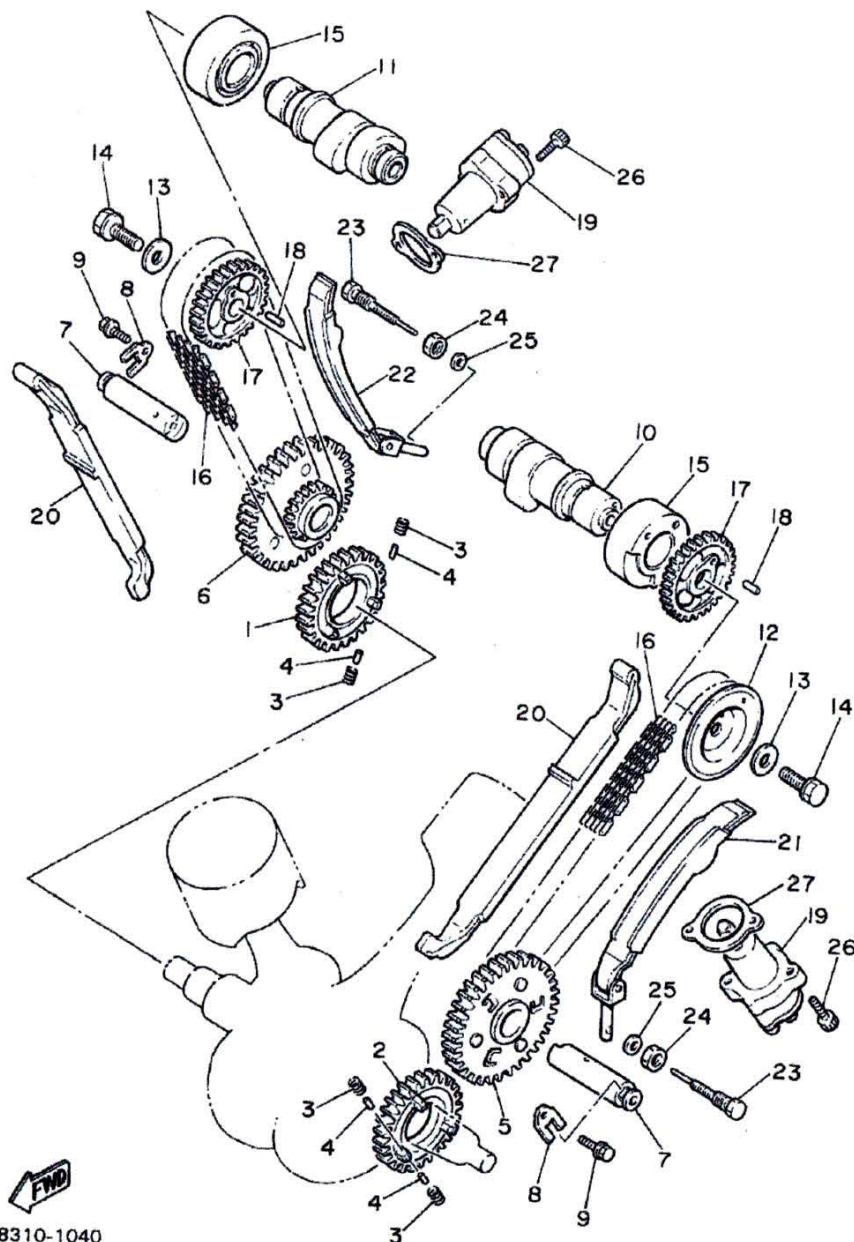


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4X7-11536-00	GEAR, drive (35T)	1	
2	4X7-11534-00	GEAR, breaker drive (35T)	1	
3	90501-21133	SPRING, compression	12	
4	93605-10090	PIN, dowel	12	
5	4X7-11540-01	CAM CHAIN SPROCKET ASSY (20/50T)	1	
6	4X7-11550-00	CAM CHAIN SPROCKET ASSY (20/50T)	1	
7	4X7-12247-01	SHAFT, tensioner	2	
8	90209-06205	WASHER	2	
9	90105-06154	BOLT, washer based	2	
10	4X7-12171-00	CAMSHAFT 1	1	
11	4X7-12181-00	CAMSHAFT 2	1	
12	4X7-11145-00	PLATE, breather 2	1	
13	90201-10591	WASHER, Plate	2	
14	90101-10303	BOLT	2	
15	90380-25081	BUSH, solid	2	
16	94590-27098	CHAIN	2	
17	4X7-12176-00	SPROCKET, cam chain (28T)	2	
18	93604-10011	PIN, dowel	2	
19	5A8-12210-01	TENSIONER ASSY, cam chain	2	
20	4X7-12231-00	GUIDE, stopPer 1	2	
21	4X7-12241-00	GUIDE, stopPer 2	1	
22	4X7-12221-00	GUIDE, stopPer 3	1	
23	90109-08592	BOLT	2	
24	95301-08700	NUT	2	
25	92901-06600	WASHER, Plate	2	
26	91316-06025	BOLT	4	
27	4X7-12213-00	GASKET, tensioner case	2	

5A8310-1040

B7

FIG. 5 VALVE

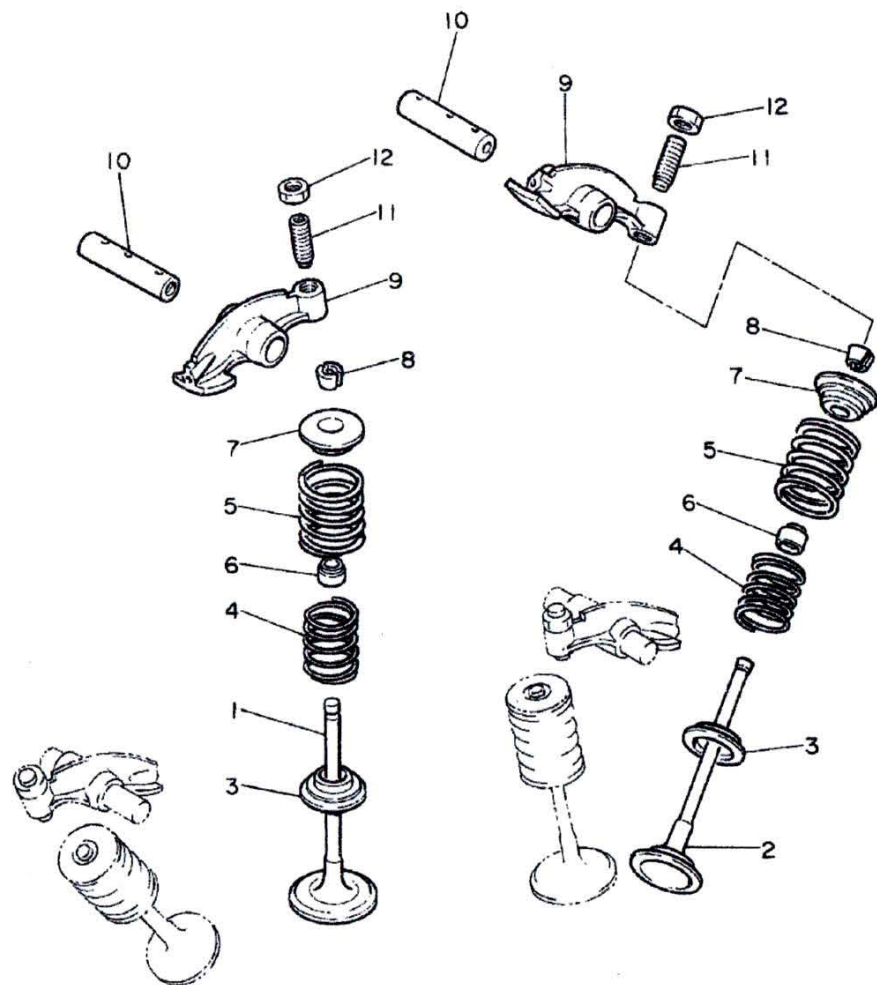


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2J2-12111-01	VALVE, intake	2	
2	5A8-12121-00	VALVE, exhaust	2	
3	4X7-12116-00	SEAT, valve sPring	4	
4	90501-31454	SPRING, comPression	4	
5	90501-44455	SPRING, comPression	4	
6	341-12119-02	SEAL, valve stem	4	
7	4X7-12117-00	RETAINER, valve sPring	4	
8	4X7-12118-00	COTTER, valve	8	
9	4X7-12151-00	ARM, valve rocker	4	
10	4X7-12156-00	SHAFT, rocker 2	4	
11	4X7-12159-00	SCREW, valve adjusting	4	
12	90170-08173	NUT	4	



5E3171-1050

FIG. 6 OIL PUMP

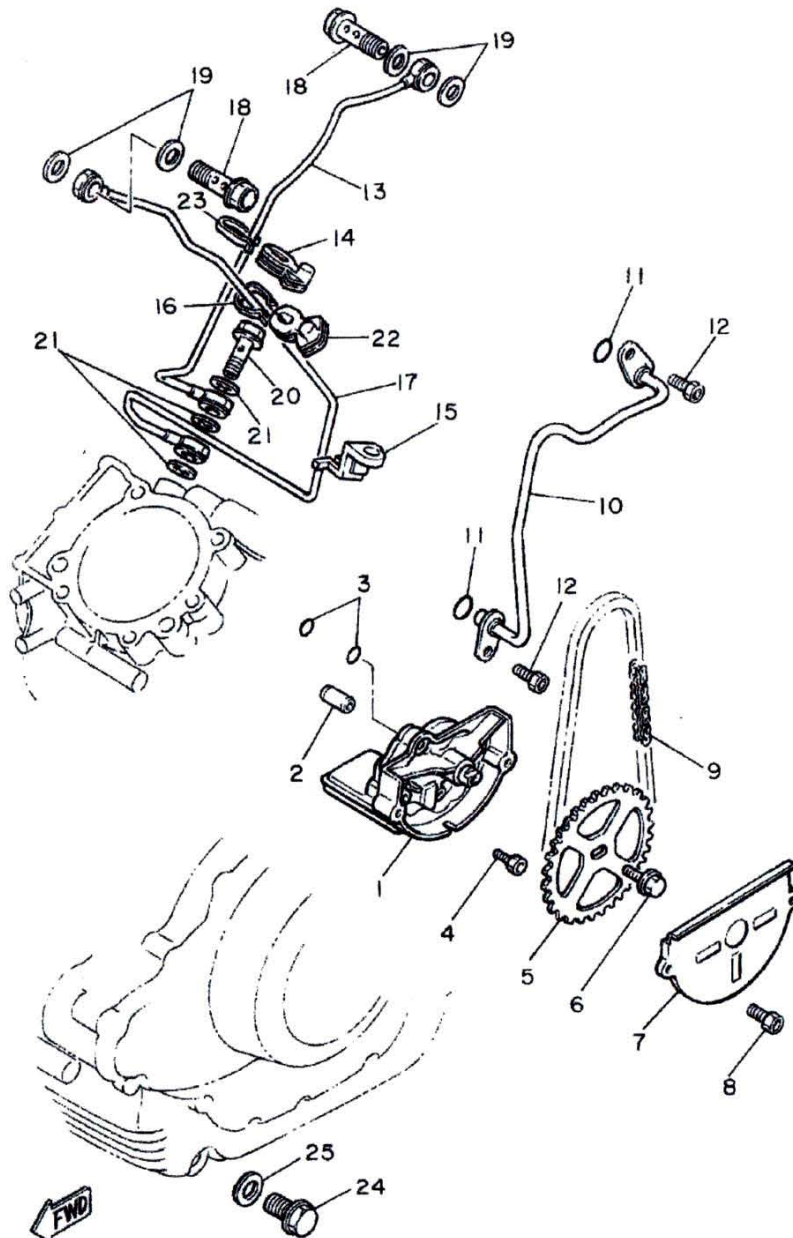

10L110-2060

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	10L-13300-00	OIL PUMP ASSY	1	
2	91810-18016	PIN, dowel	1	
3	93210-07155	O-RING	2	
4	91316-06040	BOLT	3	
5	4X7-13355-00	SPROCKET, driven (35T)	1	
6	90105-06154	BOLT, washer based	1	
7	10L-13327-00	COVER, Pump gear	1	
8	91316-06010	BOLT	2	
9	94580-25066	CHAIN	1	
10	4X7-13171-00	PIPE, delivery 2	1	
11	93210-07155	O-RING	2	
12	91316-06010	BOLT	2	
13	4X7-13405-00	OIL PIPE COMP. 1	1	
14	4X7-15485-01	CLAMP	1	
15	4X7-15484-00	CLAMP 2	1	
16	90468-05113	CLIP	1	
17	4X7-13406-00	OIL PIPE COMP. 2	1	
18	90401-16071	BOLT, union	2	
19	90430-17168	GASKET	4	
20	90401-10066	BOLT, union	1	
21	90430-15169	GASKET	3	
22	4X7-15485-01	CLAMP	1	
23	90468-05113	CLIP	1	
24	90340-14042	PLUG, straight screw	1	
25	214-11198-01	GASKET	1	

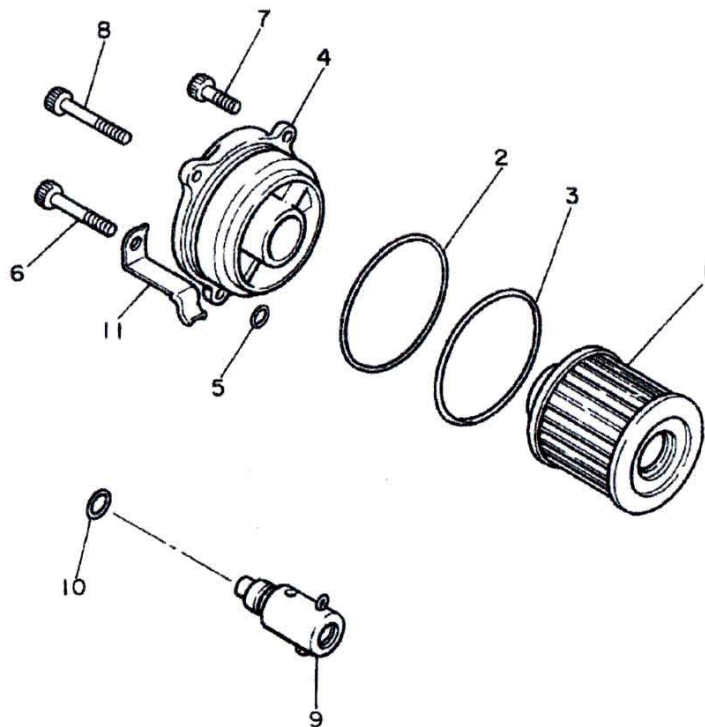



FIG. 7 OIL CLEANER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4X7-13440-90	ELEMENT ASSY, oil cleaner	1	
2	93210-58346	O-RING	1	
3	93210-54452	O-RING	1	
4	4X7-13447-00	COVER, oil element	1	
5	93210-07135	O-RING	1	
6	90109-06667	BOLT	1	
7	91311-06020	BOLT	1	
8	91311-06050	BOLT	1	
9	4G0-13490-01	RELIEF VALVE ASSY	1	
10	93210-10096	O-RING	1	
11	90462-10098	CLAMP	1	



5E3171-1070


FIG. 8 INTAKE

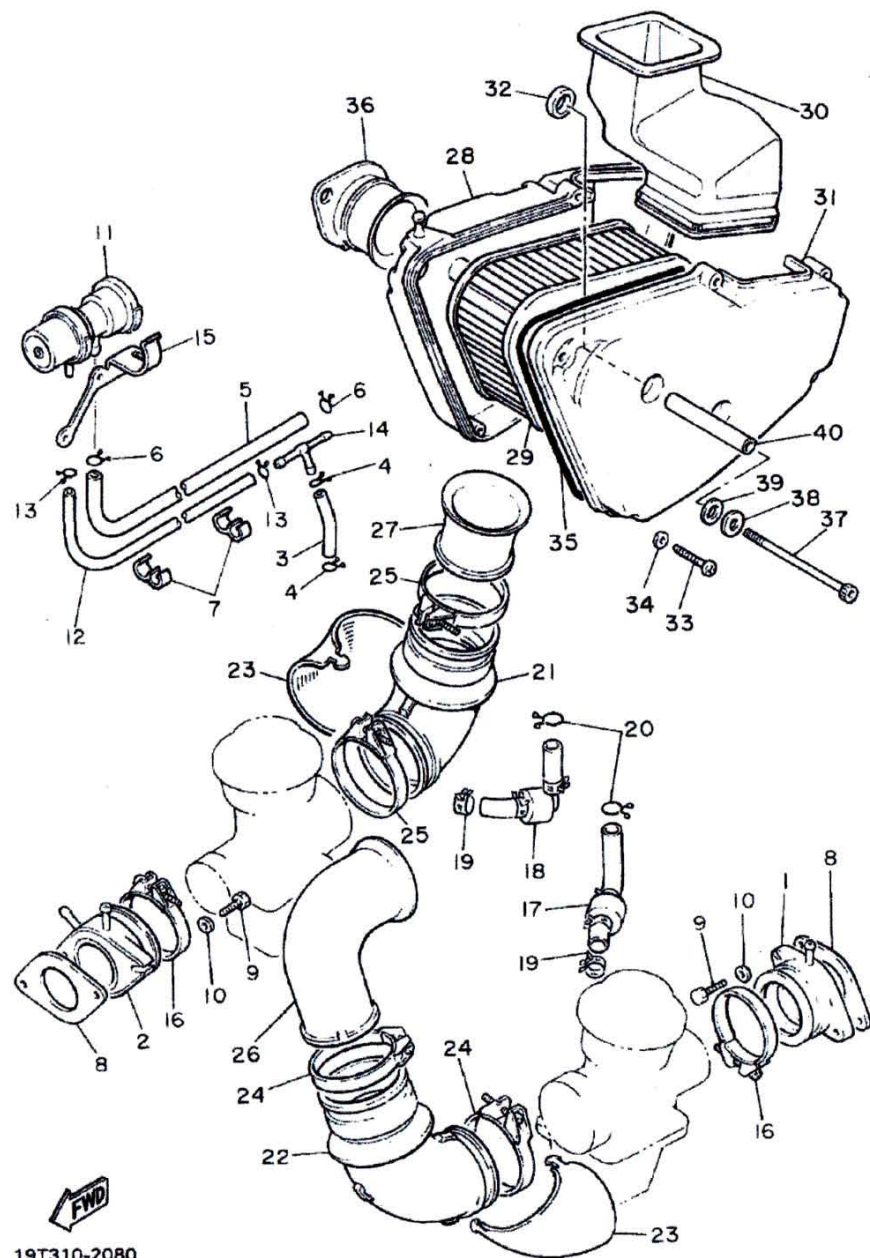

19T310-2080

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4X7-13586-01	JOINT, carburetor 1	1	
2	4X7-13596-00	JOINT, carburetor 2	1	
3	4X7-13544-00	HOSE, vacuum sensing 2	1	
4	90467-08003	CLIP	2	
5	4X7-13543-01	HOSE, air	1	
6	90467-10008	CLIP	2	
7	90468-02111	CLIP	2	
8	4X7-13556-00	GASKET, manifold	2	
9	97322-06020	BOLT	4	
10	92902-06600	WASHER	4	
11	4X7-13541-00	VALVE, mixture control	1	
12	4X7-13542-00	HOSE, vacuum sensing 1	1	
13	90467-07029	CLIP	2	
14	4X7-13595-00	JOINT	1	
15	90462-08093	CLAMP	1	
16	90460-58204	CLAMP, hose	2	
17	4X7-14197-02	PIPE	1	
18	4X7-14987-02	HOSE	1	
19	90467-14057	CLIP	2	
20	90467-14015	CLIP	2	
21	10L-14453-00	JOINT, air cleaner 1	1	
22	11K-14463-00	JOINT, air cleaner 2	1	
23	10L-14407-00	COVER, Joint	2	
24	90460-65195	CLAMP, hose	2	
25	90460-65195	CLAMP, hose	2	
26	4X7-14469-00	FUNNEL, air	1	
27	4X7-14479-00	FUNNEL	1	
28	4X7-14401-00	AIR CLEANER CASE ASSY	1	


FIG. 8 INTAKE

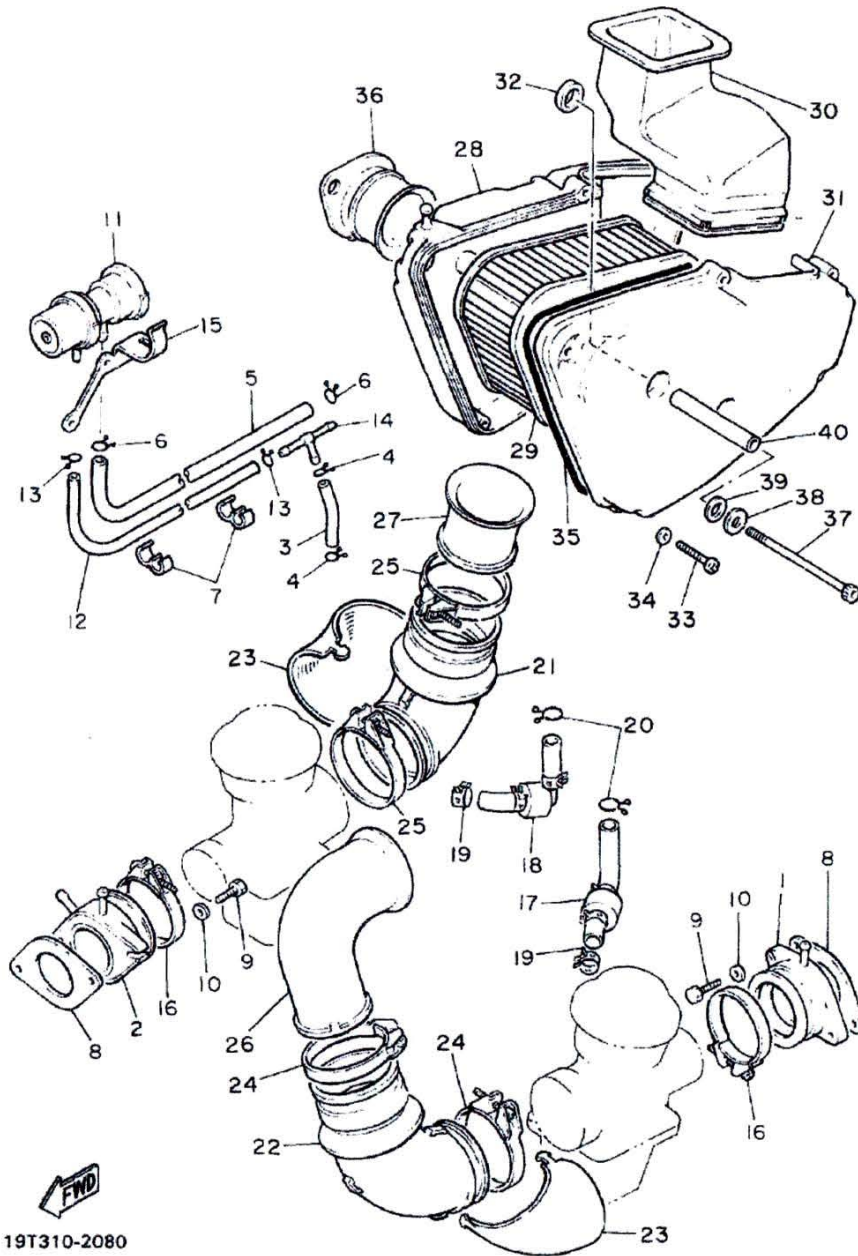

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4X7-14451-00	ELEMENT, air cleaner	1	
30	5A8-14437-00	DUCT	1	
31	4X7-14422-00	CAP, cleaner case 2	1	
32	4X7-14457-00	SEAL	2	
33	98502-05030	SCREW, Pan head	5	
34	92901-05600	WASHER, Plate	5	
35	4X7-14452-00	SEAL	1	
36	4X7-1441J-00	PIPE, silencer	1	
37	91312-06100	BOLT	2	
38	90201-06008	WASHER, Plate	2	
39	90202-10120	WASHER, Plate	2	
40	90560-06203	SPACER	2	

19T310-2080


FIG. 9 CARBURETOR

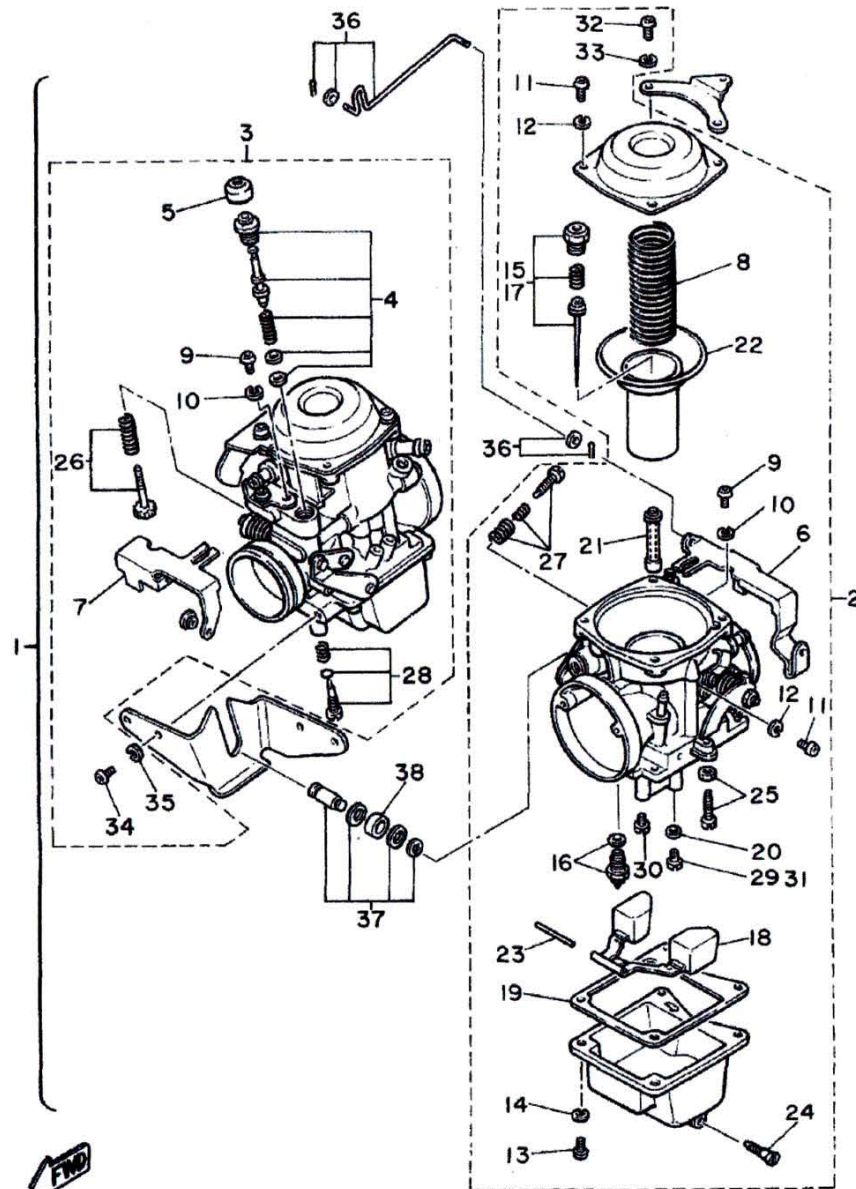

5A8310-1090


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-14900-00	CARBURETOR ASSY	1	
2	5A8-14901-00	..CARBURETOR ASSY 1	1	
3	5A8-14902-00	..CARBURETOR ASSY 2	1	
4	4X7-14371-01	..STARTER PLUNGER KIT	2	
5	4H7-14173-00	..COVER, Plunger cap	2	
6	4X7-14975-00	..LEVER, starter 1	1	
7	4X7-14976-00	..LEVER, starter 2	1	
8	4X7-14933-10	..SPRING, diaphragm 2	2	
9	98501-04008	..SCREW, Pan head	4	
10	92901-04100	..WASHER, spring	4	
11	98501-05010	..SCREW, Pan head	5	
12	92901-05100	..WASHER, spring	5	
13	98501-05016	..SCREW, Pan head	8	
14	92901-05100	..WASHER, spring	8	
15	4X7-14916-20	..NEEDLE	1	
16	4X7-14390-00	..NEEDLE VALVE ASSY	2	
17	4X7-14916-21	..NEEDLE	1	
18	4X7-14985-00	..FLOAT	2	
19	4X7-14984-00	..GASKET, float chamber	2	
20	4H7-14945-00	..WASHER, main Jet	2	
21	4X7-14921-07	..NOZZLE, main	2	
22	4X7-14940-01	..DIAPHRAGM ASSY	2	
23	4X7-14186-00	..PIN, float	2	
24	4X7-14191-01	..PLUG, drain	2	
25	4X7-14321-01	..THROTTLE SCREW WITH SPRING 2	1	
26	4X7-14121-00	..THROTTLE SCREW WITH SPRING 1	1	
27	4X7-14522-00	..ADJUST SCREW SET	1	
28	4X7-14211-01	..SCREW, Pilot adjusting	2	

FIG. 9 CARBURETOR

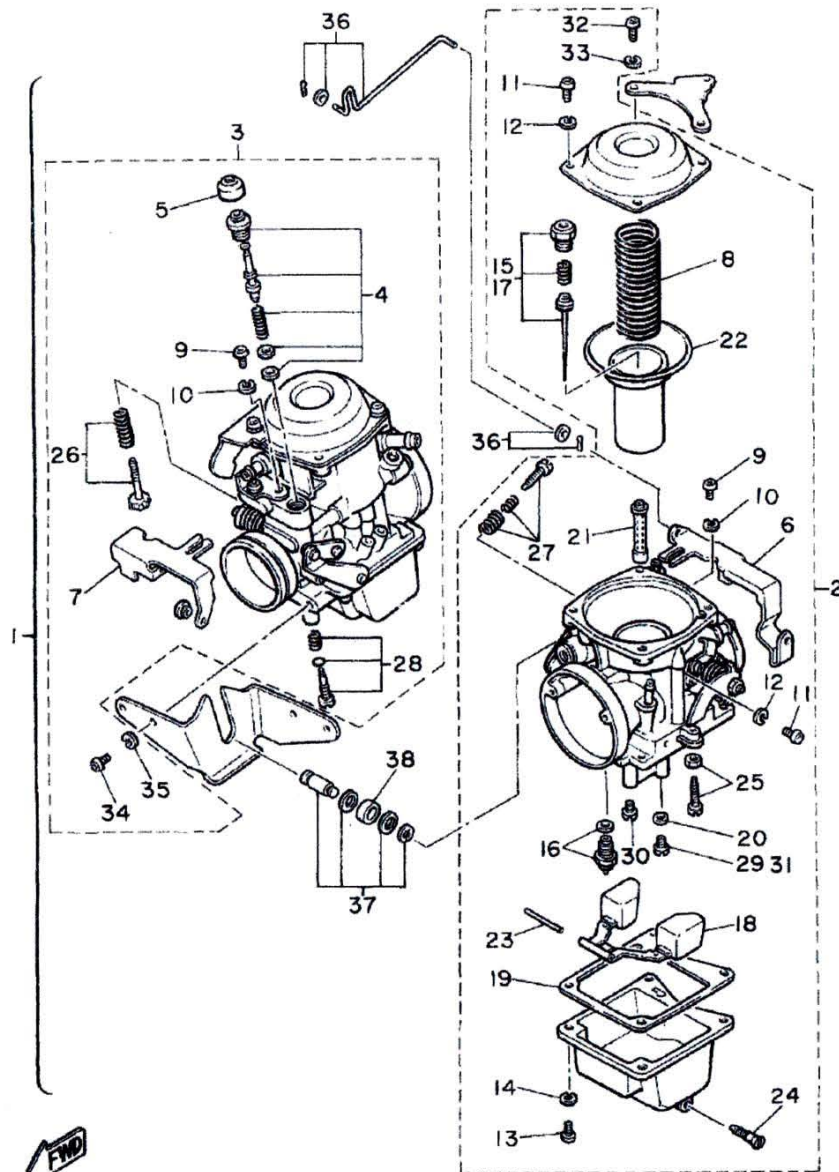

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4X7-14925-26	••JET, main 1 (#126)	1	
30	4X7-14948-43	••JET	2	
31	4X7-14925-24	••JET, main 2 (#124)	1	
32	98501-05012	••SCREW, Pan head	4	
33	92901-05100	••WASHER, sPring	4	
34	92501-06014	••SCREW, Pan head	4	
35	92901-06100	••WASHER, sPring	4	
36	4X7-14188-00	•CONNECTOR SET	4	
37	4X7-14962-00	•WASHER SET	4	
38	4X7-14267-00	•ROLLER	4	

5A8310-1090

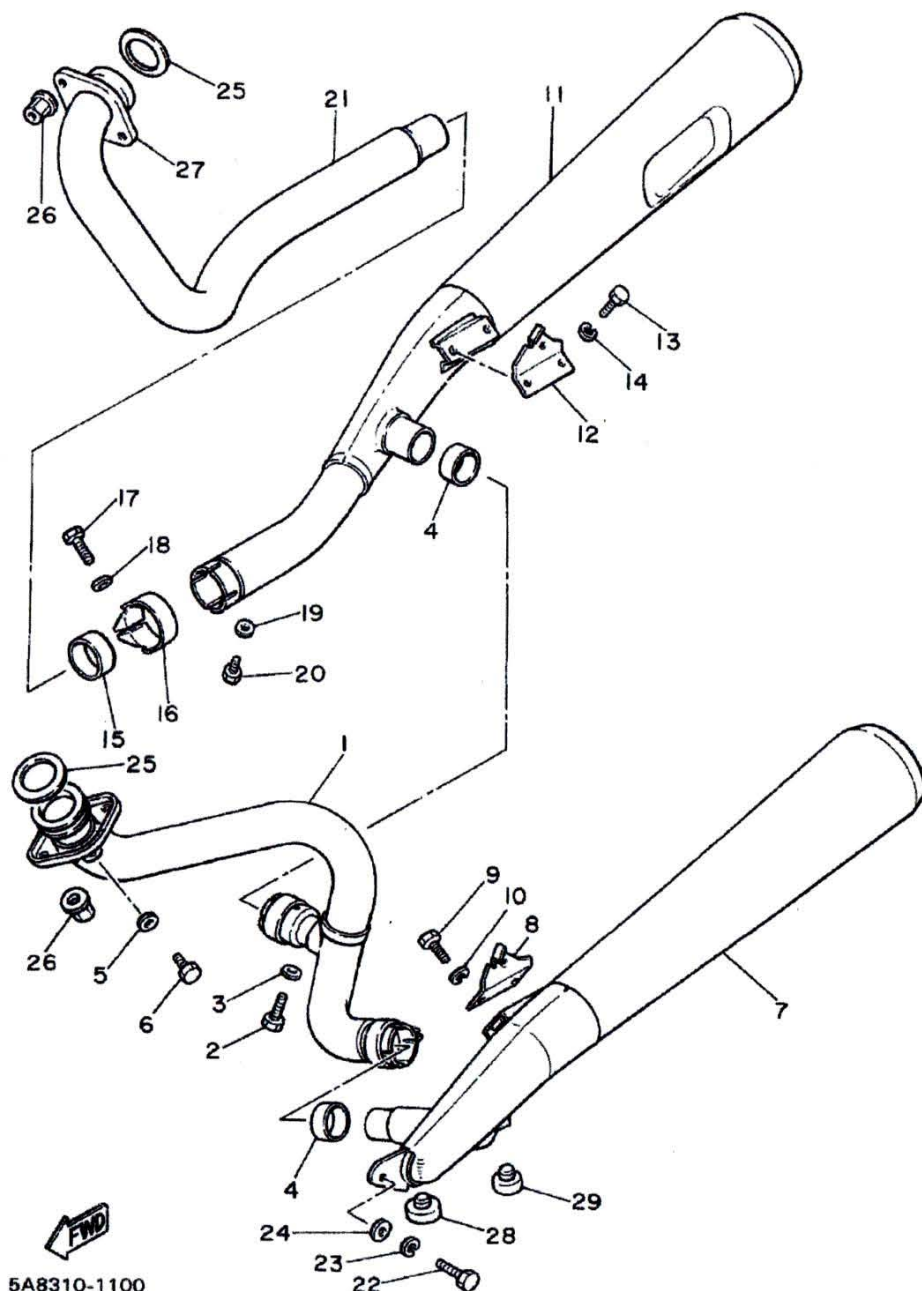


5A8310-1100

FIG. 10 EXHAUST


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-14611-00	PIPE, exhaust 1	1	
2	97311-08025	BOLT	2	
3	92901-08600	WASHER, Plate	2	
4	2G2-14714-00	GASKET, muffler	2	
5	92903-06600	WASHER, Plate	1	
6	91316-06012	BOLT	1	
7	5A8-14711-01	MUFFLER 1	1	
8	5A8-14771-00	STAY, muffler 1	1	
9	97321-08016	BOLT	2	
10	92901-08100	WASHER, sPring	2	
11	5A8-14721-01	MUFFLER 2	1	
12	5A8-14781-00	STAY, muffler 2	1	
13	97321-08016	BOLT	2	
14	92901-08100	WASHER, sPring	2	
15	1J7-14714-00	GASKET, muffler	1	
16	2H9-14725-00	BAND, muffler	1	
17	97311-08025	BOLT	1	
18	92901-08600	WASHER, Plate	1	
19	92903-06600	WASHER, Plate	1	
20	91316-06012	BOLT	1	
21	4X7-14621-00	PIPE, exhaust 2	1	
22	97321-08030	BOLT	1	
23	92901-08100	WASHER, sPring	1	
24	92901-08600	WASHER, Plate	1	
25	4X7-14613-00	GASKET, exhaust Pipe	2	
26	90179-08210	NUT	4	
27	4X7-14612-00	NUT, ring	1	
28	4X4-27114-00	STOPPER, main stand	1	

FIG. 10 EXHAUST

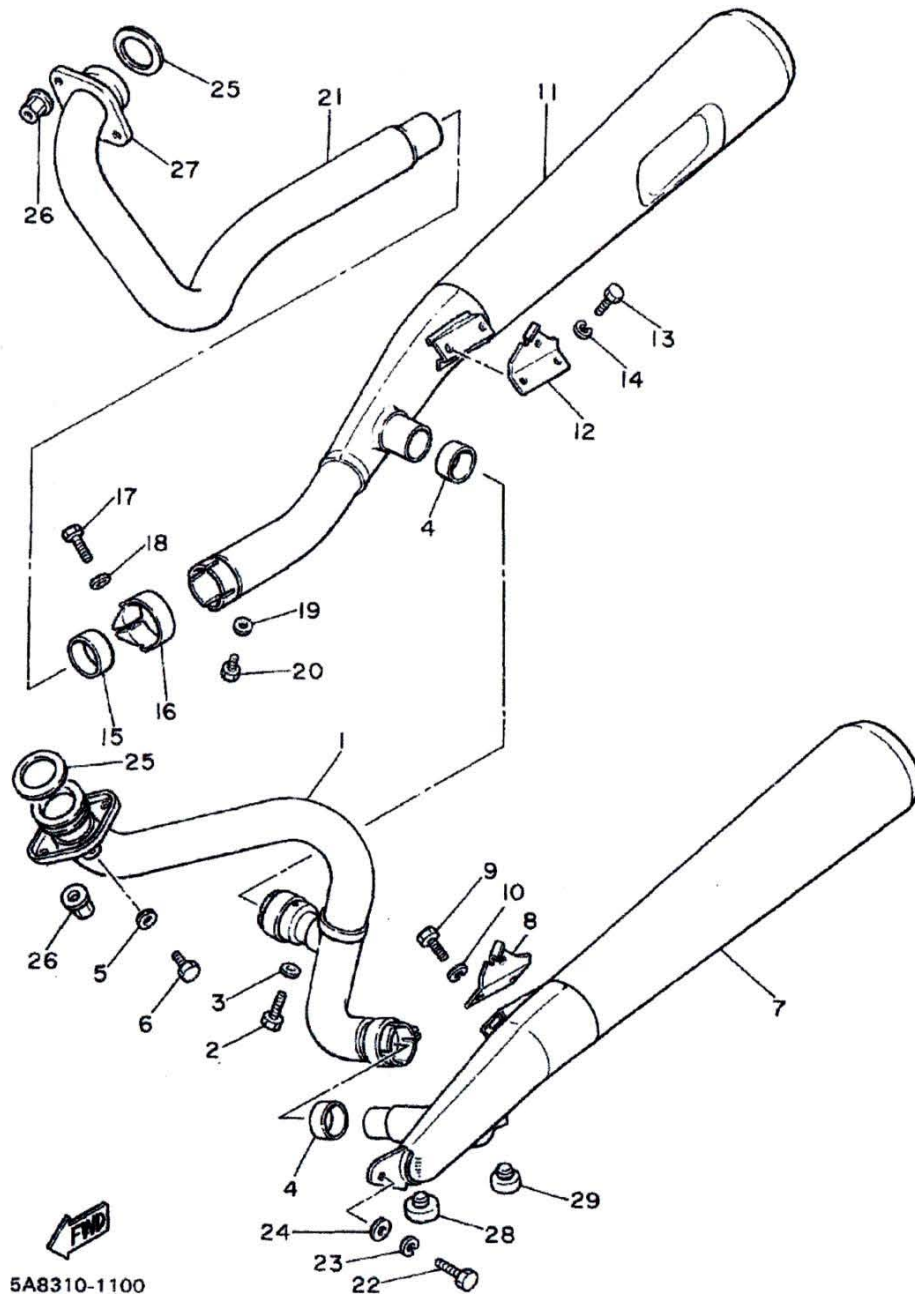

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	371-27114-00	STOPPER, main stand	1	


FIG. 11 CRANKCASE

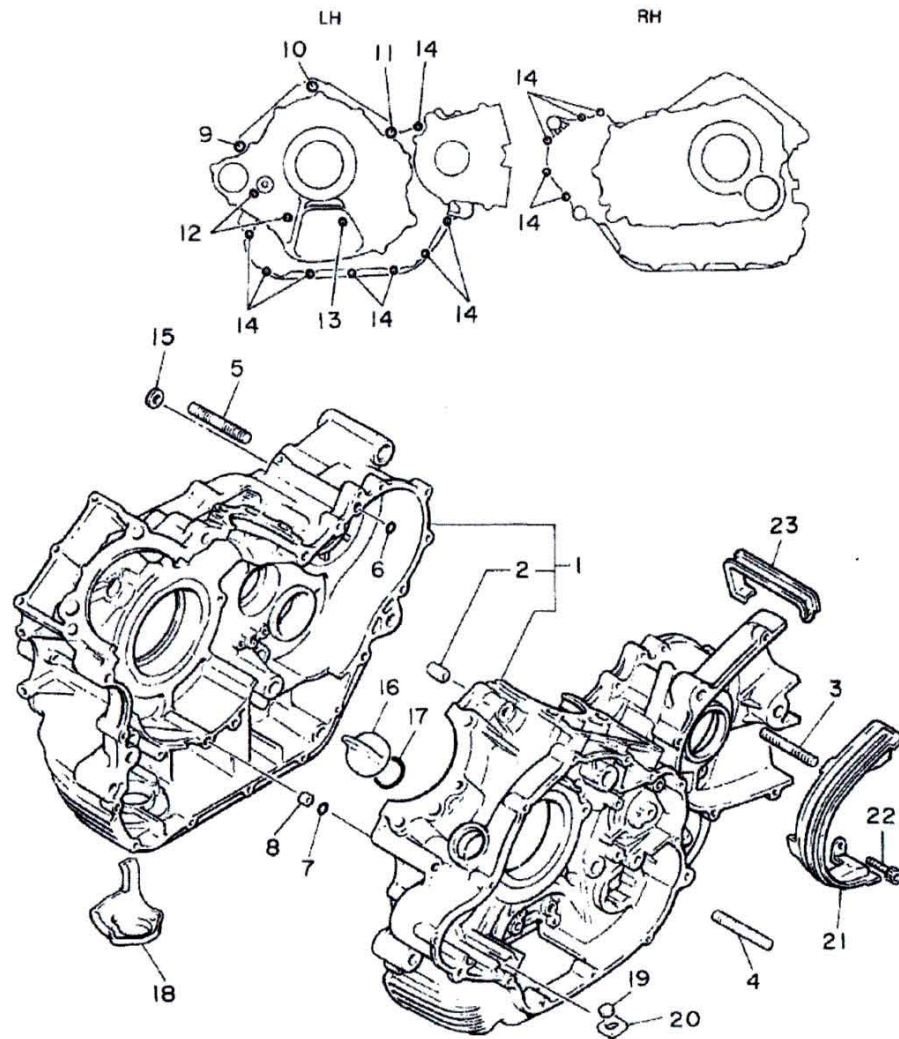

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-15100-02	CRANKCASE ASSY	1	
2	91830-24016	.PIN, dowel	3	
3	95611-10650	BOLT, stud	1	
4	95611-10630	BOLT, stud	1	
5	95611-10635	BOLT, stud	1	
6	93210-07155	O-RING	1	
7	93210-07135	O-RING	1	
8	90387-064E8	COLLAR	1	
9	91311-10100	BOLT	1	
10	91311-10070	BOLT	1	
11	91311-10060	BOLT	1	
12	91311-06080	BOLT	2	
13	91311-06055	BOLT	1	
14	91311-06030	BOLT	13	
15	90430-06014	GASKET	1	
16	4X7-15363-00	PLUG, oil	1	
17	93210-29198	O-RING	1	
18	4X7-15491-00	PROTECTOR	1	
19	4X7-13419-00	PLUG	1	
20	90480-20302	GROMMET	1	
21	5A8-15493-01	PROTECTOR	1	
22	91316-06016	BOLT	4	
23	90465-08171	CLAMP	1	



19T310-2110

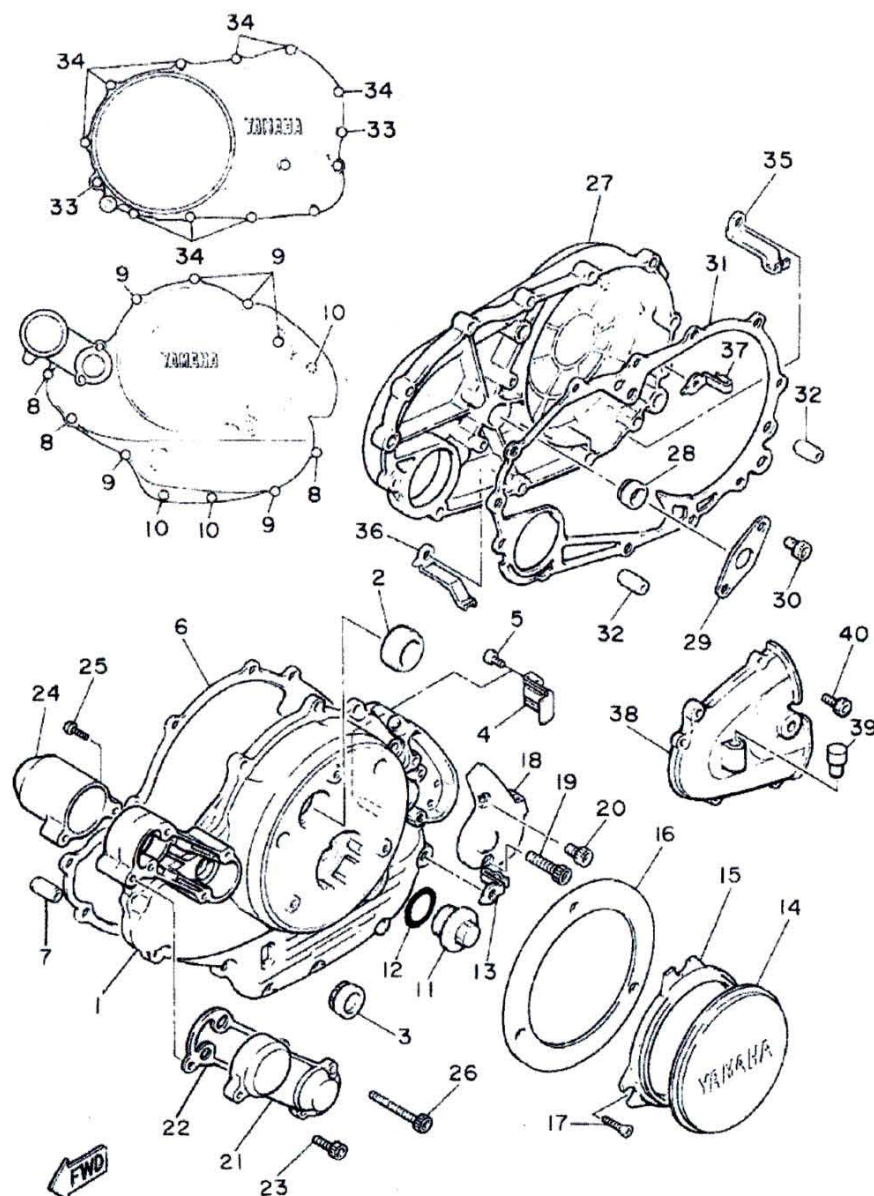


19T310-2120

FIG. 12 CRANKCASE COVER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-15411-00	COVER, crankcase 1	1	
2	4X7-15361-00	GAUGE, level	1	
3	2H7-15361-00	GAUGE, level	1	
4	90462-08073	CLAMP	1	
5	92501-06010	SCREW, Pan head	1	
6	4X7-15451-00	GASKET, crankcase cover	1	
7	91830-21014	PIN, dowel	2	
8	91311-06040	BOLT	3	
9	91311-06030	BOLT	6	
10	91311-06020	BOLT	3	
11	1L9-11186-00	COVER, cylinder head side 2	1	
12	93210-32172	O-RING	1	
13	90462-08076	CLAMP	1	
14	4X7-15415-00	COVER, generator	1	
15	4X7-15455-00	GASKET 1	1	
16	4X7-15425-00	COVER, generator 2	1	
17	92603-06016	SCREW, oval head	3	
18	4X7-15417-00	COVER, cap	1	
19	91311-06055	BOLT	1	
20	91311-06016	BOLT	1	
21	5A8-15419-00	COVER, shifter 1	1	
22	5A8-15459-00	GASKET, shifter cover	1	
23	91311-06020	BOLT	2	
24	5A8-15429-00	COVER, shifter	1	
25	92501-06030	SCREW, Pan head	2	
26	91311-06070	BOLT	1	
27	4X7-15421-01	COVER, crankcase 2	1	
28	93101-14102	OIL SEAL	1	

FIG. 12 CRANKCASE COVER

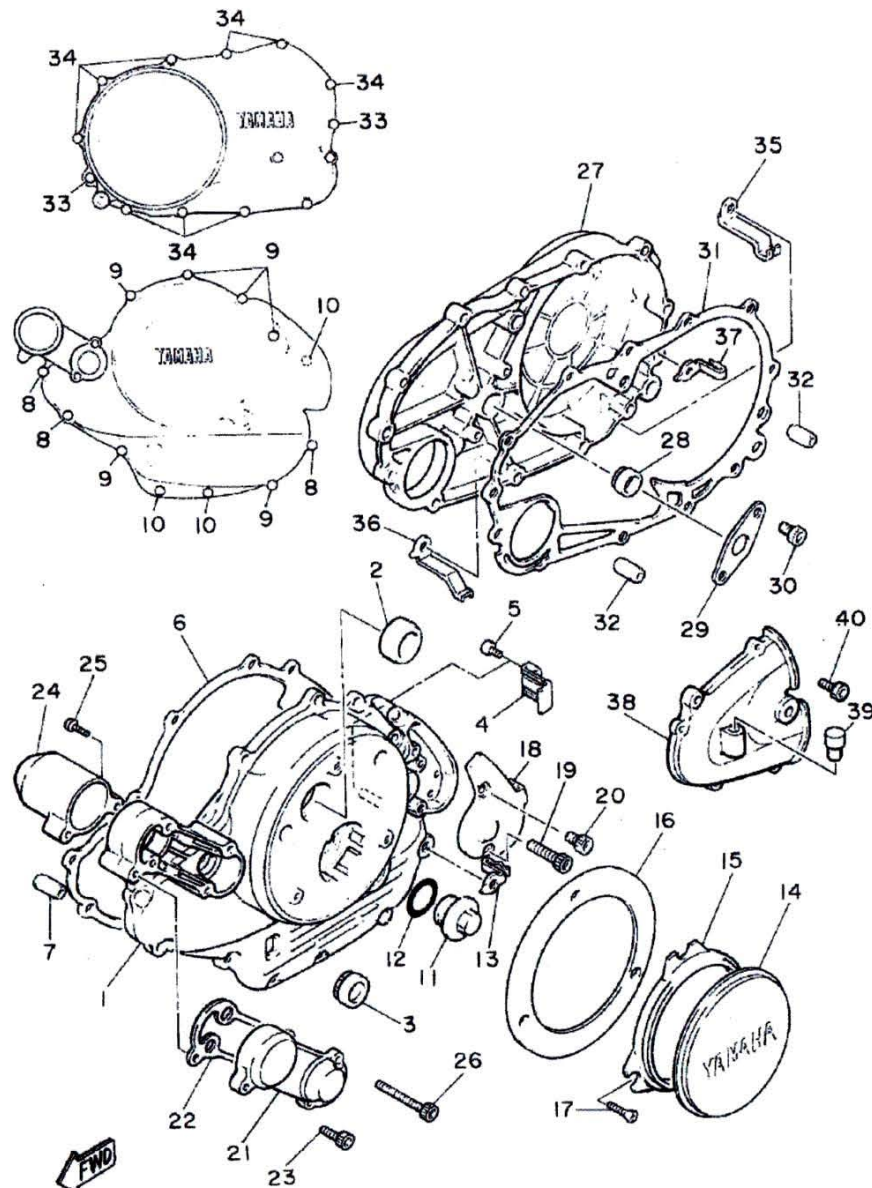

19T310-2120

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4X7-15388-00	PLATE, bearing cover	1	
30	91316-06016	BOLT	2	
31	4X7-15462-00	GASKET, crankcase cover 3	1	
32	91830-21020	PIN, dowel	2	
33	91311-06040	BOLT	2	
34	91311-06025	BOLT	9	
35	90462-08075	CLAMP	1	
36	90462-10085	CLAMP	2	
37	90462-08076	CLAMP	1	
38	5A8-15431-00	COVER, crankcase 3	1	
39	2H7-17590-00	BREATHER COMP.	1	
40	91311-06020	BOLT	4	

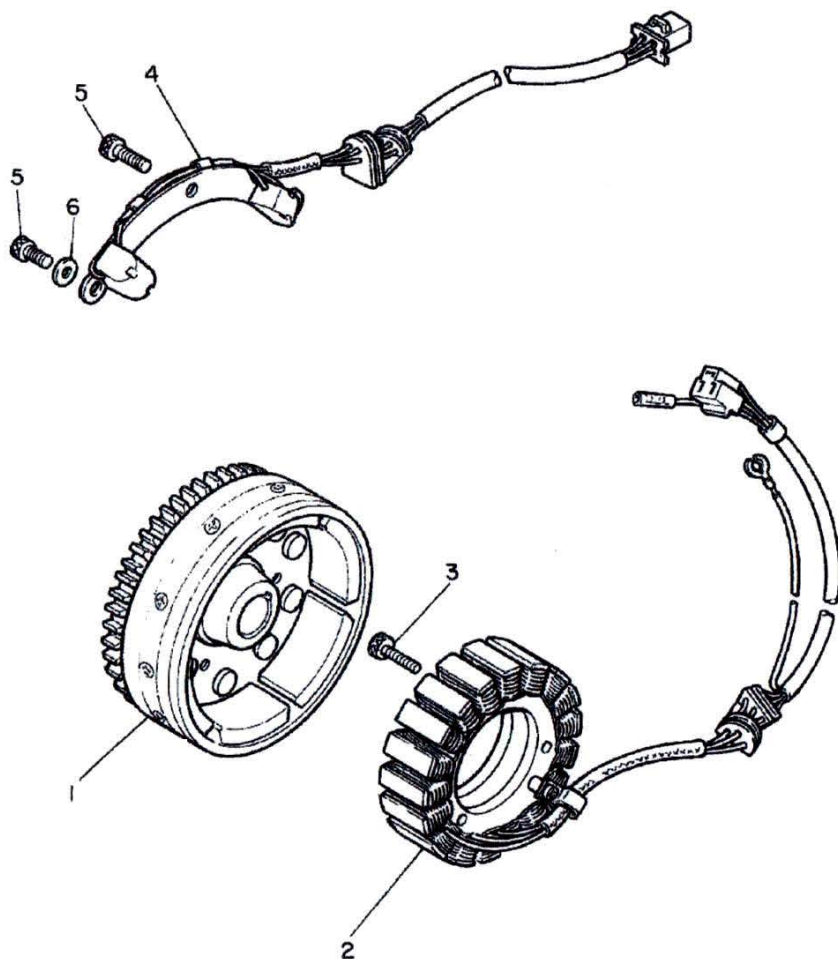



FIG. 13 A.C.GENERATOR

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4X7-81450-21	ROTOR ASSY	1	
2	4X7-81410-20	STATOR ASSY	1	
3	91316-06040	BOLT	3	
4	4X7-81670-20	PICK-UP ASSY	1	
5	91316-06016	BOLT	3	
6	90201-06674	WASHER, Plate	2	



4X7110-2130


FIG. 14 STARTING MOTOR

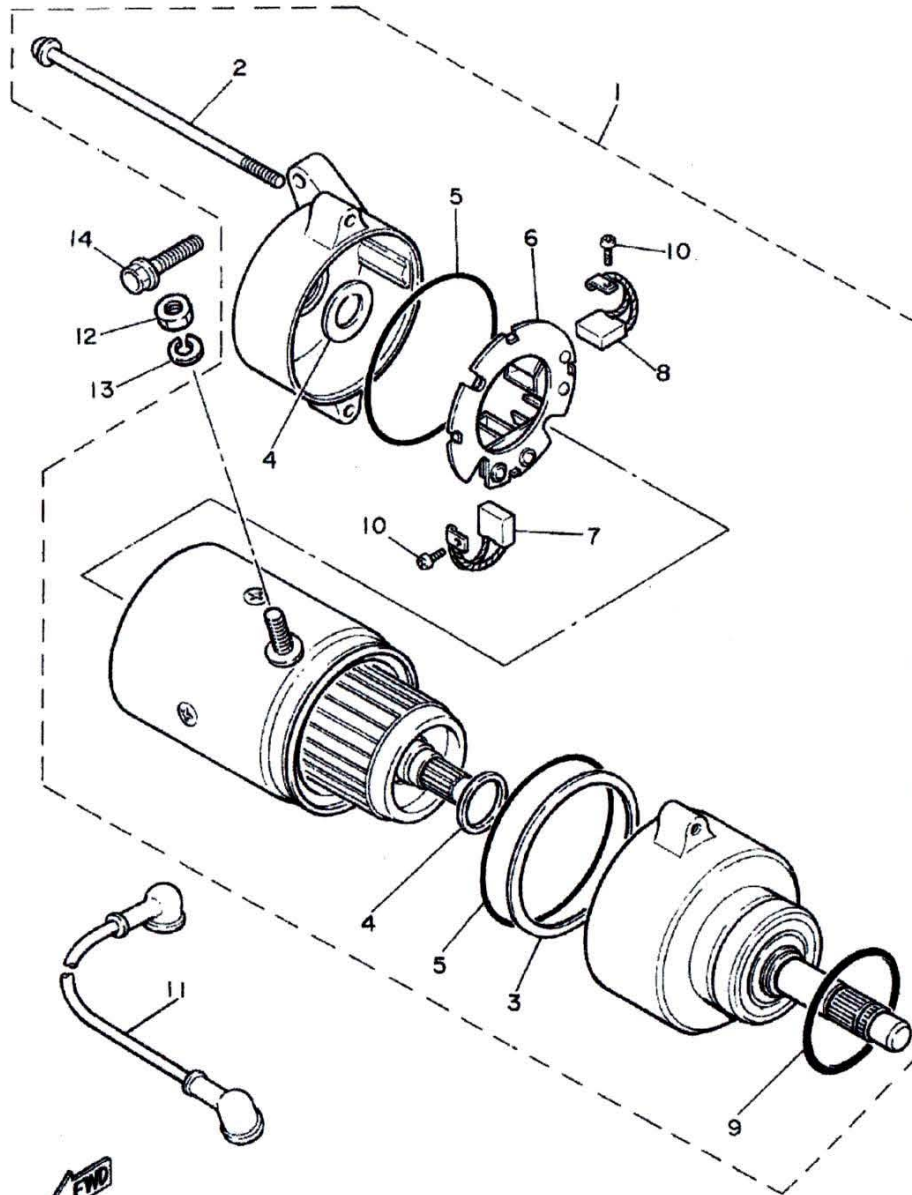

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-81800-60	STARTING MOTOR ASSY	1	
2	371-81826-20	•BOLT	1	
3	4X7-81844-60	•GASKET	1	
4	371-81809-20	•WASHER KIT	1	
5	371-81847-20	•O-RING	2	
6	1J7-81840-60	•BRUSH HOLDER ASSY	1	
7	371-81811-20	•BRUSH 1	1	
8	371-81812-20	•BRUSH 2	1	
9	1J7-81847-60	•O-RING	1	
10	98501-03008	•SCREW, Pan head	2	
11	5A8-81815-00	WIRE, starter	1	
12	95302-06700	NUT	1	
13	92902-06100	WASHER, spring	1	
14	95826-06025	BOLT, flange	2	

5A8310-1140


FIG. 15 STARTER CLUTCH

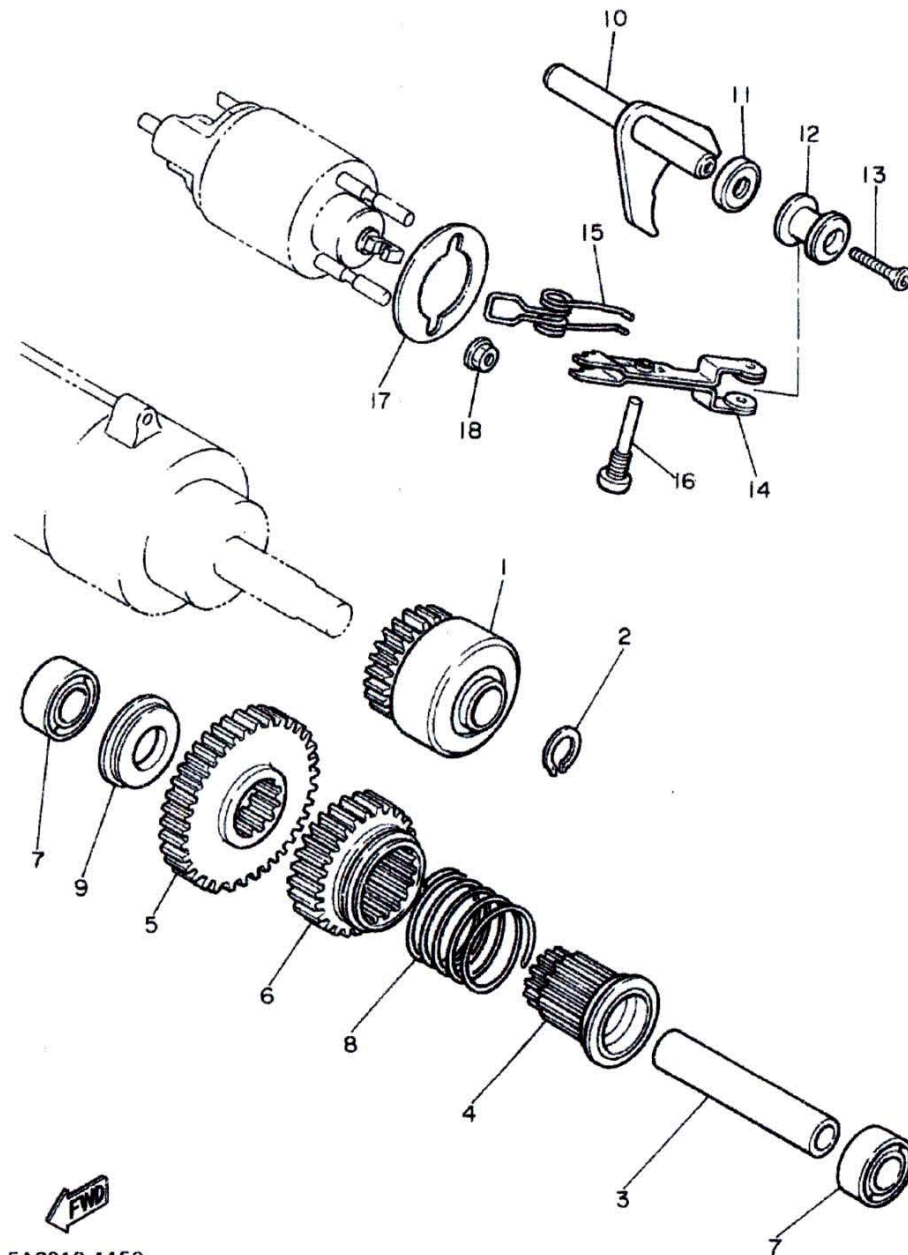


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-15570-00	STARTER CLUTCH ASSY	1	
2	93410-13004	CIRCLIP	1	
3	4X7-15521-00	SHAFT 1	1	
4	5A8-15524-00	WHEEL, starter (23T)	1	
5	4X7-15512-00	GEAR, idler 1 (35T)	1	
6	5A8-15517-00	GEAR, idler 2 (27T)	1	
7	90387-172E5	COLLAR	2	
8	90501-15636	SPRING, compression	1	
9	90387-170E5	COLLAR	1	
10	5A8-15550-00	DRIVE LEVER ASSY	1	
11	93102-10247	OIL SEAL	1	
12	5A8-15542-00	COLLAR 2	1	
13	90151-06013	SCREW, countersunk	1	
14	5A8-15556-00	LEVER, drive	1	
15	90508-26494	SPRING, torsion	1	
16	90149-08166	SCREW	1	
17	5A8-15568-00	GASKET	1	
18	90179-06337	NUT	2	

5A8310-1150

FIG. 16 CLUTCH

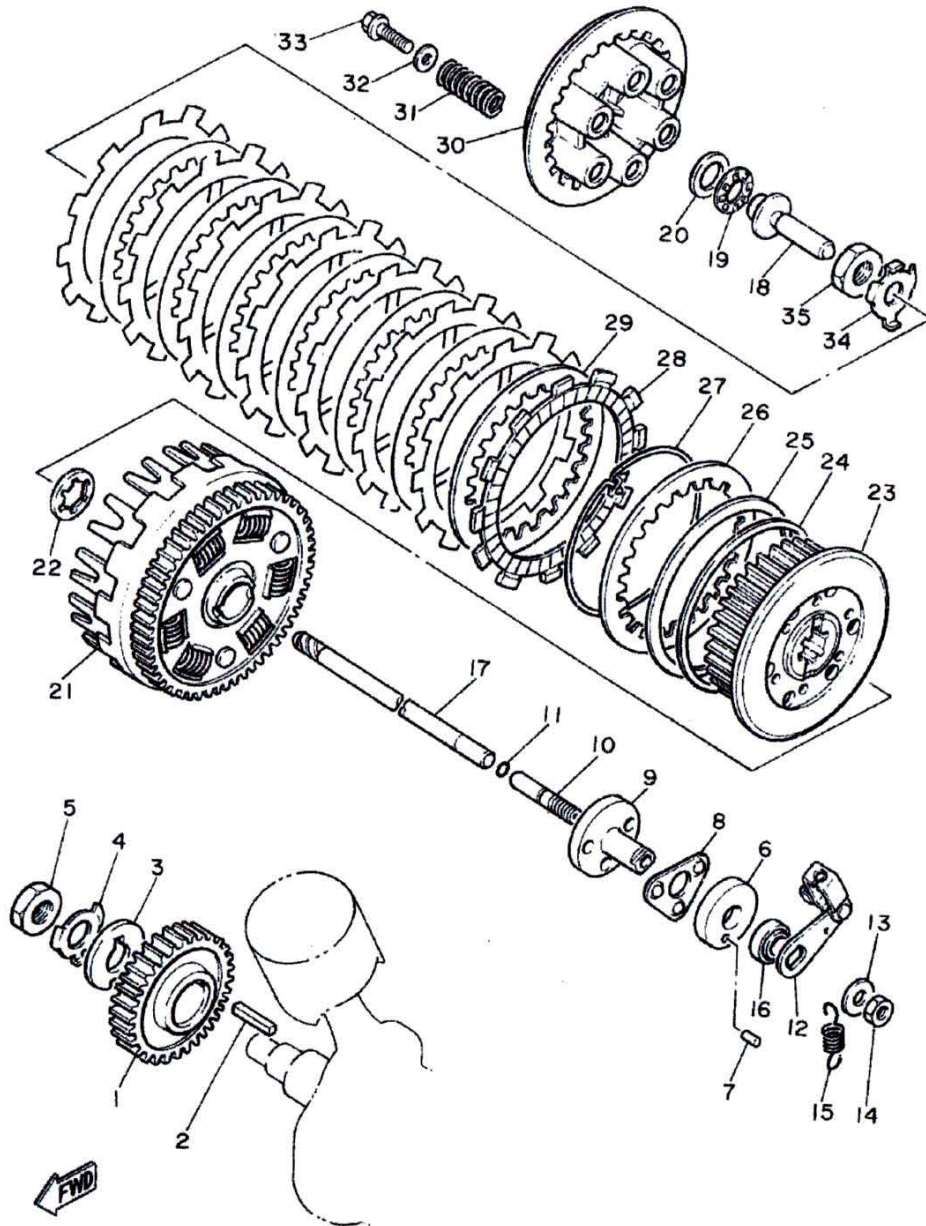

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4X7-16111-00	GEAR, Primary drive (47T)	1	
2	90282-07042	KEY, straight	1	
3	90214-20022	WASHER, claw	1	
4	90215-20182	WASHER, lock	1	
5	90170-20274	NUT	1	
6	2H7-16396-00	HOUSING, Push screw	1	
7	93606-07082	PIN, dowel	1	
8	2H7-16395-01	RETAINER, ball	1	
9	2H7-16341-00	SCREW, Push	1	
10	2H7-16343-00	SCREW, adjusting	1	
11	93210-48364	O-RING	1	
12	4X7-16340-00	PUSH LEVER ASSY	1	
13	92901-08200	WASHER, Plain	1	
14	95301-08700	NUT	1	
15	90506-10069	SPRING, tension	1	
16	93104-14059	OIL SEAL	1	
17	4X7-16357-00	ROD, Push 2	1	
18	4X7-16356-00	ROD, Push 1	1	
19	93340-21505	BEARING	1	
20	90201-151A7	WASHER, Plate	1	
21	4X7-16150-00	PRI. DRIVEN GEAR COMP. (78T)	1	
22	3Y1-16154-00	PLATE, thrust 1	1	
23	4X7-16371-00	BOSS, clutch	1	
24	4X7-16384-00	PLATE, seat	1	
25	4X7-16383-01	SPRING, clutch boss	1	
26	4X7-16324-00	PLATE, clutch 1	1	
27	4X7-16385-00	RING, clutch boss	1	
28	4X7-16321-00	PLATE, friction	8	

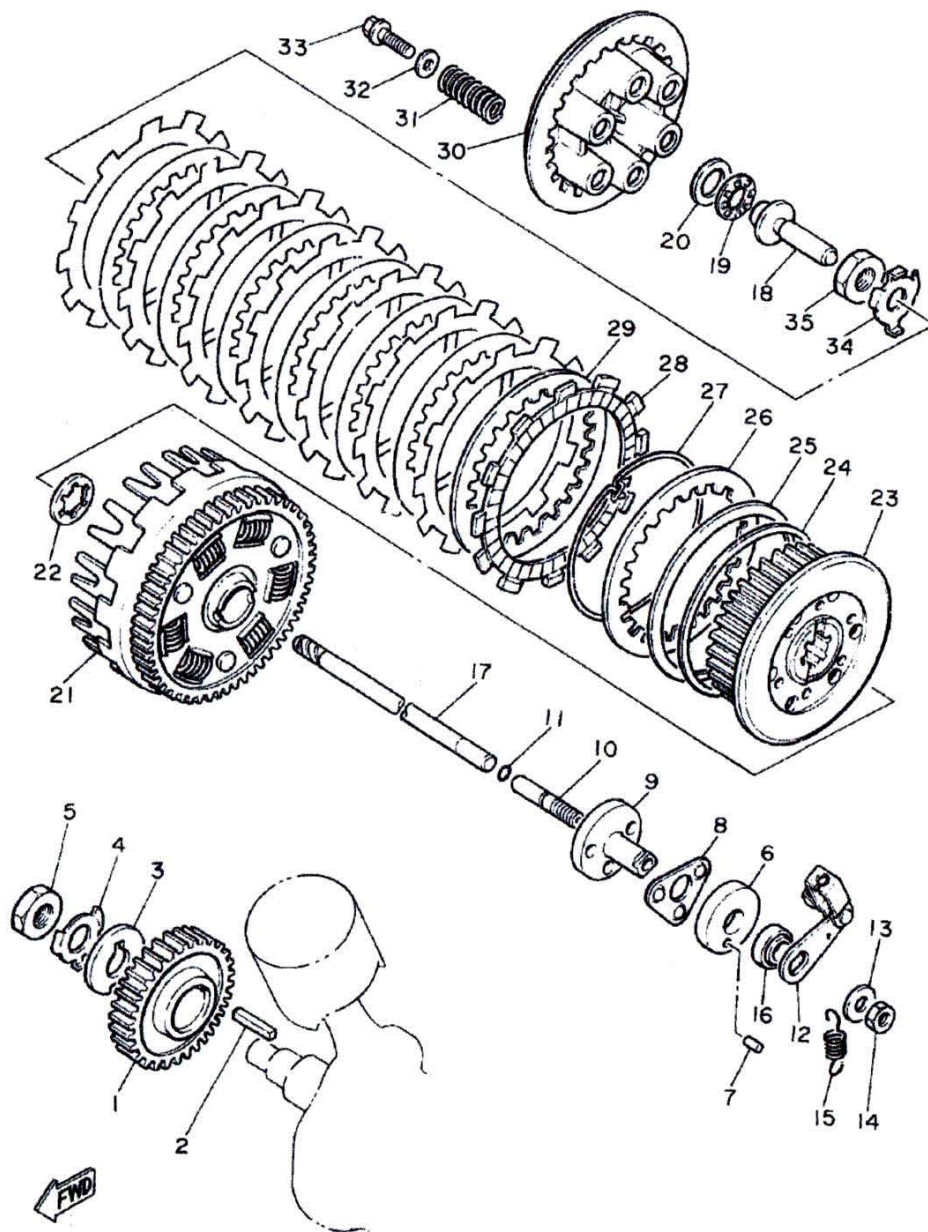


5E3171-1160

FIG. 16 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4X7-16325-00	PLATE, clutch 2	7	
30	4X7-16351-00	PLATE, Pressure 1	1	
31	90501-23391	SPRING, compression	6	
32	90201-061A5	WASHER, Plate	6	
33	95821-06025	BOLT, flange	6	
34	90215-20170	WASHER, lock	1	
35	90170-20257	NUT	1	


FIG. 17 TRANSMISSION

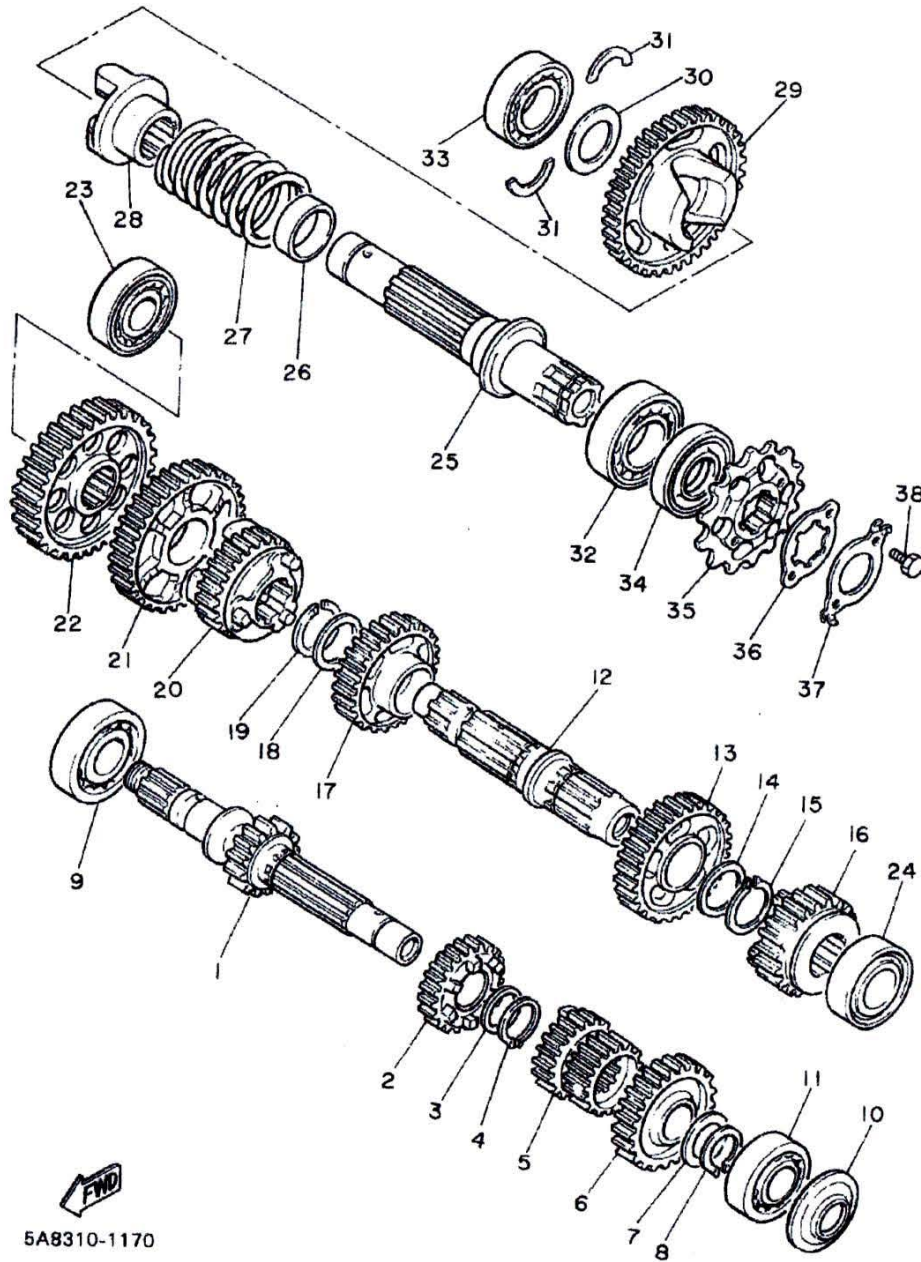

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4X7-17411-00	AXLE, main (17T)	1	
2	4X7-17141-00	GEAR, 4th Pinion (31T)	1	
3	90209-22191	WASHER	1	
4	93410-25010	CIRCLIP	1	
5	4X7-17121-00	GEAR, 2nd/3rd Pinion (24/28T)	1	
6	4X7-17151-01	GEAR, 5th Pinion (33T)	1	
7	90201-20278	WASHER, Plate	1	
8	93410-20009	CIRCLIP	1	
9	93306-30525	BEARING (B6305)	1	
10	93104-20068	OIL SEAL	1	
11	93306-30424	BEARING (B6304A3)	1	
12	4X7-17402-00	DRIVE AXLE ASSY	1	
13	4X7-17221-00	GEAR, 2nd wheel (40T)	1	
14	90209-27192	WASHER	1	
15	93440-30077	CIRCLIP	1	
16	4X7-17251-01	GEAR, 5th wheel (30T)	1	
17	4X7-17231-00	GEAR, 3rd wheel (36T)	1	
18	90209-27192	WASHER	1	
19	93440-30077	CIRCLIP	1	
20	4X7-17241-00	GEAR, 4th wheel (32T)	1	
21	4X7-17211-00	GEAR, 1st wheel (40T)	1	
22	5A8-17582-00	GEAR, middle drive	1	
23	93306-20401	BEARING (B6204)	1	
24	93306-20550	BEARING (B6205DU8)	1	
25	5A8-17431-01	AXLE, counter	1	
26	90387-296E0	COLLAR	1	
27	90501-75638	SPRING, compression	1	
28	5A8-17527-00	CAM, driven	1	

5A8310-1170

FIG. 17 TRANSMISSION

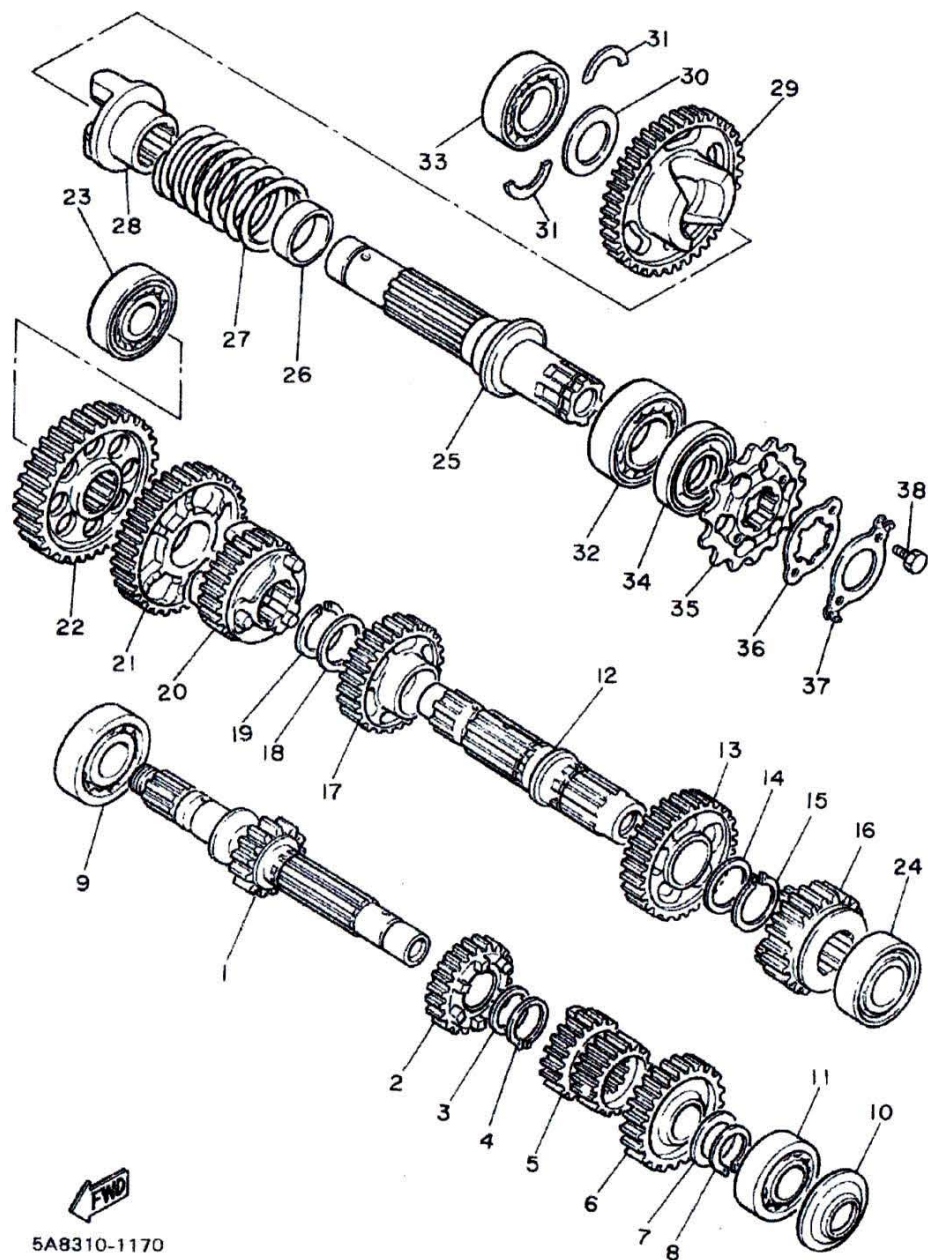


5A8310-1170

C12

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	5A8-17583-01	GEAR, middle driven	1	
30	170-16154-02	PLATE, thrust 1	1	
31	5A8-17529-00	WASHER, thrust	2	
32	93306-30610	BEARING	1	
33	93306-20550	BEARING (B6205DU8)	1	
34	93102-30237	OIL SEAL	1	
35	5A8-17461-60	SPROCKET, drive (16T)	1	
36	5A8-17456-00	HOLDER, sProcket	1	
37	90215-30191	WASHER, lock	1	
38	97322-06016	BOLT	2	

FIG. 18 SHIFT CAM.FORK

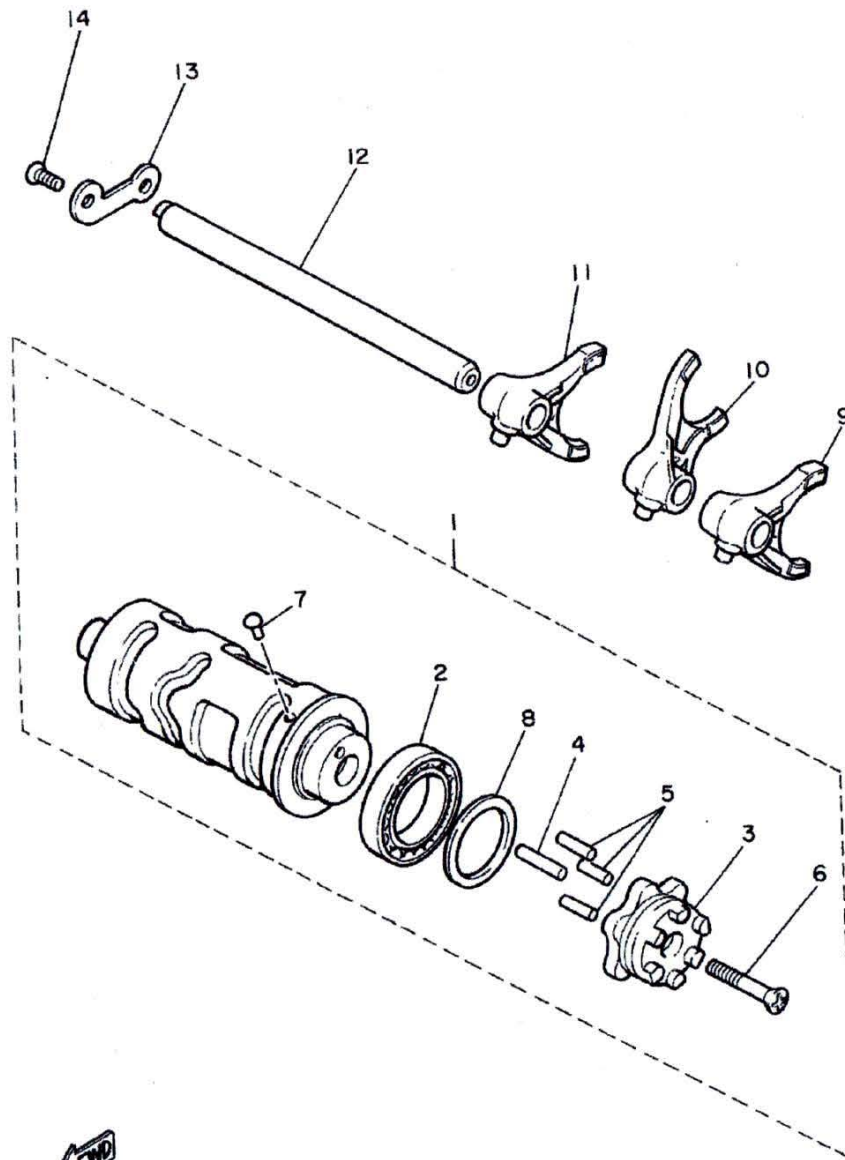

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4X7-18540-01	SHIFT CAM ASSY	1	
2	93306-90602	•BEARING	1	
3	4G0-18185-01	•SEGMENT	1	
4	93604-20156	•PIN, dowel	1	
5	93604-16092	•PIN, dowel	3	
6	98701-05035	•SCREW, flat head	1	
7	136-18542-00	•POINT, neutral	1	
8	90201-30297	•WASHER, Plate	1	
9	4X7-18511-00	FORK, shift 1	1	
10	4X7-18512-00	FORK, shift 2	1	
11	4X7-18513-00	FORK, shift 3	1	
12	4X7-18531-00	BAR, shift fork Guide 1	1	
13	4X7-18536-00	STOPPER, shift bar	1	
14	92701-06015	SCREW, flat head	2	



5E3171-1190


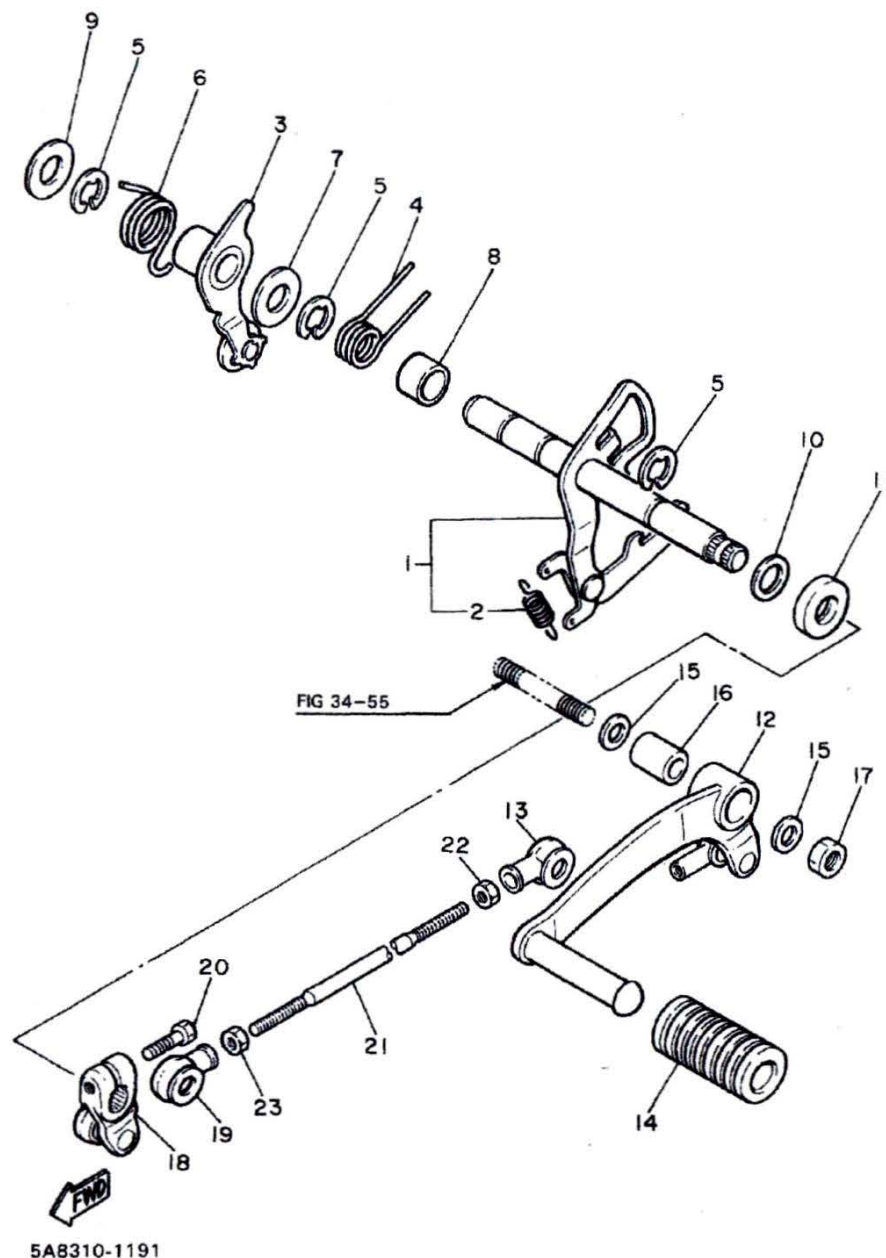


FIG. 19 SHIFT SHAFT.PEDAL


REF. NO.	PART NO.	DESCRIPTION	Q'
1	4X7-18120-00	SHIFT LEVER ASSY	
2	90506-08227	SPRING, tension	
3	4X7-18140-00	STOPPER LEVER ASSY	
4	90508-32535	SPRING, torsion	
5	93430-10016	CIRCLIP	
6	90508-29531	SPRING, torsion	
7	90201-12588	WASHER, Plate	
8	90387-124F4	COLLAR	
9	90201-12588	WASHER, Plate	
10	90201-12166	WASHER, Plate	
11	93102-12106	OIL SEAL	
12	5A8-18111-00	PEDAL, shift	
13	2H9-18154-00	COVER, dust	
14	132-18113-01	COVER, shift Pedal	
15	92901-10200	WASHER, Plain	
16	90387-102E9	COLLAR	
17	95311-10700	NUT	
18	5A8-18112-00	ARM, shift	
19	2H9-18154-00	COVER, dust	
20	97321-06020	BOLT	
21	5A8-18115-00	ROD, shift	
22	90170-06228	NUT	
23	95303-06700	NUT	

FIG. 20 FRAME

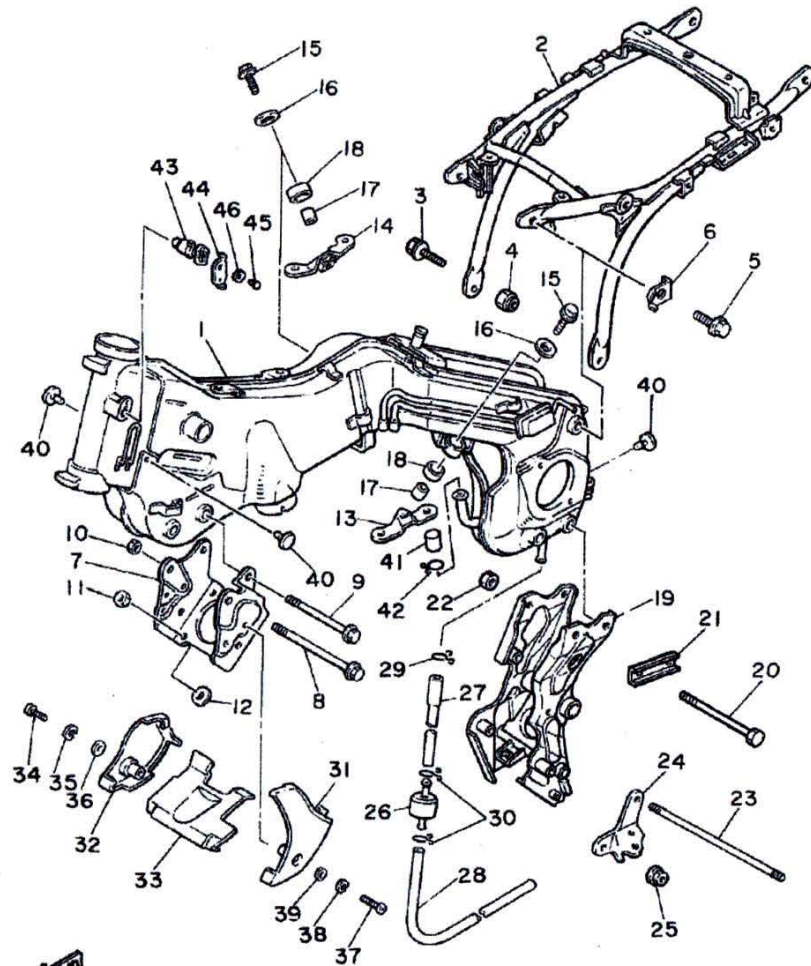

19T351-2200


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-21110-01-33	FRAME COMP	1	yamaha black
2	19T-21190-00-33	REAR FRAME COMP.	1	yamaha black
3	95811-10035	BOLT, flange	2	
4	90185-10035	NUT, self-locking	2	
5	90101-10524	BOLT	2	
6	90215-10192	WASHER, lock	2	
7	4X7-21317-00	STAY, engine 4	1	
8	90105-10183	BOLT, washer based	1	
9	90105-10105	BOLT, washer based	1	
10	90179-10247	NUT	2	
11	90179-12248	NUT	4	
12	90201-125A3	WASHER, Plate	4	
13	4X7-21315-00	STAY, engine 2	1	
14	4X7-21316-00	STAY, engine 3	1	
15	90105-10186	BOLT, washer based	2	
16	90201-104A7	WASHER, Plate	2	
17	90387-100E2	COLLAR	2	
18	4X7-21485-00	DAMPER, rubber 1	2	
19	5A8-21430-00	REAR ARM BRACKET COMP.	1	
20	90101-10074	BOLT	2	
21	4X7-21491-00	WASHER, lock	1	
22	90179-10247	NUT	2	
23	90116-10352	BOLT, stud	1	
24	5E4-21458-00	BRACKET, side stand	1	
25	90179-10247	NUT	1	
26	4X7-2149Y-00	FILTER ASSY	1	
27	90445-11545	HOSE	1	
28	90445-11452	HOSE	1	

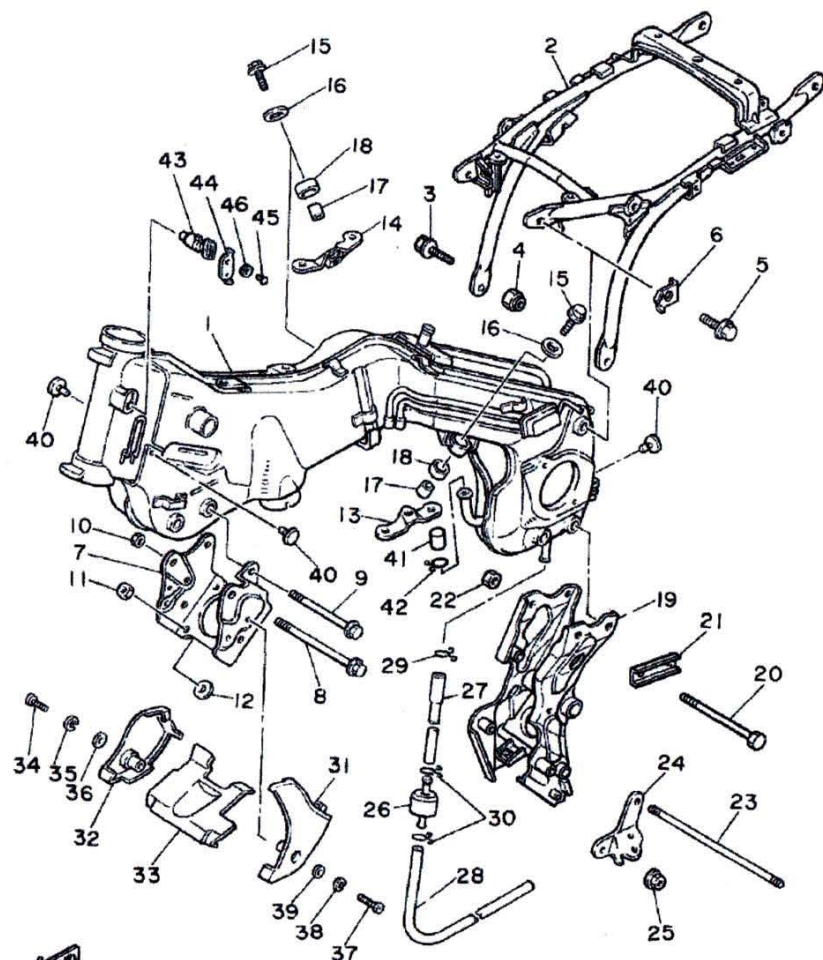

19T351-2200

FIG. 20 FRAME

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90467-13042	CLIP	1	
30	90467-11010	CLIP	2	
31	5A8-2137W-00-33	SCOOP, air 1	1	yamaha black
32	5A8-2137X-00-33	SCOOP, air 2	1	yamaha black
33	5A8-2137Y-00-33	GUIDE, air	1	yamaha black
34	92506-06025	SCREW, Pan head	1	
35	92906-06100	WASHER, sPring	1	
36	92906-06600	WASHER, Plate	1	
37	92506-06050	SCREW, Pan head	1	
38	92906-06100	WASHER, sPring	1	
39	92906-06600	WASHER, Plate	1	
40	90338-07043	PLUG	3	
41	5A8-21399-00	CAP, tool box	1	
42	90467-14015	CLIP	1	
43	*	BODY & KEY, steering lock	1	LM
44	134-23484-10	CAP, handle lock	1	
45	90269-04003	RIVET	1	
46	90208-04029	WASHER, conical sPring	1	

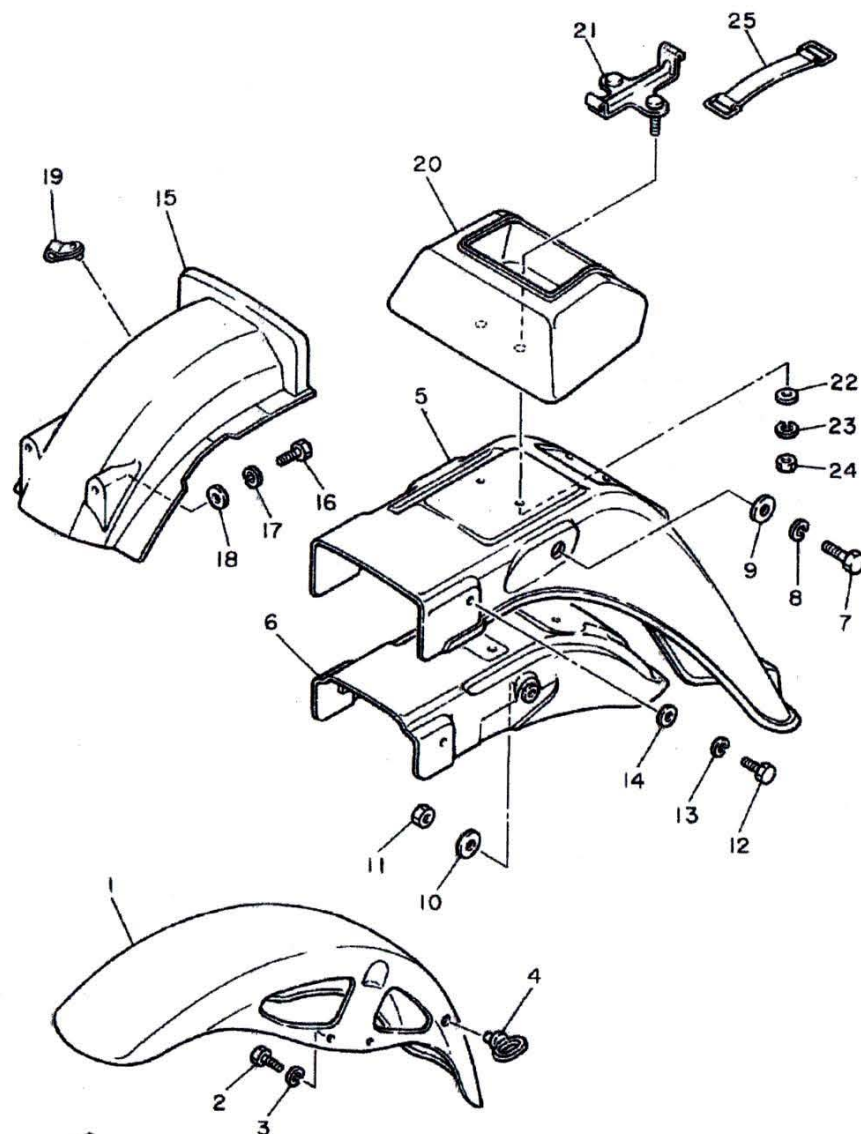

19T310-2210

FIG. 21 FRONT FENDER•REAR FENDER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-21510-00-63	FRONT FENDER COMP.	1	brilliant red
2	97301-08020	BOLT	4	
3	92901-08100	WASHER, sPring	4	
4	1A0-21518-00	HOLDER, cable	1	
5	19T-21611-00	FENDER, rear	1	
6	19T-21670-00	REINF. COMP.	1	
7	97326-08025	BOLT	2	
8	92906-08100	WASHER, sPring	2	
9	92906-08600	WASHER, Plate	2	
10	90201-08748	WASHER, Plate	2	
11	95312-08600	NUT	2	
12	97301-06016	BOLT	2	
13	92902-06100	WASHER, sPring	2	
14	92902-06200	WASHER	2	
15	19T-21629-00	GUARD, mud	1	
16	97301-06016	BOLT	2	
17	92902-06100	WASHER, sPring	2	
18	90201-06067	WASHER, Plate	2	
19	90464-12027	CLAMP	2	
20	19T-21248-00	BOX	1	
21	19T-21631-00	BOLT 1	1	
22	92902-06200	WASHER	2	
23	92902-06100	WASHER, sPring	2	
24	95312-06600	NUT	2	
25	120-82131-00	BAND, battery	1	


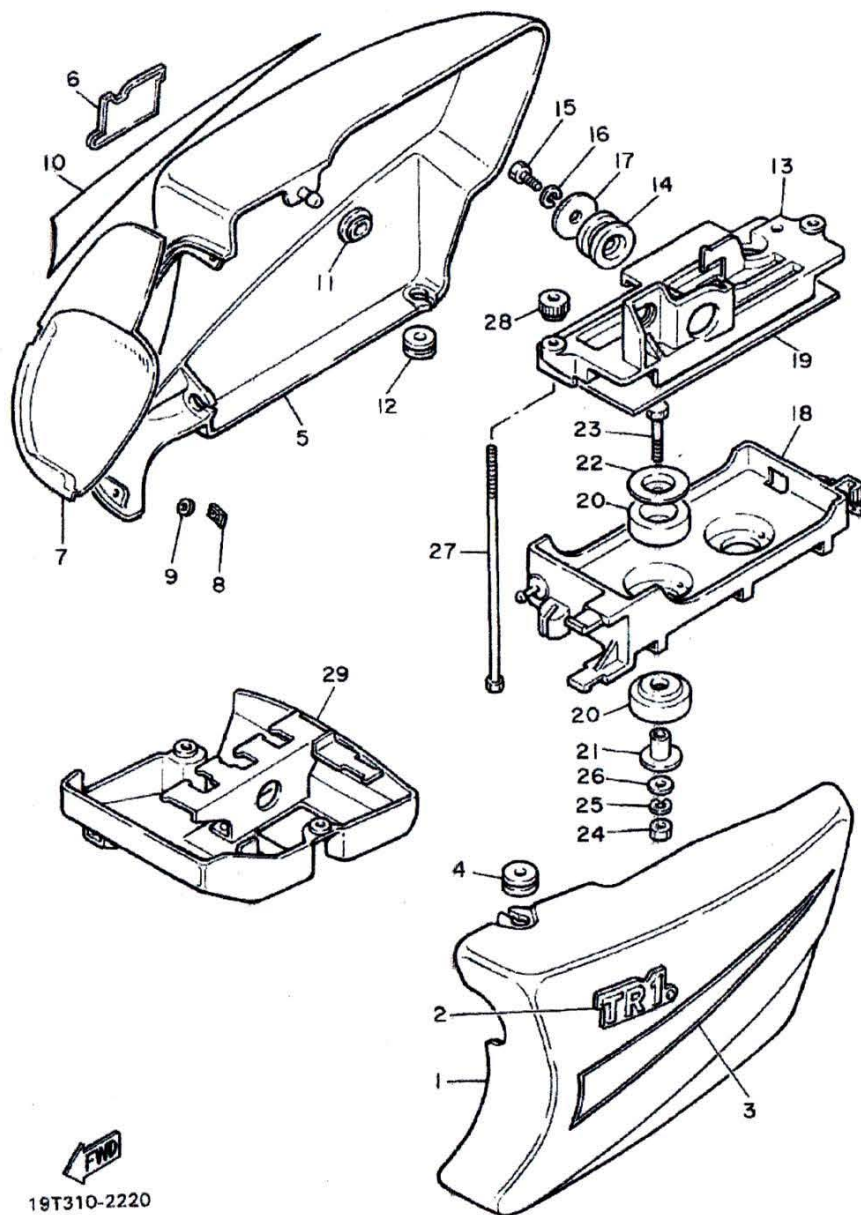


FIG. 22 SIDE COVER. TOOL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-21711-01-63	COVER, side 1	1	brilliant red
2	5A8-21786-00	EMBLEM 6	1	
3	19T-2173E-00	GRAPHIC 1	1	
4	90480-12053	GROMMET	3	
5	5A8-21721-01-63	COVER, side 2	1	brilliant red
6	5A8-21786-00	EMBLEM 6	1	
7	5A8-21731-00	COVER, side 3	1	
8	90183-04005	NUT, sPring	2	
9	90202-04003	WASHER, Plate	2	
10	19T-2173F-00	GRAPHIC 2	1	
11	90480-01141	GROMMET	1	
12	90480-12053	GROMMET	2	
13	5A8-2177G-00	BOX, battery	1	
14	2H7-21747-00	DAMPER	1	
15	97302-06012	BOLT	1	
16	92902-06100	WASHER, sPring	1	
17	90201-065A1	WASHER, Plate	1	
18	5A8-21171-00	BOX, tool	1	
19	5A8-21747-00	DAMPER	1	
20	2H7-21746-00	DAMPER, battery box	4	
21	90387-06763	COLLAR	2	
22	90209-07170	WASHER	2	
23	97301-06040	BOLT	2	
24	95302-06600	NUT	2	
25	92902-06100	WASHER, sPring	2	
26	92902-06600	WASHER	2	
27	90101-05496	BOLT	2	
28	90179-05322	NUT	2	

FIG. 22 SIDE COVER. TOOL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	5A8-W2121-00	PLATE, bridge	1	

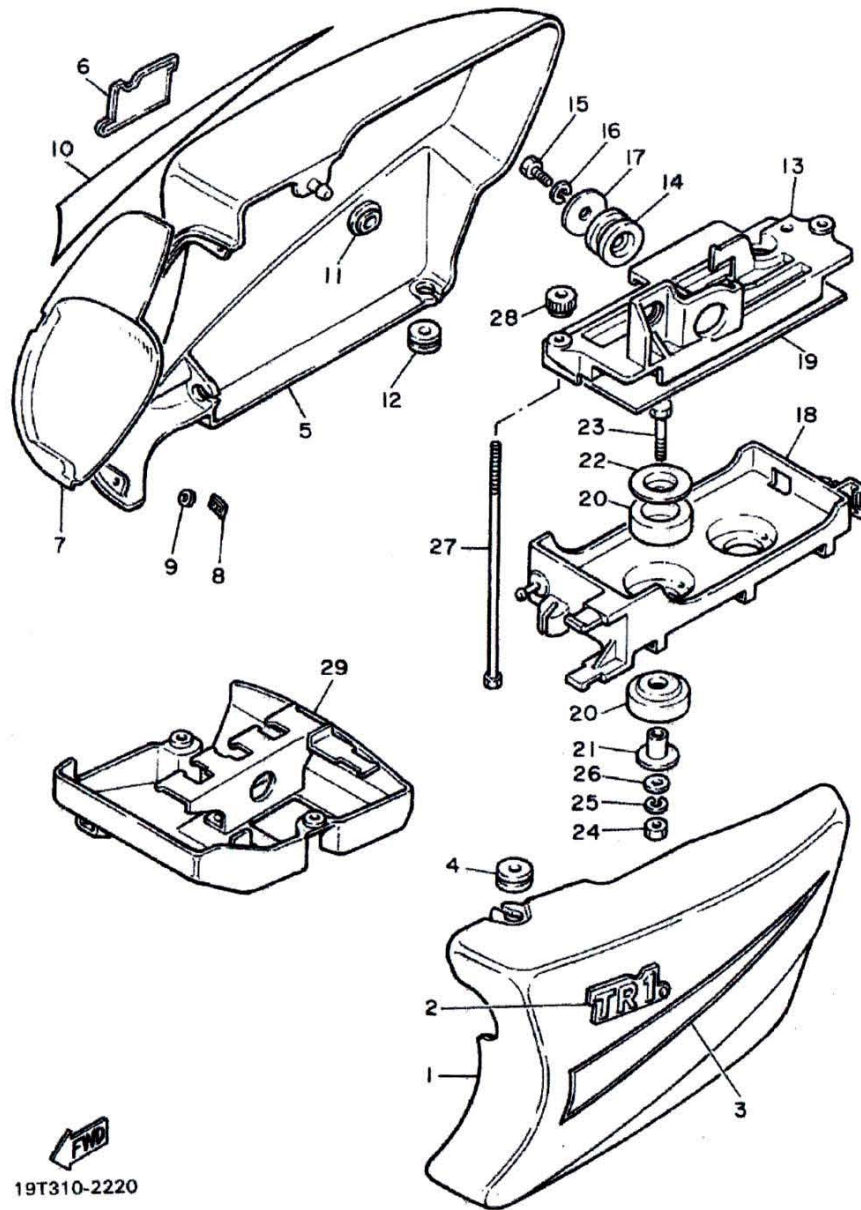

19T310-2220


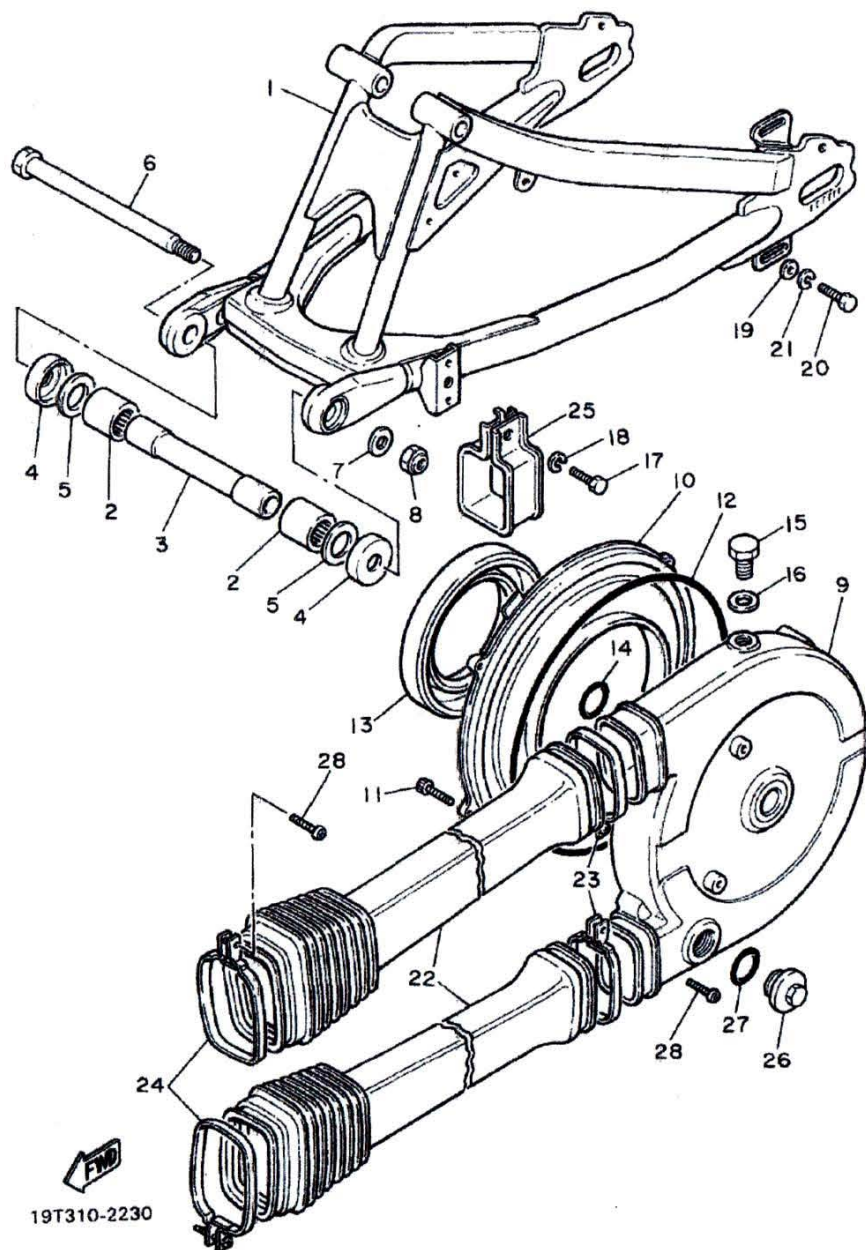


FIG. 23 REAR ARM


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-22110-01-35	REAR ARM COMP.	1	silver
2	93320-32403	BEARING	2	
3	4X7-22124-00	BUSH 2	1	
4	4X7-22129-00	COVER, thrust 2	2	
5	90201-244A8	WASHER, Plate (1.95T)	2	UN
	90201-244A9	WASHER, Plate (2.05T)	2	UN
	90201-245A0	WASHER, Plate (2.15T)	2	UN
6	5A8-22141-00	SHAFT, pivot	1	
7	92901-16600	WASHER, Plate	1	
8	95601-16100	NUT, u	1	
9	5A8-22311-00-98	CASE, chain	1	low gloss black
10	5A8-22312-00-98	CASE, chain 2	1	low gloss black
11	91316-06018	BOLT	5	
12	93212-36469	O-RING	1	
13	93104-99069	OIL SEAL	1	
14	93210-26240	O-RING	1	
15	90340-14063	PLUG, straight screw	1	
16	214-11198-01	GASKET	1	
17	97306-06016	BOLT	2	
18	92906-06100	WASHER, sPring	2	
19	90201-06557	WASHER, Plate	2	
20	97301-06016	BOLT	2	
21	92901-06100	WASHER, sPring	2	
22	5A8-22318-00	GUARD, chain	2	
23	90460-01177	CLAMP, hose	2	
24	90460-01176	CLAMP, hose	2	
25	5A8-22321-00	STAY, chain case 1	2	
26	5A8-22334-00	BOLT, chain case 2	1	

FIG. 23 REAR ARM

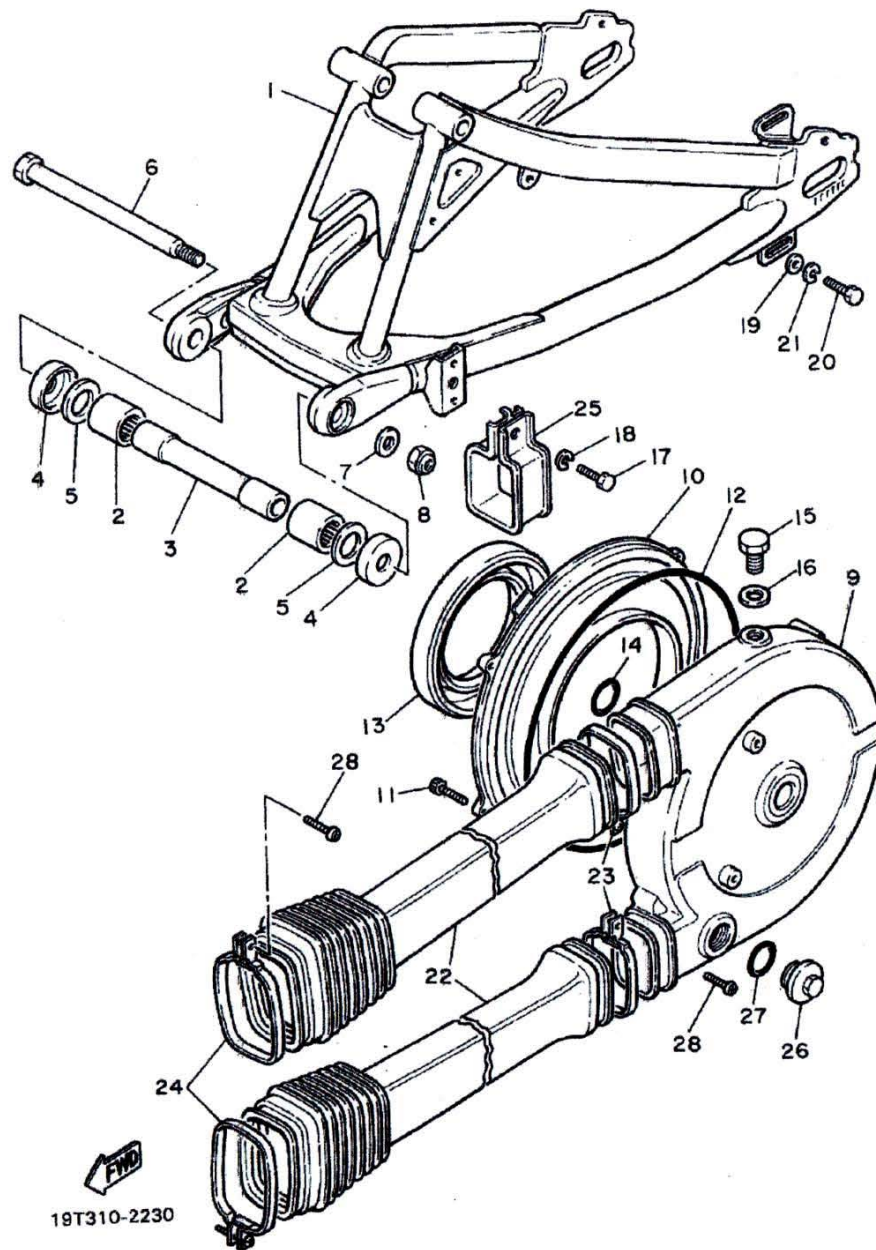

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	93210-32172	O-RING	1	
28	98506-05025	SCREW, Pan head	4	


FIG. 25 FRONT FORK

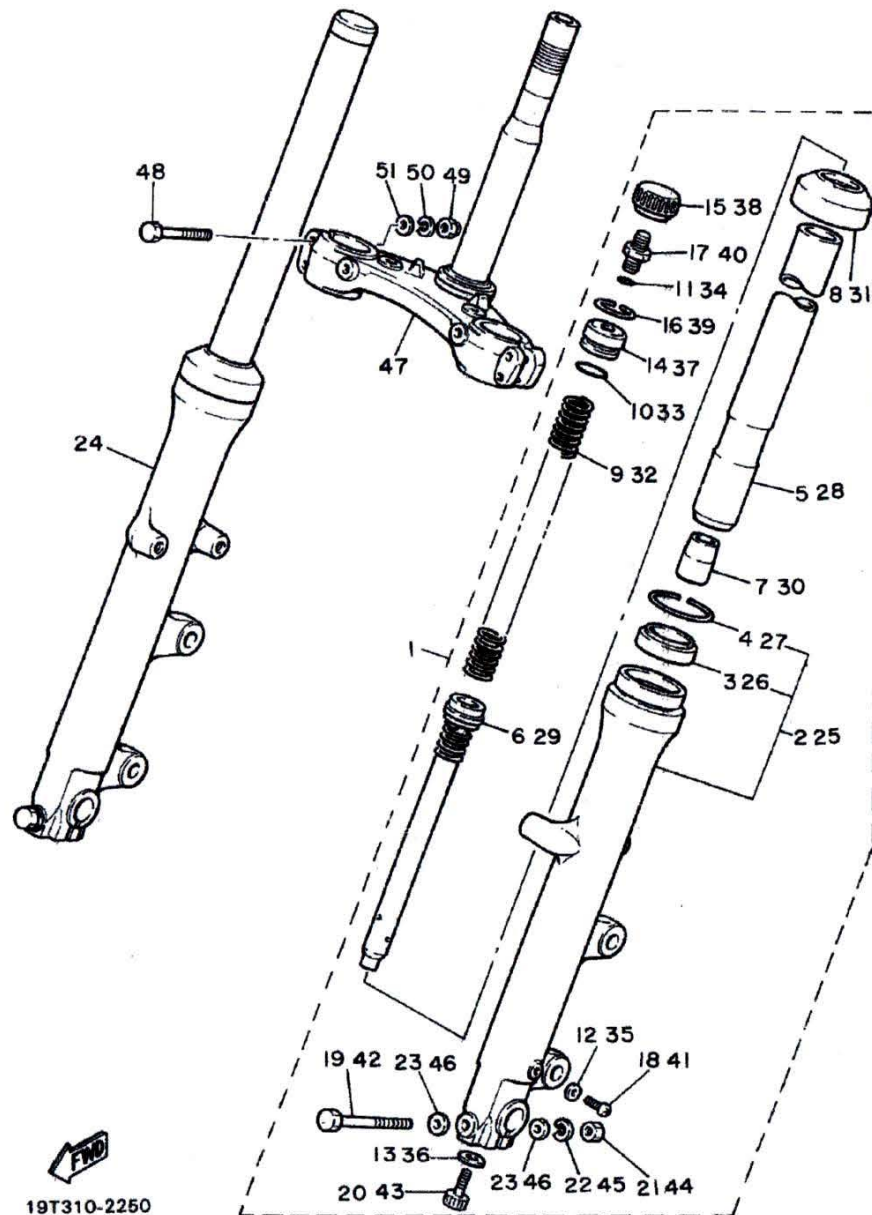

19T310-2250

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-23102-00	FRONT FORK ASSY (L.H.)	1	
2	5A8-23126-00	*TUBE, outer 1	1	
3	2H7-23145-00	*OIL SEAL	1	
4	3R4-23153-00	*RING, snap	1	
5	5A8-23110-00	*INNER TUBE COMP.1	1	
6	4K0-23170-00	*CYLINDER COMP., front fork	1	
7	5A8-23173-00	*SPINDLE, taPer	1	
8	3H5-23144-00	*SEAL, dust	1	
9	5A8-23141-00	*SPRING, front fork	1	
10	3J2-23114-00	*O-RING	1	
11	3J2-23147-00	*O-RING	1	
12	122-23129-00	*GASKET, drain Plug	1	
13	509-23158-L0	*GASKET	1	
14	3J2-23111-00	*BOLT, cap	1	
15	4X7-23168-00	*CAP, front fork	1	
16	3J2-23183-00	*CIRCLIP	1	
17	3J2-23190-00	*AIR VALVE COMP.	1	
18	122-23119-01	*PLUG, drain	1	
19	4G0-23356-00	*BOLT 2	1	
20	278-23181-50	*BOLT, hexaGon socket head	1	
21	95311-08600	*NUT	1	
22	92901-08100	*WASHER, sPring	1	
23	90201-08544	*WASHER, Plate	2	
24	5A8-23103-00	FRONT FORK ASSY (R.H.)	1	
25	5A8-23136-00	*TUBE, outer 2	1	
26	2H7-23145-00	*OIL SEAL	1	
27	3R4-23153-00	*RING, snap	1	
28	5A8-23110-00	*INNER TUBE COMP.1	1	


FIG. 25 FRONT FORK

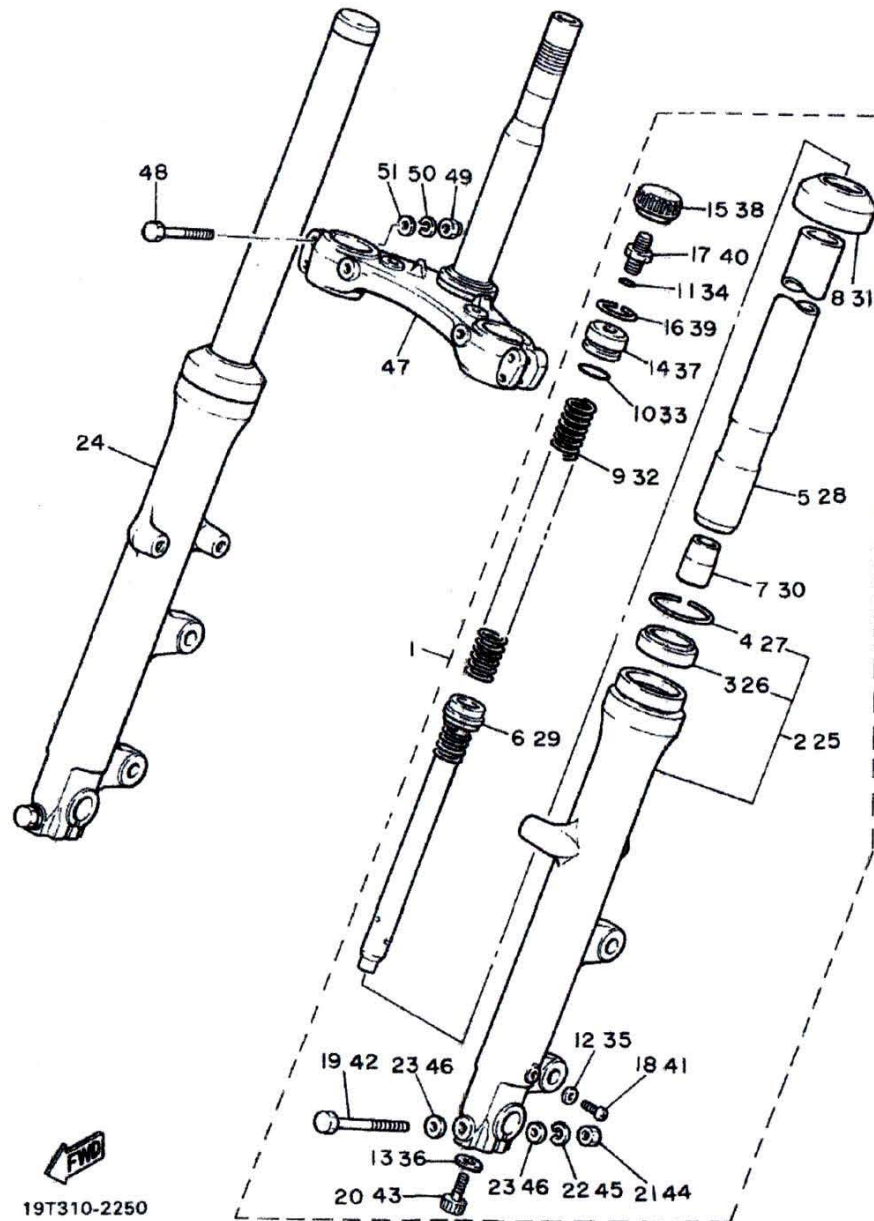

19T310-2250

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4K0-23170-00	*CYLINDER COMP., front fork	1	
30	5A8-23173-00	*SPINDLE, taPer	1	
31	3H5-23144-00	*SEAL, dust	1	
32	5A8-23141-00	*SPRING, front fork	1	
33	3J2-23114-00	*O-RING	1	
34	3J2-23147-00	*O-RING	1	
35	122-23129-00	*GASKET, drain Plug	1	
36	509-23158-L0	*GASKET	1	
37	3J2-23111-00	*BOLT, cap	1	
38	4X7-23168-00	*CAP, front fork	1	
39	3J2-23183-00	*CIRCLIP	1	
40	3J2-23190-00	*AIR VALVE COMP.	1	
41	122-23119-01	*PLUG, drain	1	
42	4G0-23356-00	*BOLT 2	1	
43	278-23181-50	*BOLT, hexagon socket head	1	
44	95311-08600	*NUT	1	
45	92901-08100	*WASHER, sPring	1	
46	90201-08544	*WASHER, Plate	2	
47	5A8-23340-00	UNDER BRACKET COMP.	1	
48	90109-08397	BOLT	4	
49	95303-08800	NUT, crown	4	
50	92901-08100	WASHER, sPring	4	
51	90201-08544	WASHER, Plate	4	


FIG. 26 STEERING

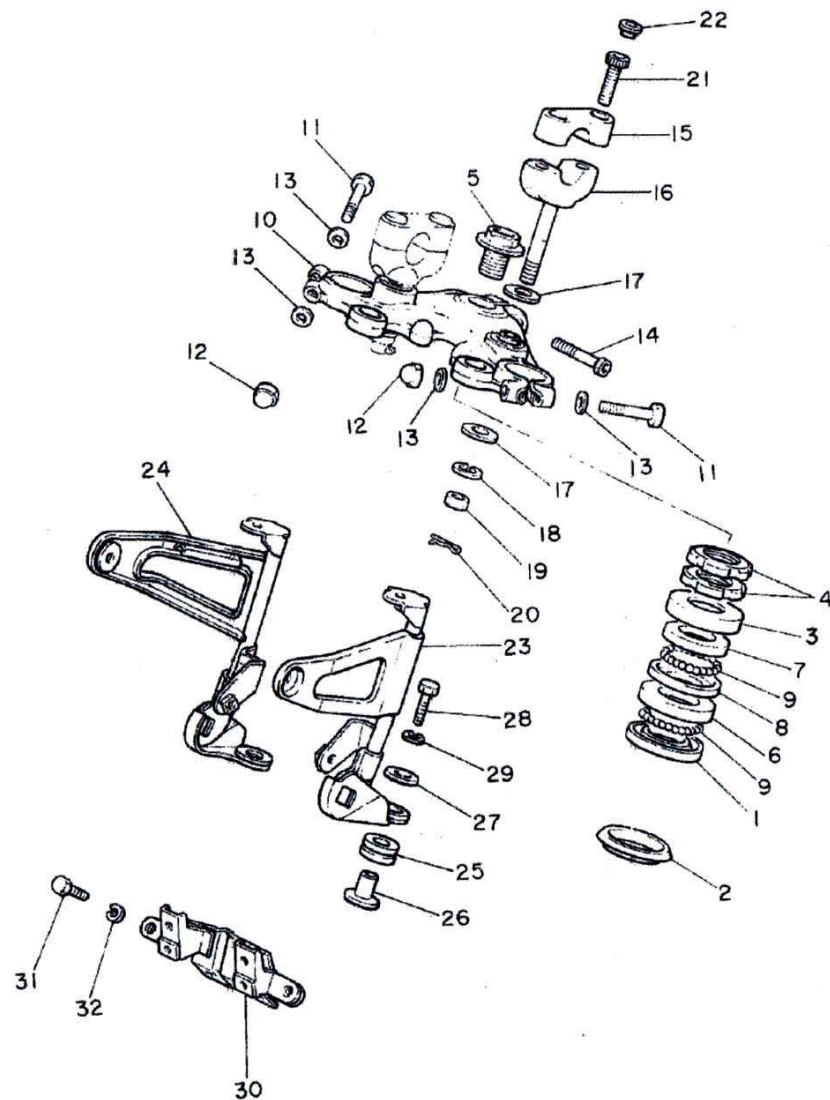

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	256-23411-00	RACE, ball 1	1	
2	164-23462-00	SEAL, steering	1	
3	4K0-23415-00	COVER, ball race 1	1	
4	4H3-23454-00	NUT, fitting 2	2	
5	4H3-23451-00	BOLT, fitting 1	1	
6	256-23412-00	RACE, ball 2	1	
7	256-23413-00	RACE, ball 3	1	
8	256-23414-00	RACE, ball 4	1	
9	93501-04011	BALL	38	
10	5A8-W2341-00-98	CROWN, handle	1	low gloss black
11	97326-08055	BOLT	2	
12	95306-08800	NUT	2	
13	92906-08600	WASHER, Plate	4	
14	91316-08040	BOLT	1	
15	4H7-23441-00-98	HOLDER, handle upper	2	low gloss black
16	3Y6-23442-00-98	HOLDER, handle lower	2	low gloss black
17	90201-10141	WASHER, Plate	4	
18	92901-10100	WASHER, spring	2	
19	95301-10700	NUT	2	
20	90468-12006	CLIP	2	
21	91316-08030	BOLT	4	
22	341-23469-00	CAP, bolt	4	
23	5A8-23121-00	COVER, upper 1	1	
24	5A8-23131-00	COVER, upper 2	1	
25	90480-14101	GROMMET	2	
26	90387-06388	COLLAR	2	
27	90201-06552	WASHER, Plate	2	
28	97306-06025	BOLT	2	


5A8310-1260

FIG. 26 STEERING

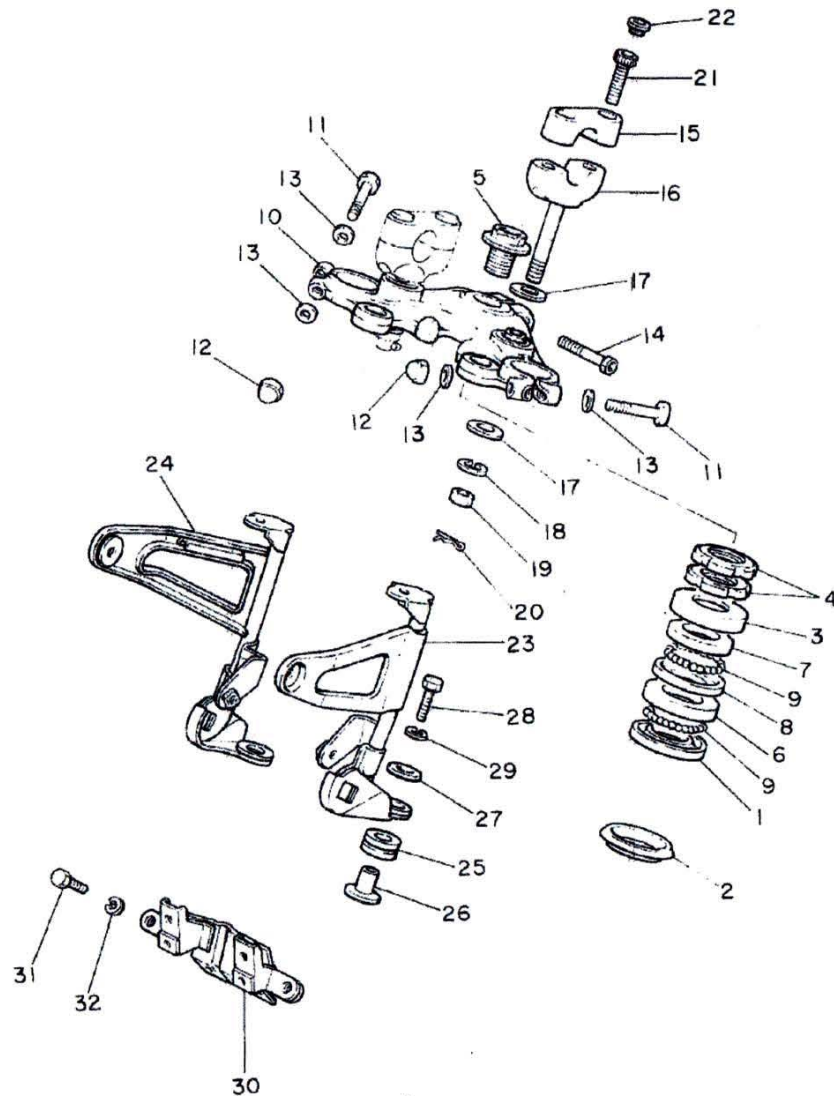

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	92906-06100	WASHER, sPring	2	
30	5A8-23377-00	BRACKET, horn	1	
31	97306-08020	BOLT	2	
32	92906-08100	WASHER, sPring	2	

FIG. 27 FUEL TANK

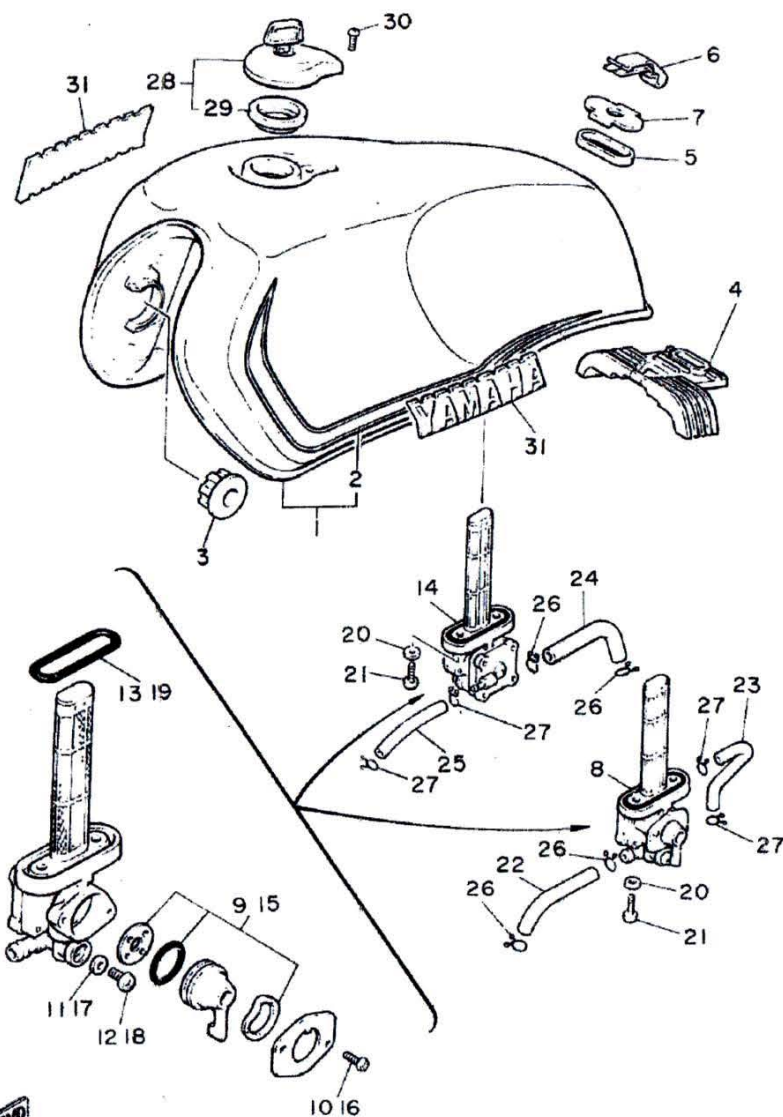


19T310-2270

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-24110-00-02	FUEL TANK COMP.	1	
2	19T-24240-00	.GRAPHIC SET	1	
3	4H7-24181-00	DAMPER, locating 1	2	
4	5A8-24182-00	DAMPER, locating 2	1	
5	4K0-24183-00	DAMPER, locating 3	1	
6	4X7-2411M-00	CLIP	1	
7	4K0-24186-00	WASHER, sPecial	1	
8	4X7-24500-00	FUEL COCK ASSY 1	1	
9	3H3-W0092-00	.FUEL COCK VALVE SET	1	
10	98501-03008	.SCREW, Pan head	2	
11	2G2-24522-00	.GASKET	1	
12	98501-06008	.SCREW, Pan head	1	
13	2W6-24512-00	.O-RING	1	
14	4X7-24510-00	FUEL COCK ASSY 2	1	
15	3H3-W0092-00	.FUEL COCK VALVE SET	1	
16	98501-03008	.SCREW, Pan head	2	
17	2G2-24522-00	.GASKET	1	
18	98501-06008	.SCREW, Pan head	1	
19	2W6-24512-00	.O-RING	1	
20	90202-06010	WASHER, Plate	4	
21	90149-06011	SCREW	4	
22	90445-11542	HOSE	1	
23	90445-09578	HOSE	1	
24	4X7-24311-00	PIPE, fuel 1	1	
25	90445-09578	HOSE	1	
26	90467-10008	CLIP	4	
27	90467-08003	CLIP	4	
28	4X7-24602-00	CAP ASSY	1	


FIG. 27 FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4X7-24612-00	GASKET, cap	1	
30	98506-05010	SCREW, Pan head	1	
31	3X0-24161-01	EMBLEM 1	2	

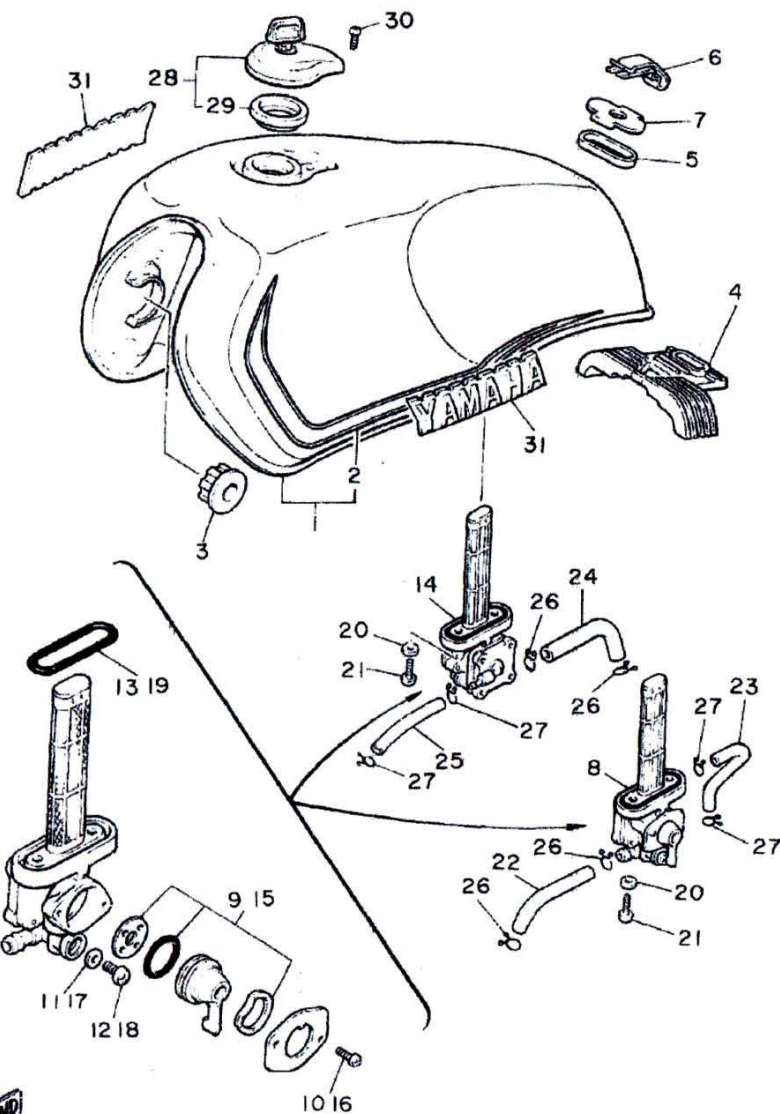


19T310-2270

FIG. 28 SEAT

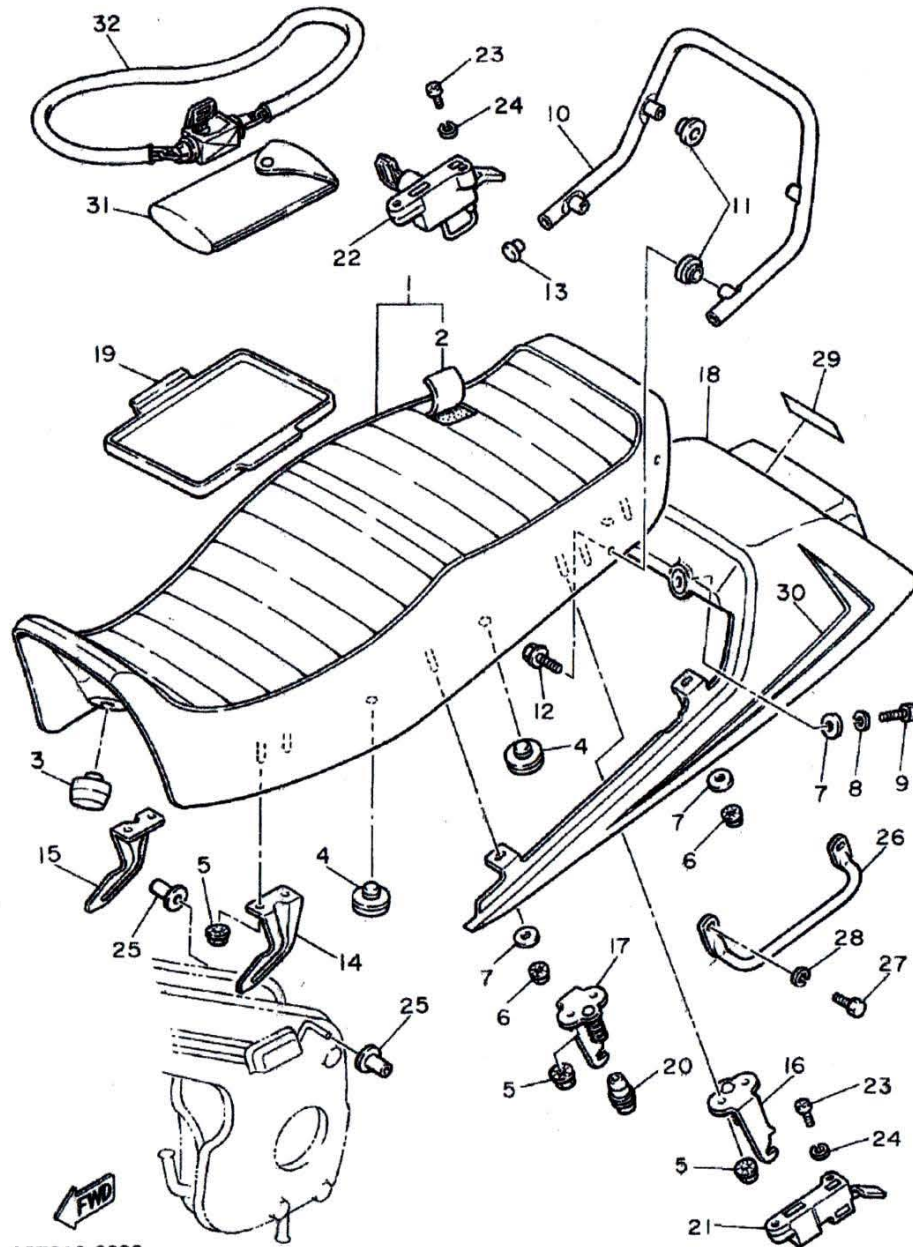

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19T-W2472-00	DOUBLE SEAT ASSY	1	
2	19T-24731-00	COVER, double seat	1	
3	1T4-24741-00	PAD, seat	2	
4	1L9-24741-00	PAD, seat	6	
5	95702-06100	NUT, flange	8	
6	95702-05100	NUT, flange	4	
7	90201-053E0	WASHER, Plate	6	
8	92902-05100	WASHER, sPring	2	
9	97302-05014	BOLT	2	
10	19T-24773-00	HANDLE, seat	1	
11	1T4-24796-00	COVER	4	
12	90119-08048	BOLT, with washer	4	
13	1J3-24742-00	GROMMET	2	
14	19T-2474F-00	STAY, front 1	1	
15	19T-2474G-00	STAY, front 2	1	
16	19T-24728-00	BRACKET, seat	1	
17	19T-24738-00	BRACKET, seat	1	
18	19T-24756-00-63	COVER, tail	1	UR brilliant red
19	395-28185-00	LID	1	
20	19T-24742-00	GROMMET	2	
21	4L0-24760-00	SEAT LEVER ASSY	1	
22	4L0-24705-00	SEAT LOCK ASSY	1	
23	92502-06016	SCREW, Pan head	4	
24	92902-06100	WASHER, sPring	4	
25	19T-24725-00	SPACER	2	
26	19T-21165-00	HANDLE, standing	1	
27	97306-08016	BOLT	2	
28	92906-08100	WASHER, sPring	2	

FIG. 28 SEAT

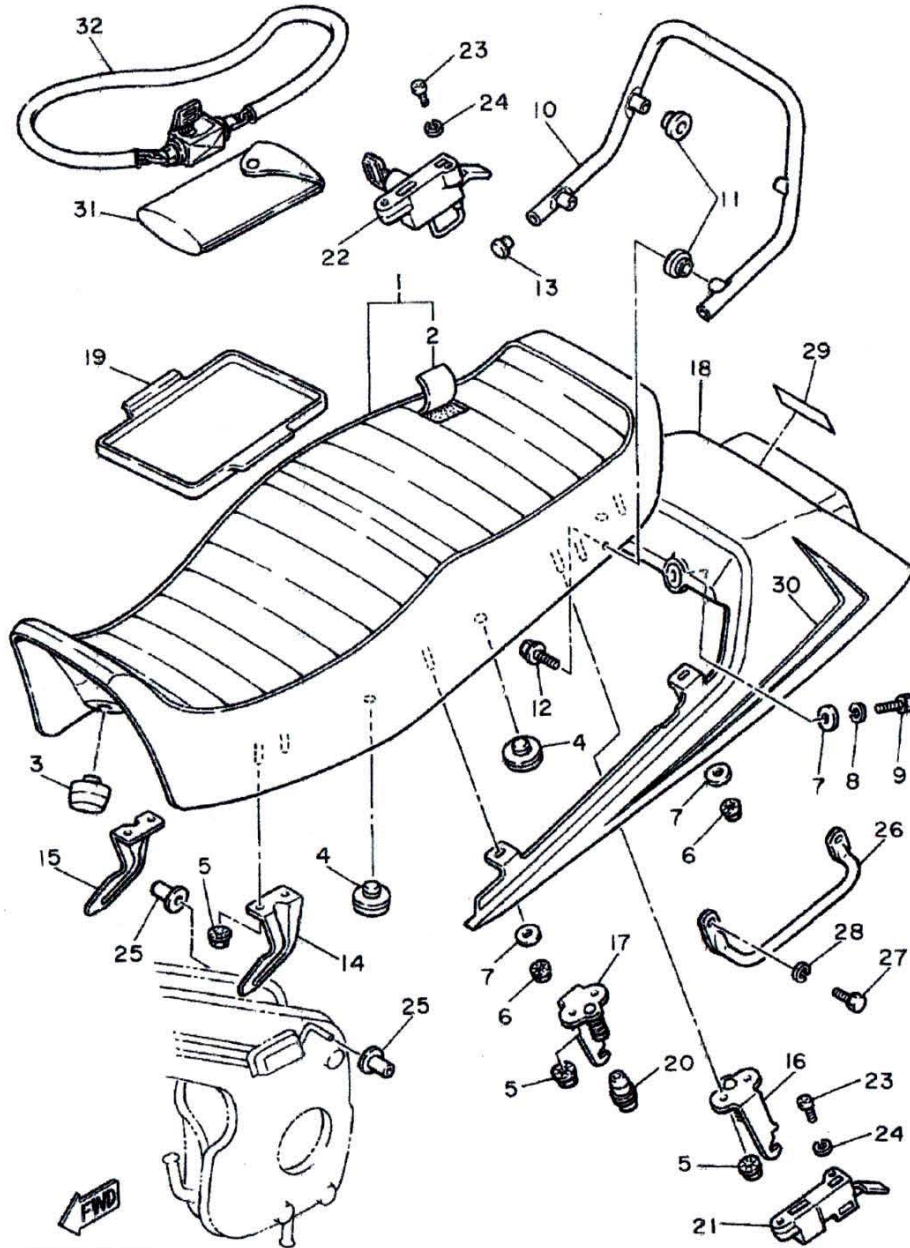

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	4A8-24786-00	EMBLEM	1	
30	19T-2477L-00	GRAPHIC SET, tail cover	1	
31	5A8-28100-10	TOOL KIT	1	
32	4X7-W2171-00	WHEEL LOCK ASSY	1	

19T310-2280

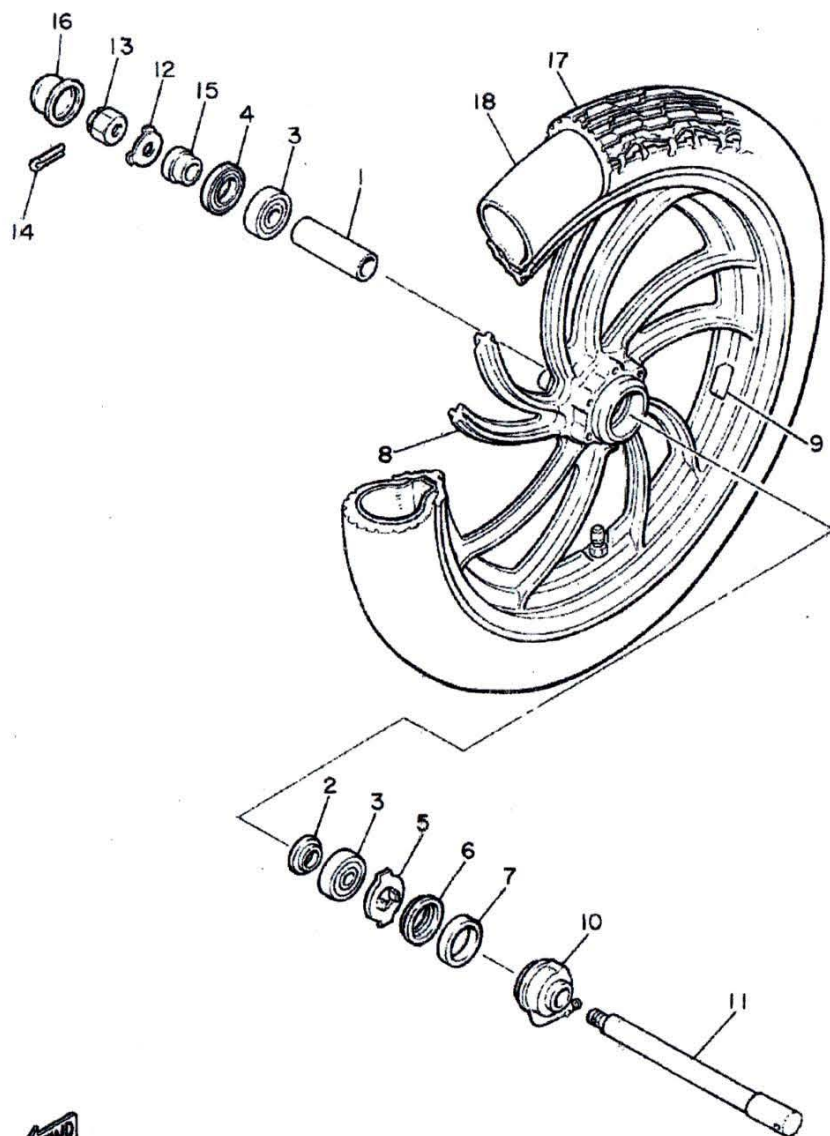



FIG. 29 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	90560-15116	SPACER	1	
2	146-25115-00	FLANGE, sPacer 1	1	
3	93306-30203	BEARING (B6302Z)	2	
4	93102-22014	OIL SEAL	1	
5	341-25149-00	CLUTCH, meter	1	
6	341-25846-00	RETAINER, clutch	1	
7	93105-45017	OIL SEAL	1	
8	4K0-25168-20-98	CAST WHEEL, front (1.85-19)	1	low gloss black
9	1A1-25398-01	BALANCER, wheel (20G)	1	UN STD
	1A1-25399-00	BALANCER, wheel (10G)	1	UN
	2M0-25399-00	BALANCER, wheel (30G)	1	UN
10	4K0-25190-00	GEAR UNIT ASSY	1	
11	4H7-25181-00	AXLE, wheel	1	
12	90209-14136	WASHER	1	
13	90171-14020	NUT, castle	1	
14	91401-30030	PIN, cotter	1	
15	90387-15550	COLLAR	1	
16	521-25188-00	CAP	1	
17	94132-19699	TIRE (3.25-19)	1	UR bridgestone
	94132-19694	TIRE (3.25-19)	1	UR dunlop
18	94232-19122	TUBE (3.25-19)	1	UR bridgestone
	94232-19167	TUBE (3.25-19)	1	UR dunlop



19T300-2290


FIG. 30 FRONT BRAKE CALIPER

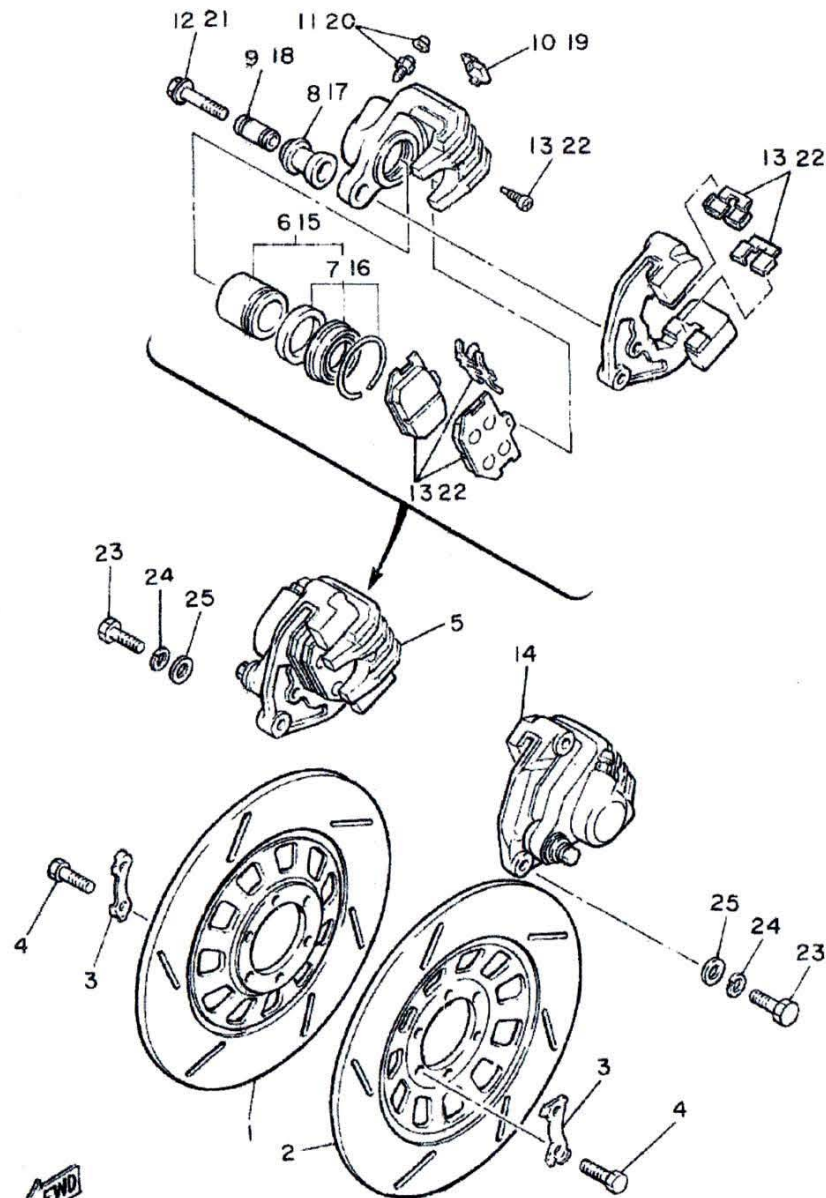

19T310-2300


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5G9-25831-00	DISC, brake	1	
2	5G9-25831-10	DISC, brake	1	
3	1J3-25834-01	WASHER, lock	6	
4	90101-08312	BOLT	12	
5	4K0-25810-01	CALIPER ASSY (RIGHT)	1	
6	1J3-W0057-00	PISTON ASSY, caliPer	1	
7	1J3-W0047-00	CALIPER SEAL KIT	1	
8	1J3-25917-00	BOOT, caliPer	1	
9	1J3-25838-00	SLEEVE, caliPer	1	
10	1J3-25845-01	CAP, indicator	1	
11	1J3-W0048-00	BREED SCREW KIT	1	
12	90105-08145	BOLT, washer based	1	
13	4K0-W0045-00	BRAKE PAD KIT, front	1	
14	4K0-25810-11	CALIPER ASSY (LEFT)	1	
15	1J3-W0057-00	PISTON ASSY, caliPer	1	
16	1J3-W0047-00	CALIPER SEAL KIT	1	
17	1J3-25917-00	BOOT, caliPer	1	
18	1J3-25838-00	SLEEVE, caliPer	1	
19	1J3-25845-01	CAP, indicator	1	
20	1J3-W0048-00	BREED SCREW KIT	1	
21	90105-08145	BOLT, washer based	1	
22	4K0-W0045-00	BRAKE PAD KIT, front	1	
23	90101-10308	BOLT	4	
24	92901-10100	WASHER, sPring	4	
25	92901-10200	WASHER, Plain	4	

FIG. 31 REAR WHEEL

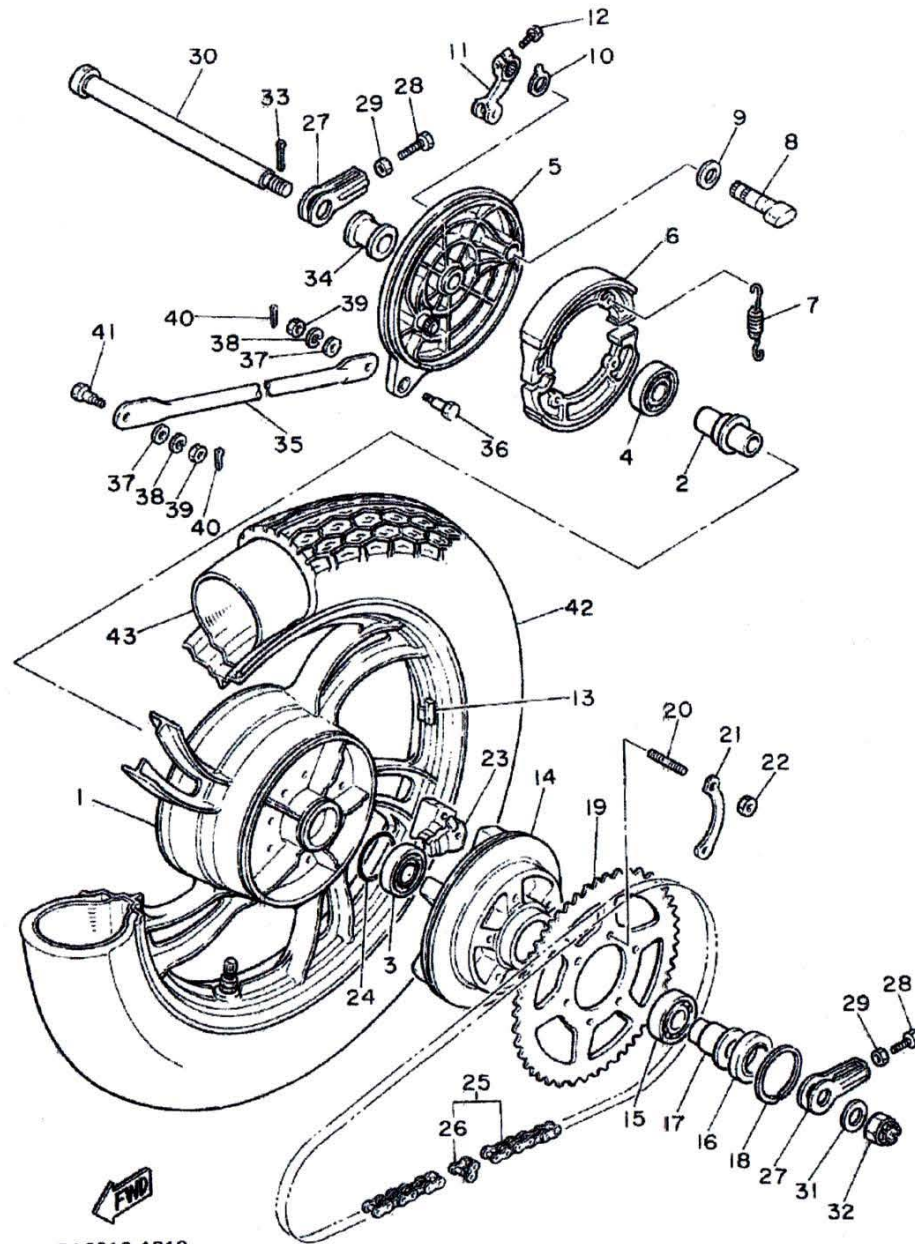

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-25338-20-98	CAST WHEEL, rear	1	low gloss black
2	90560-20135	SPACER	1	
3	93306-20417	BEARING (B62042RS)	1	
4	93306-30417	BEARING (B6304ZZ)	1	
5	5A8-25321-00-98	PLATE, brake shoe	1	low gloss black
6	5A8-25330-00	BRAKE SHOE COMP.	2	
7	90507-20002	SPRING, tension	2	
8	4H7-25351-00	CAMSHAFT	1	
9	90201-14577	WASHER, Plate	1	
10	4H7-2533A-02	PLATE, indicator	1	
11	1L9-25355-00	LEVER, camshaft	1	
12	90101-06291	BOLT	1	
13	1A1-25398-01	BALANCER, wheel (20G)	1	UN
	1A1-25399-00	BALANCER, wheel (10G)	1	UN
	2M0-25399-00	BALANCER, wheel (30G)	1	UN
14	5A8-25366-00	CLUTCH, hub	1	
15	93306-20624	BEARING	1	
16	93101-38100	OIL SEAL	1	
17	90387-203E4	COLLAR	1	
18	93420-62017	CIRCLIP	1	
19	5A8-25435-20	SPROCKET, driven (35T)	1	
20	90116-10221	BOLT, stud	6	
21	256-25412-00	WASHER	3	
22	90170-10136	NUT	6	
23	5A8-25364-00	DAMPER	5	
24	93210-64488	O-RING	1	
25	94580-29090	CHAIN, drive (QID630DS-90L)	1	
26	94680-29031	.JOINT, chain	1	


FIG. 31 REAR WHEEL

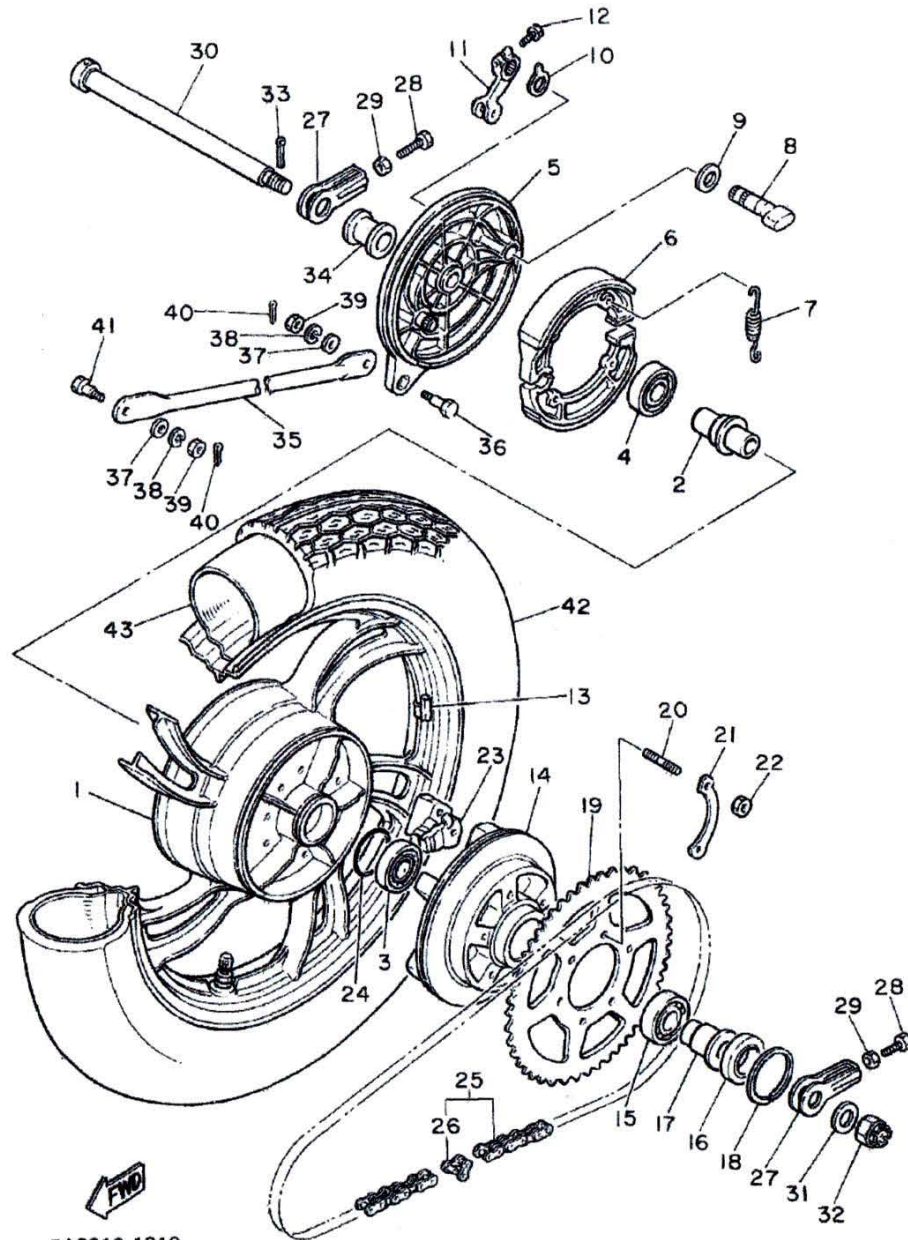

5A8310-1310

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	5A8-25388-00	PULLER, chain 1	2	
28	90101-10507	BOLT	2	
29	95301-10700	NUT	2	
30	5A8-25381-00	AXLE, wheel	1	
31	92901-18200	WASHER, Plain	1	
32	90171-18008	NUT, castle	1	
33	91401-40040	PIN, cotter	1	
34	90387-203E5	COLLAR	1	
35	4X7-25371-00	BAR, tension	1	
36	90109-08406	BOLT	1	
37	92901-08600	WASHER, Plate	2	
38	92901-08100	WASHER, sPring	2	
39	95301-08700	NUT	2	
40	91401-20015	PIN, cotter	2	
41	90109-08368	BOLT	1	
42	94112-18700	TIRE (120/90-18 65H)	1	UR bridgestone
	94112-18693	TIRE (120/90-18 65H)	1	UR dunlop
43	94212-18171	TUBE (120/90-18)	1	UR bridgestone
	94212-18188	TUBE (120/90-18)	1	UR dunlop


FIG. 32 HANDLEBAR.CABLE

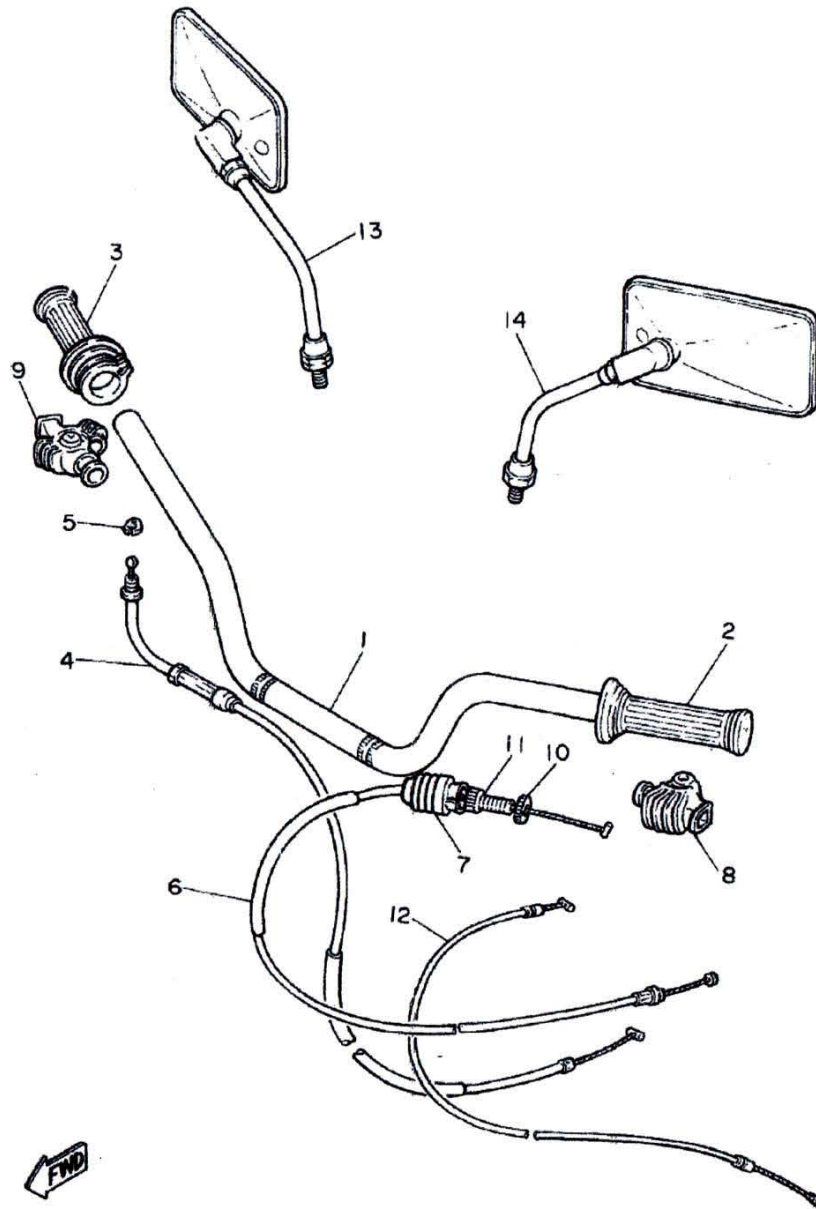

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-26111-00	HANDLEBAR	1	
2	2H7-26241-00	GRIP (L.H)	1	
3	2H7-26240-00	GRIP ASSY	1	
4	5A8-26311-00	CABLE, throttle 1	1	
5	584-26393-02	HOLDER	1	
6	5A8-26335-00	CABLE, clutch	1	
7	1E6-26342-00	BOOT, cable	1	
8	1E6-26372-00	COVER, handle lever 1	1	
9	1T5-26372-00	COVER, handle lever 1	1	
10	90179-08148	NUT	1	
11	90123-08046	BOLT	1	
12	5A8-26331-00	CABLE, starter 1	1	
13	5A8-26290-00	BACK MIRROR ASSY	1	
14	5A8-26290-10	BACK MIRROR ASSY	1	

5A8300-1321


FIG. 33 FRONT MASTER CYLINDER

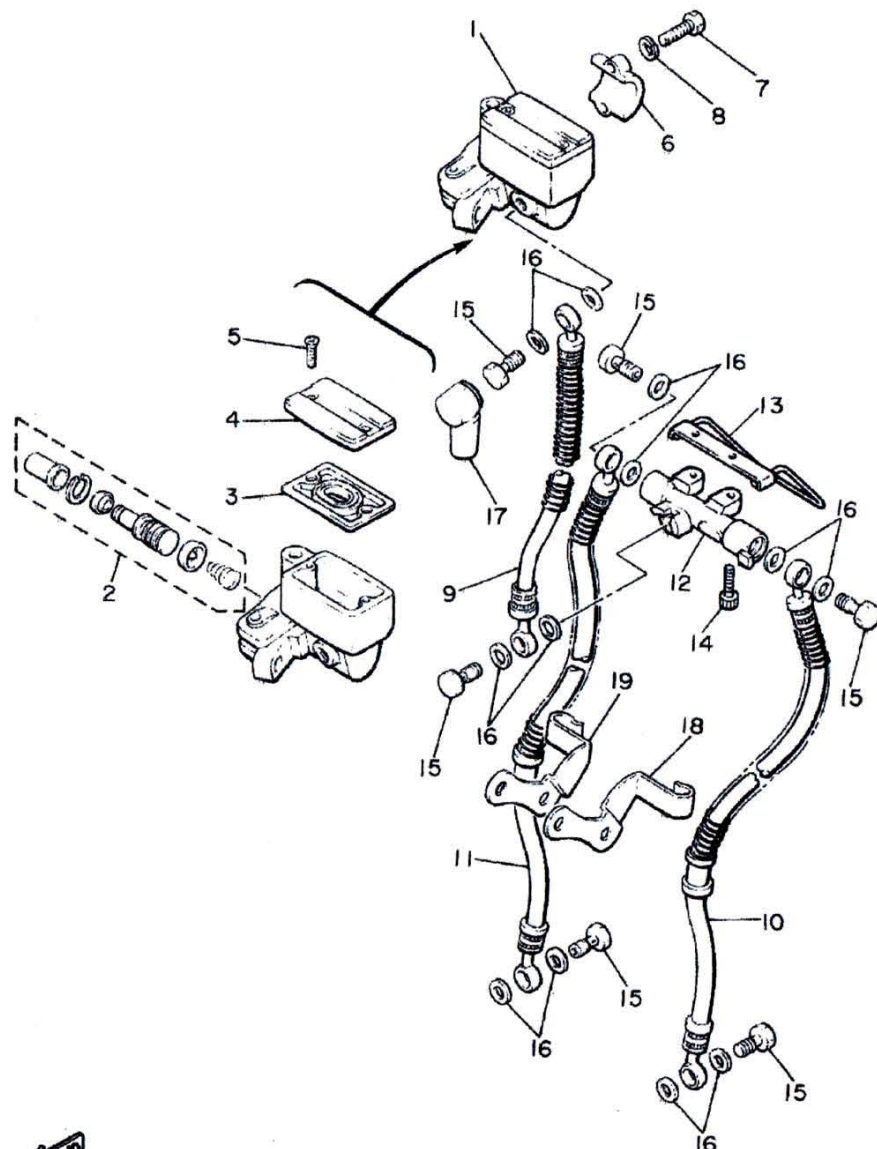

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4K0-25850-01	MASTER CYLINDER ASSY	1	
2	4K0-W0041-00	.CYLINDER KIT, master	1	
3	4K0-25854-00	.DIAPHRAGM, reservoir	1	
4	4K0-25852-00	.CAP, reservoir	1	
5	98706-04012	.SCREW, flat head	2	
6	4L0-25867-00	BRACKET, master cylinder	1	
7	97326-06025	BOLT	2	
8	92906-06100	WASHER, sPring	2	
9	5A8-25872-00	HOSE, brake 1	1	
10	5A8-25873-00	HOSE, brake 2	1	
11	5A8-25874-00	HOSE, brake	1	
12	4K0-25885-00	JOINT	1	
13	4K0-26399-01	GUIDE, cable	1	
14	91316-06020	BOLT	2	
15	90401-10034	BOLT, union	6	
16	90201-10118	WASHER, Plate	12	
17	4L0-25862-00	BOOT, master cylinder	1	
18	4E2-25875-00	HOLDER, brake hose 1	1	
19	4E2-25876-00	HOLDER, brake hose 2	1	




5A8310-1330

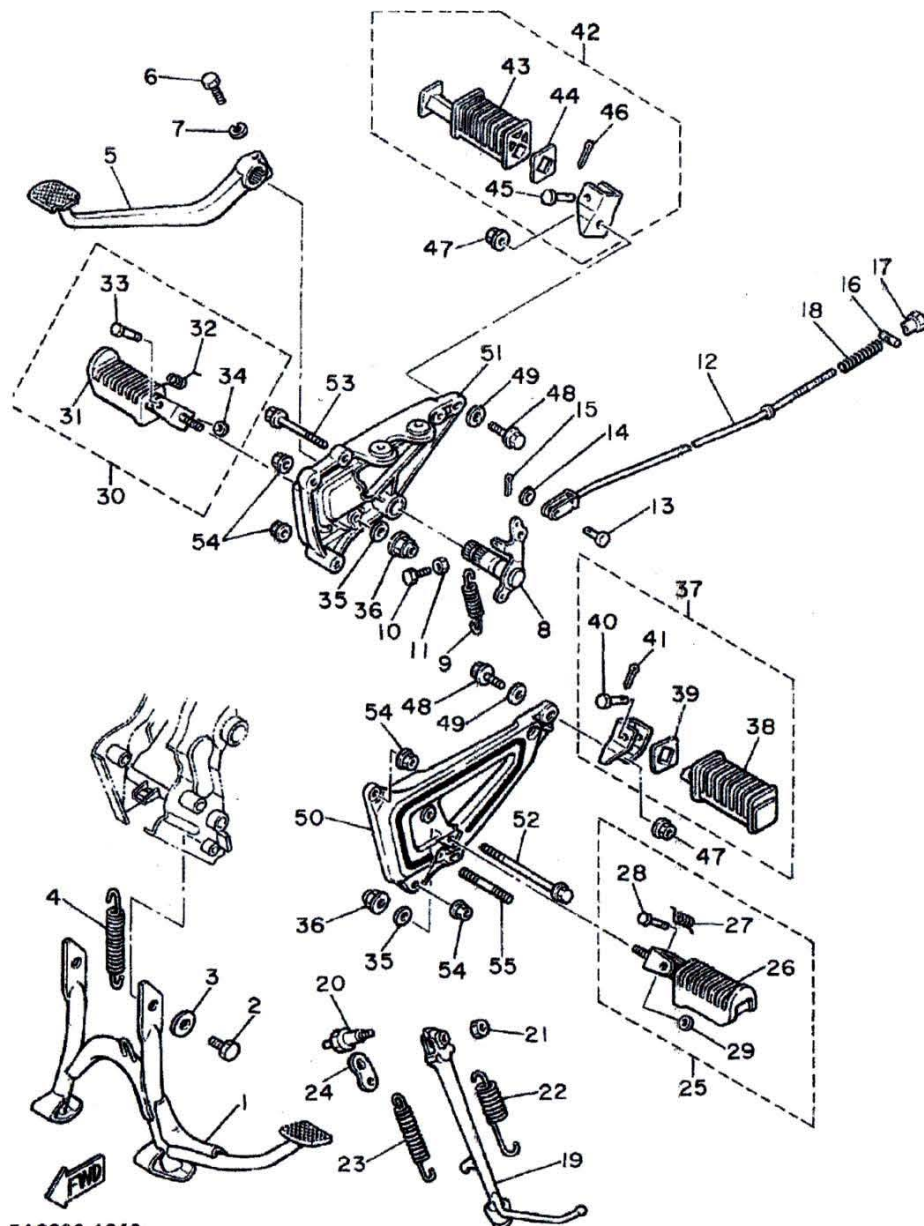

5A8300-1340

FIG. 34 STAND.FOOTREST

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-27111-00-R4	STAND, main	1	black
2	97302-10016	BOLT	2	
3	90201-10752	WASHER, Plate	2	
4	90506-35149	SPRING, tension	1	
5	5A8-27211-00-93	PEDAL, brake	1	chrome-Plated
6	90109-06468	BOLT	1	
7	92901-06100	WASHER, sPring	1	
8	5A8-27212-00	SHAFT, brake Pedal	1	
9	90506-20193	SPRING, tension	1	
10	90153-06018	SCREW, hexagon	1	
11	90170-06184	NUT	1	
12	5A8-27231-00	ROD, brake	1	
13	90240-06040	PIN, clevis	1	
14	92901-06200	WASHER, Plain	1	
15	91401-20015	PIN, cotter	1	
16	90249-12008	PIN	1	
17	90179-06176	NUT	1	
18	90501-10245	SPRING, compression	1	
19	5A8-27311-00-R4	STAND, side	1	black
20	90109-10500	BOLT	1	
21	95301-10700	NUT	1	
22	90506-26225	SPRING, tension	1	
23	90506-18224	SPRING, tension	1	
24	3Y3-27315-00	LINK, side stand	1	
25	5A8-27410-00	FRONT FOOTREST ASSY (L.H)	1	
26	1J7-27413-01	COVER, footrest	1	
27	90508-20023	SPRING, torsion	1	
28	2H9-27427-00	SAFT	1	

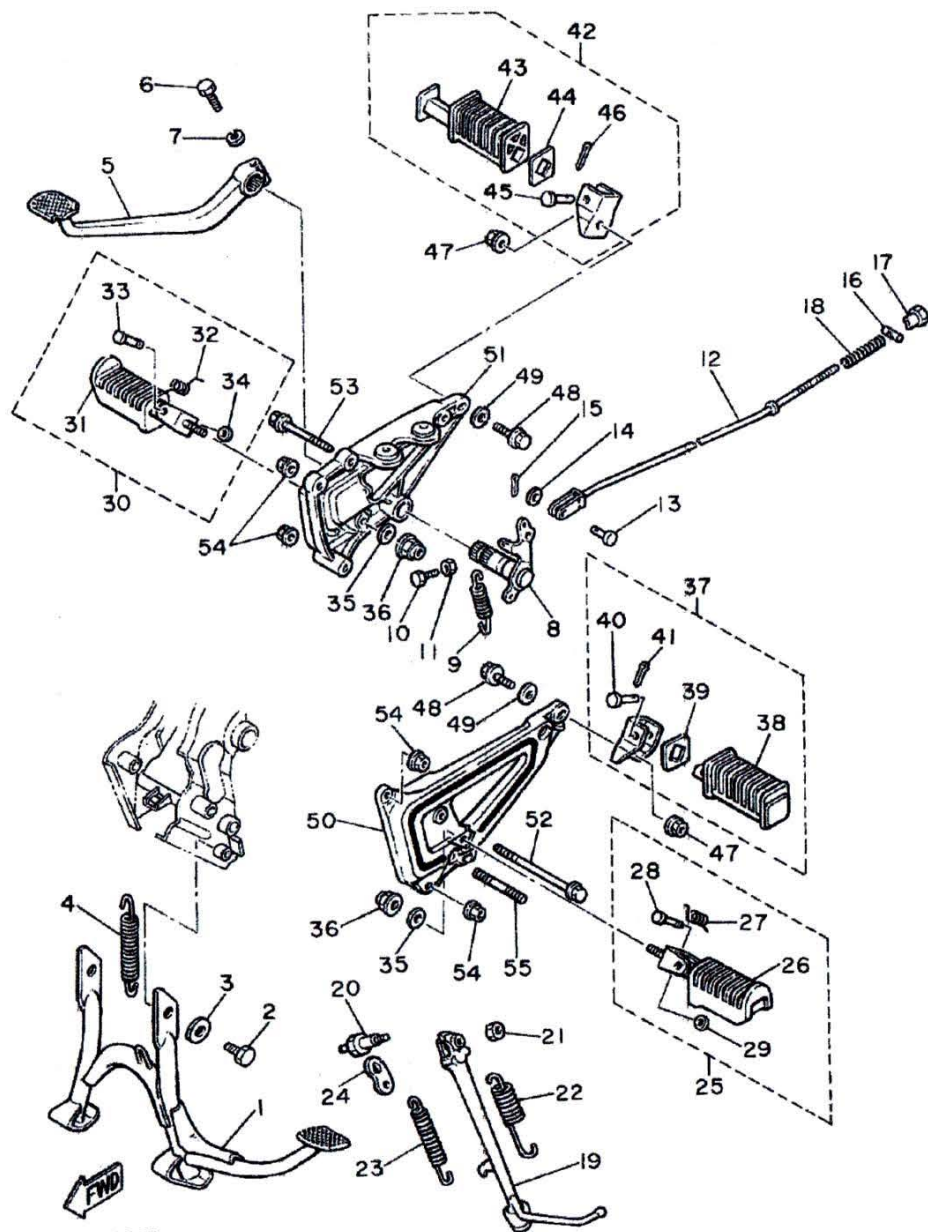


5A8300-1340

FIG. 34 STAND.FOOTREST

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90201-06042	•WASHER, Plate	1	
30	5A8-27420-00	FRONT FOOTREST ASSY (R.H)	1	
31	1J7-27413-01	•COVER, footrest	1	
32	90508-20023	•SPRING, torsion	1	
33	2H9-27427-00	•SAFT	1	
34	90201-06042	•WASHER, Plate	1	
35	90201-10136	WASHER, Plate	2	
36	90185-10060	NUT, self-locking	2	
37	5A8-27430-00	REAR FOOTREST ASSY 1	1	
38	1J7-27433-00	•COVER, rear footrest	1	
39	90209-18070	•WASHER	1	
40	91701-06035	•PIN, clevis	1	
41	91401-16012	•PIN, cotter	1	
42	5A8-27440-00	REAR FOOTREST ASSY 2	1	
43	1J7-27444-00	•COVER, rear footrest	1	
44	90209-18070	•WASHER	1	
45	91701-06035	•PIN, clevis	1	
46	91401-16012	•PIN, cotter	1	
47	90179-10321	NUT	2	
48	95826-10035	BOLT, flange	2	
49	90201-10139	WASHER, Plate	2	
50	5A8-27442-00	BRACKET 2	1	
51	5A8-27443-00	BRACKET 3	1	
52	90105-10192	BOLT, washer based	1	
53	90105-10184	BOLT, washer based	1	
54	90179-10247	NUT	4	
55	95621-10330	BOLT, stud	1	


FIG. 35 FLASHER LIGHT

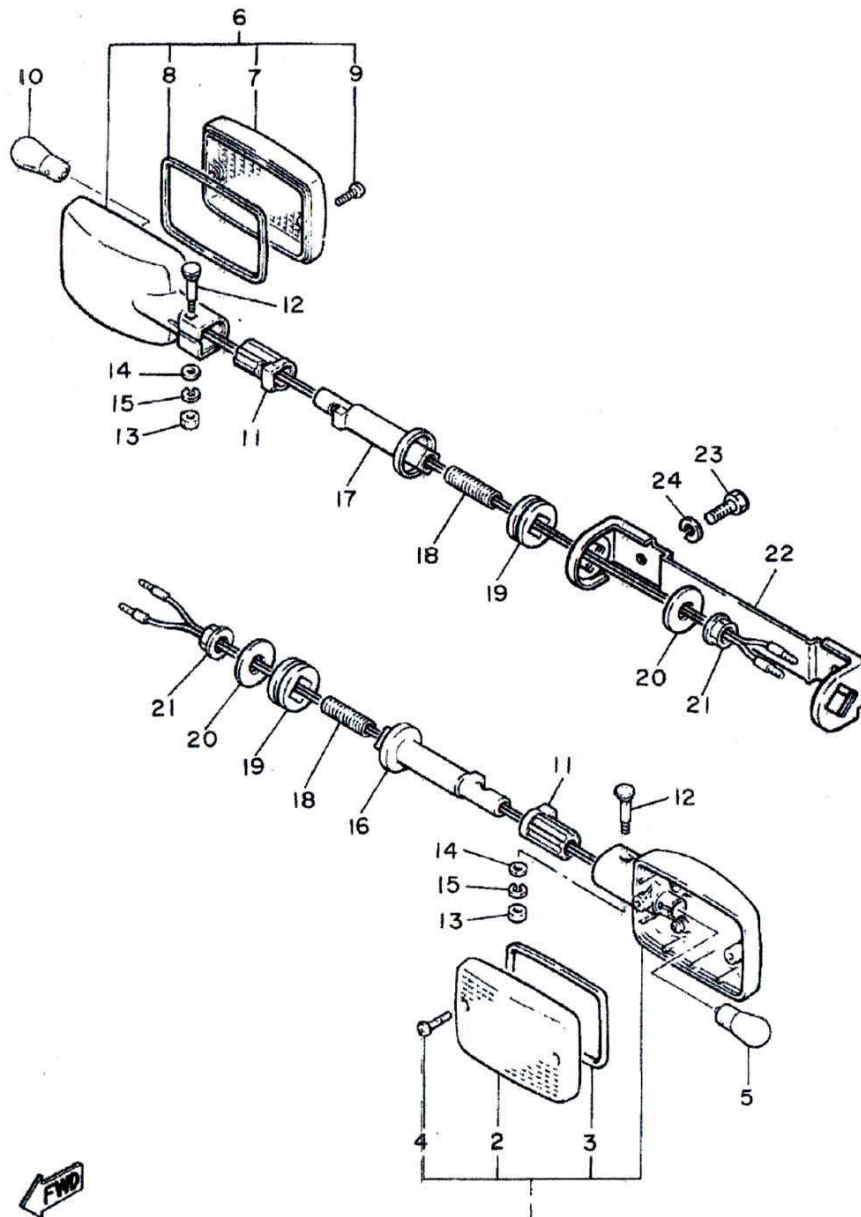

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19T-83310-40	FRONT FLASHER LIGHT ASSY 1	2	
2	4G0-83312-00	•LENS, flasher	1	
3	4G0-83313-00	•GASKET, flasher lens	1	
4	97701-40518	•SCREW, tapping	2	
5	*	BULB, flasher (12V-21W)	1	LM
6	19T-83330-40	REAR FLASHER LIGHT ASSY 1	2	
7	4V8-83312-00	•LENS, flasher	1	
8	4G0-83313-00	•GASKET, flasher lens	1	
9	97701-40518	•SCREW, tapping	2	
10	*	BULB, flasher (12V-21W)	1	LM
11	10L-83321-00	DAMPER, flasher 1	4	
12	4G0-83317-00	BOLT, flasher 1	4	
13	95301-05700	NUT	4	
14	92901-05600	WASHER, plate	4	
15	92901-05100	WASHER, spring	4	
16	19T-83318-00	STAY, flasher 1	2	
17	10L-83318-00	STAY, flasher 1	2	
18	4X7-83325-00	BOLT, flasher stay fitting	4	
19	341-83321-01	DAMPER, flasher 1	4	
20	90201-127A1	WASHER, plate	4	
21	95706-12100	NUT, flange	4	
22	19T-83328-00	STAY, flasher 2	1	
23	97306-06010	BOLT	2	
24	92906-06100	WASHER, spring	2	

19T310-2350

FIG. 36 SPEEDOMETER, TACHOMETER

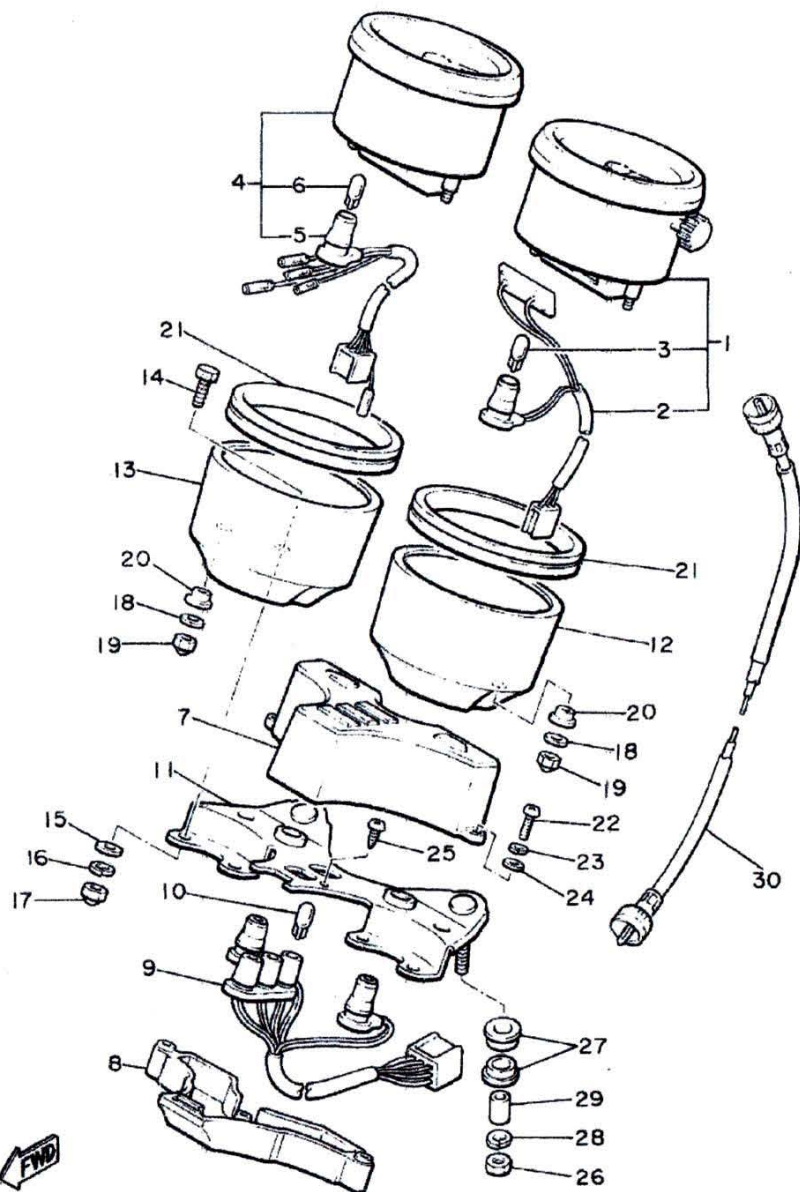


5A8310-1360

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-83570-F0	SPEEDOMETER ASSY	1	km/h
2	3G1-83536-01	.SOCKET, meter	1	
3	4G1-84744-00	.BULB (12V-3.4W)	1	
4	5A8-83540-00	TACHOMETER ASSY	1	
5	5A8-83520-00	.SOCKET CORD ASSY	1	
6	4G1-84744-00	.BULB (12V-3.4W)	1	
7	4K0-83568-00	PILOT BOX, upper	1	
8	4K0-83569-00	PILOT BOX, lower	1	
9	5A8-83509-00	SOCKET CORD ASSY	1	
10	4G1-84744-00	BULB (12V-3.4W)	5	
11	5A8-83519-00	BRACKET, meter	1	
12	19T-83507-00	COVER, sSpeedometer	1	
13	19T-83508-00	COVER, tachometer	1	
14	584-83546-00	BOLT	4	
15	92901-06200	WASHER, Plain	4	
16	92901-06100	WASHER, sPring	4	
17	95301-06800	NUT, crown	4	
18	90201-05031	WASHER, Plate	4	
19	95301-05800	NUT, crown	4	
20	584-83523-00	DAMPER	4	
21	3H3-83513-00	DAMPER	2	
22	98506-04012	SCREW, Pan head	2	
23	92906-04100	WASHER, sPring	2	
24	92906-04600	WASHER, Plate	2	
25	97701-40512	SCREW, Panhead tapping	1	
26	95301-06600	NUT	2	
27	584-83541-00	DAMPER	4	
28	92901-06100	WASHER, sPring	2	


FIG. 36 SPEEDOMETER. TACHOMETER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90387-06249	COLLAR	2	
30	5A8-83550-00	SPEEDOMETER CABLE ASSY	1	

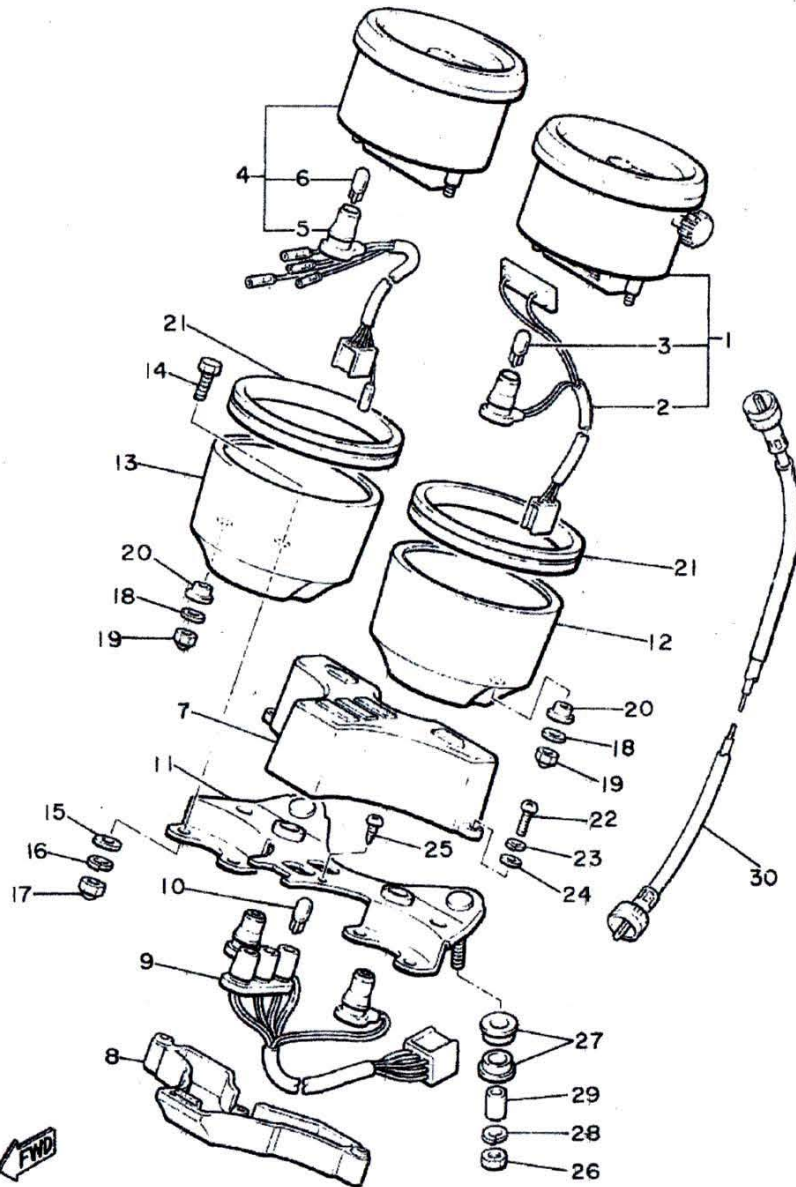

5A8310-1360


FIG. 37 HEADLIGHT

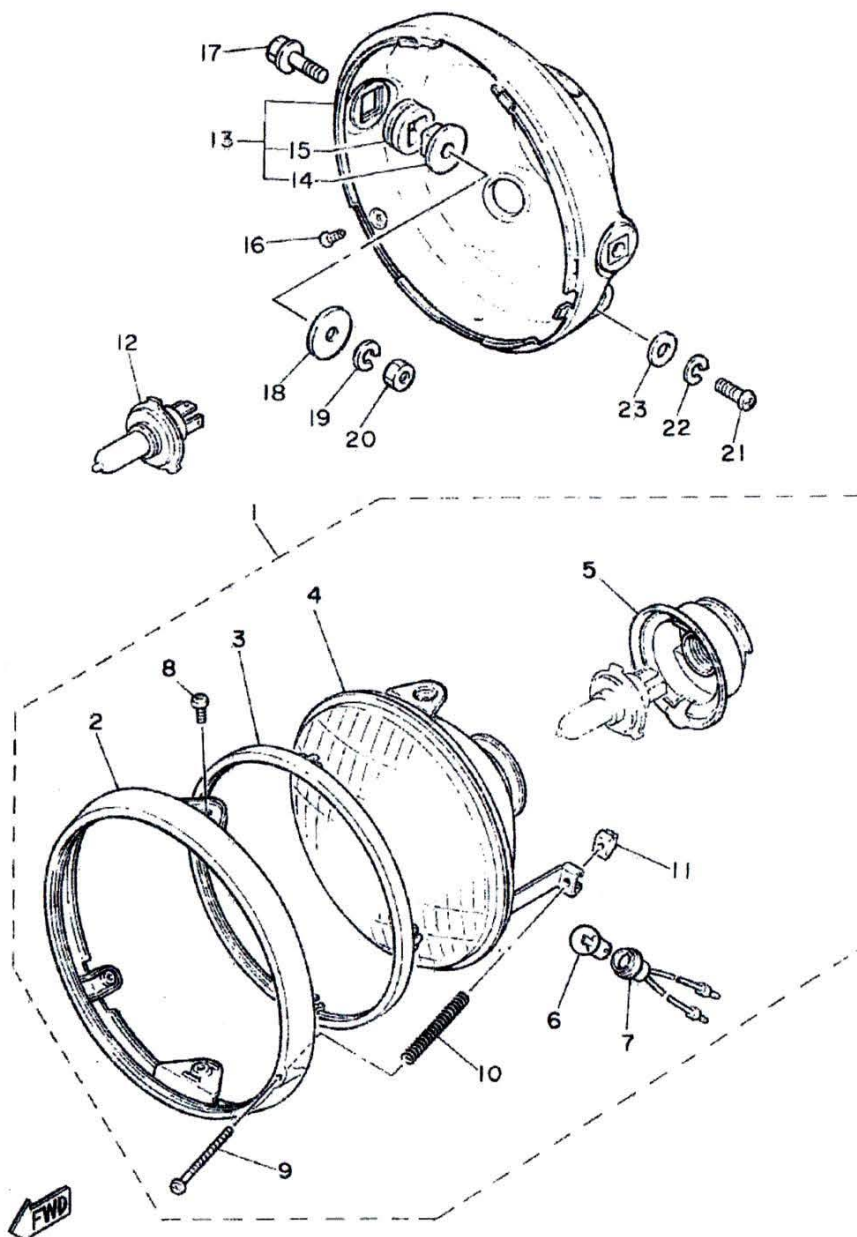

5A8351-1370

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-84303-G0	HEADLIGHT UNIT ASSY	1	
2	5A8-84315-00	•RIM, headlight	1	
3	4E2-84395-00	•RING, retaining	1	
4	4E2-84321-G0	•LENS, headlight	1	
5	4E2-84397-00	•COVER, socket	1	
6	4E2-84347-00	•BULB (12V-4W)	1	
7	457-84146-85	•SOCKET, Pilot light	1	
8	98501-05010	•SCREW, Pan head	2	
9	447-84331-61	•SCREW, rim adjusting	1	
10	447-84332-60	•SPRING, screw	1	
11	198-84334-60	•NUT, adjusting	1	
12	*	BULB (12V-60/55W)	1	LM
13	5A8-84330-00-33	BODY ASSY	1	yamaha black
14	584-84338-60	•COLLAR, body fitting	2	
15	584-84345-60	•DAMPER, headlight	2	
16	90152-05005	SCREW, countersunk	2	
17	90105-08172	BOLT, washer based	2	
18	90209-08098	WASHER	2	
19	92902-08100	WASHER, sPring	2	
20	95302-08600	NUT	2	
21	92506-06016	SCREW, Pan head	1	
22	92906-06100	WASHER, sPring	1	
23	90201-06057	WASHER, Plate	1	

FIG. 38 TAILLIGHT

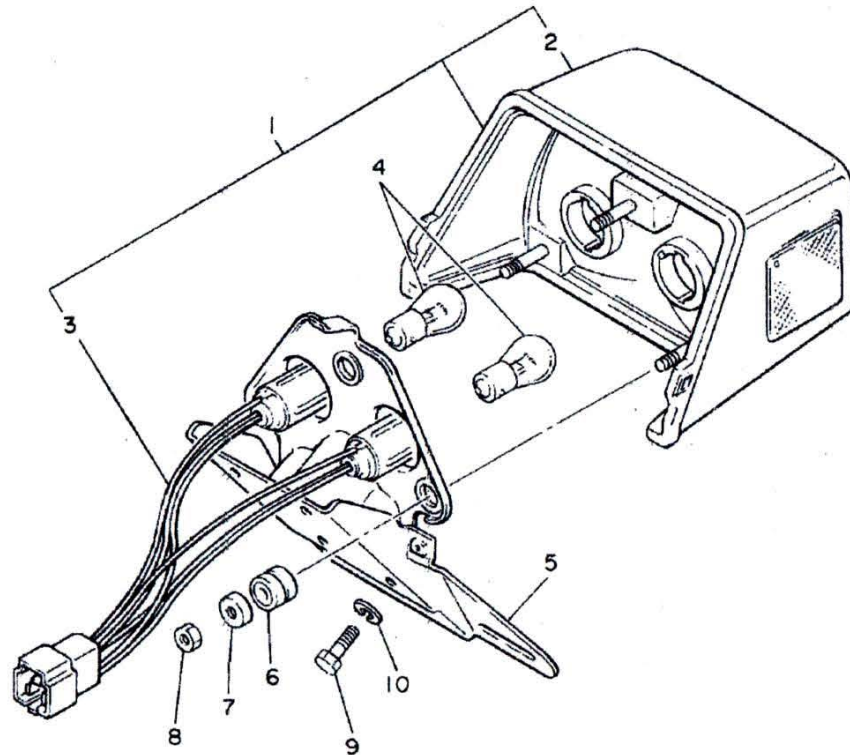

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4V8-84710-45	TAILLIGHT UNIT ASSY	1	
2	4V8-84721-45	.LENS, taillight	1	
3	4V8-84735-45	.CORD ASSY	1	
4	*	BULB (12V-21/5W)	2	LM
5	4V8-84751-40	BRACKET, licence	1	
6	4G0-84754-00	WASHER, sPecial	3	
7	4G0-84725-00	WASHER, sPecial	3	
8	95302-06600	NUT	3	
9	97302-06012	BOLT	4	
10	92902-06100	WASHER, sPring	4	



19T310-2380

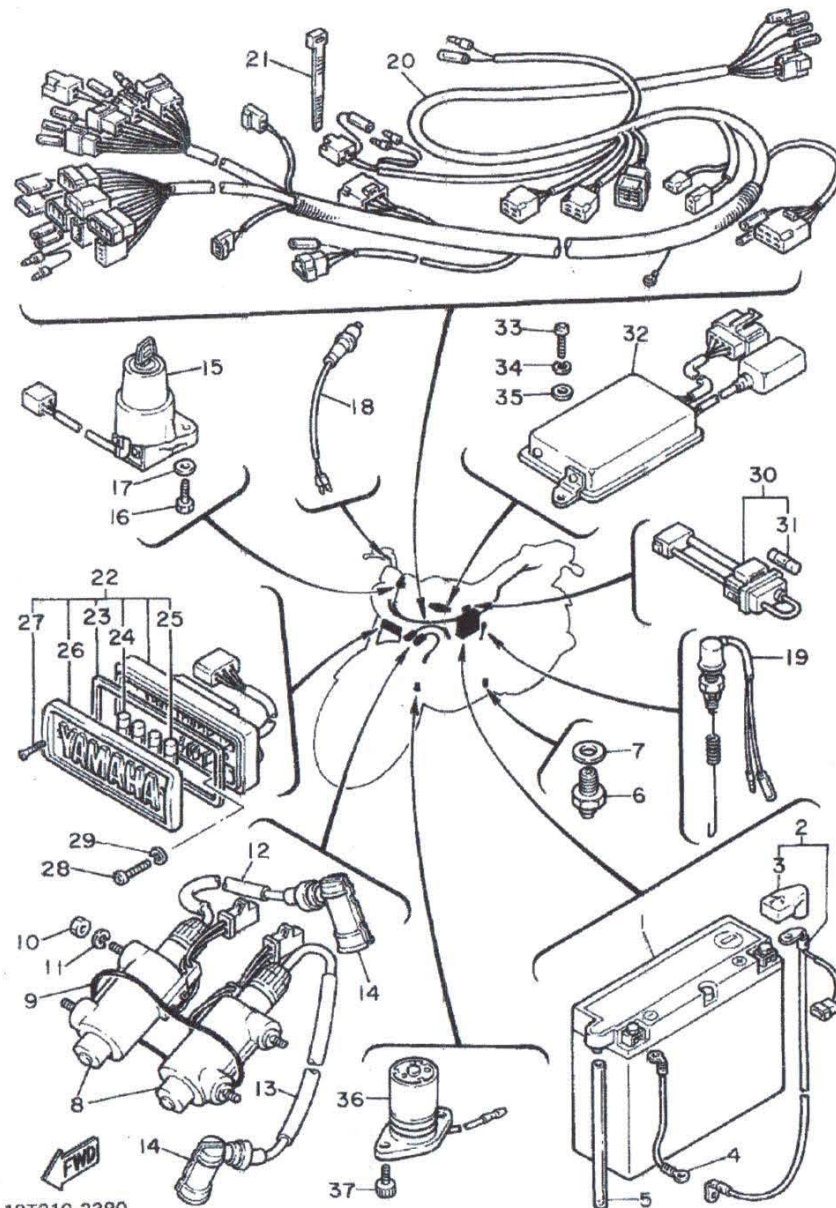


FIG. 39 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2H8-82110-61	BATTERY ASSY (G.S. GM18Z-3A)	1	
2	5A8-82115-01	WIRE, Plus lead	1	
3	4X7-82119-00	COVER, lead wire	1	
4	5A8-82116-00	WIRE, minus lead	1	
5	90445-08338	HOSE	1	
6	2H7-82540-00	NEUTRAL SWITCH ASSY	1	
7	90430-10148	GASKET	1	
8	4X7-82310-70	IGNITION COIL ASSY	2	
9	93210-64297	O-RING	1	
10	95302-06600	NUT	4	
11	92902-06100	WASHER, sPring	4	
12	4X7-82341-00	CORD, high tension 1	1	
13	4X7-82342-00	CORD, high tension 2	1	
14	1J7-82370-10	PLUG CAP ASSY	2	with noise sup- Presser
15	3Y8-82508-00	MAIN SWITCH ASSY	1	
16	97301-06016	BOLT	2	
17	92902-06600	WASHER	2	
18	1A0-83980-30	FRONT STOP SWITCH ASSY	1	
19	5A8-82530-00	STOP SWITCH ASSY	1	
20	19T-82590-70	WIRE HARNESS assy	1	
21	5A8-82591-00	BAND		
22	5A8-82170-00	FUSE BOX ASSY		
23	4X7-82175-00	GASKET	1	
24	1A0-82151-00	FUSE (12V-10A)	3	
25	4X7-82151-00	FUSE (12V-15A)	3	
26	4X7-82172-00	COVER, fuse box	1	
27	98906-04010	SCREW, bind	2	
28	92502-06030	SCREW, Pan head	2	


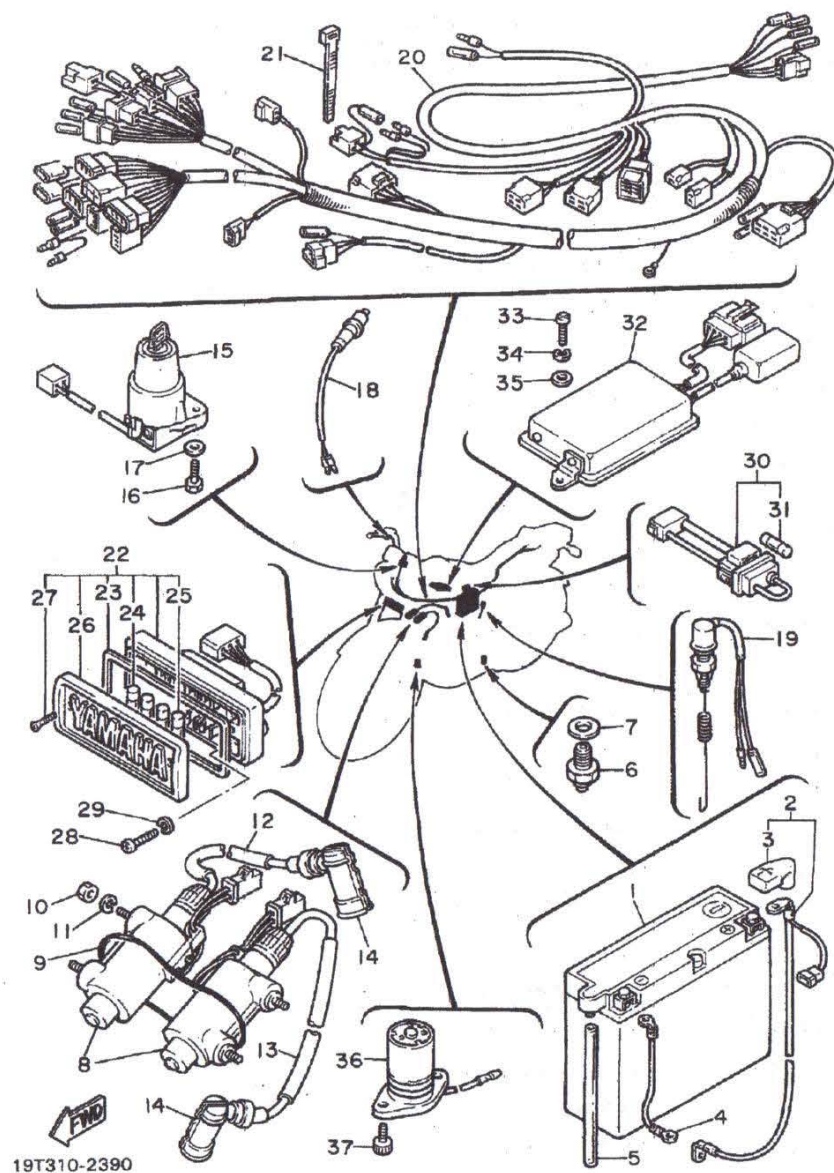


FIG. 39 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	92902-06100	WASHER, sPring	2	
30	3H5-82150-00	FUSE HOLDER ASSY	1	
31	2H7-82151-00	FUSE (12V-30A)	2	
32	4X7-82305-21	IGNITOR UNIT ASSY	1	
33	92501-06012	SCREW, Pan head	2	
34	92902-06100	WASHER, sPring	2	
35	92902-06600	WASHER	2	
36	4X7-85720-00	OIL LEVEL GAUGE ASSY	1	
37	91311-06016	BOLT	2	

FIG. 40 ELECTRICAL 2

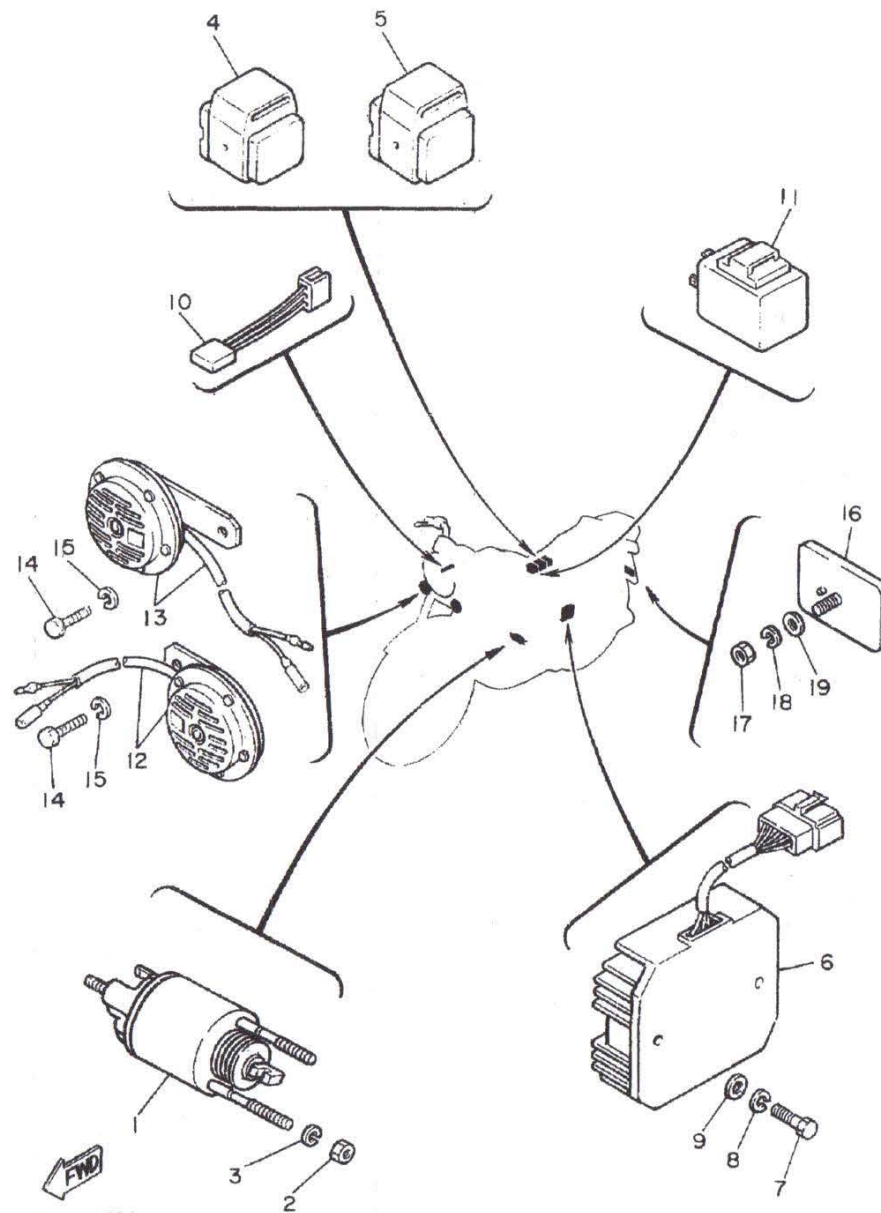

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5A8-86110-50	SOLENOID	1	
2	95301-08700	NUT	2	
3	92902-08100	WASHER, sPring	2	
4	5A8-81950-00	RELAY ASSY	1	
5	4H7-81950-01	STARTER CIRCUIT CUT-OFF RELAY	1	
6	5A8-81960-A0	RECTIFIER & REGULATOR ASSY	1	
7	97302-06030	BOLT	2	
8	92902-06100	WASHER, sPring	2	
9	92902-06600	WASHER	2	
10	4L6-81980-M0	DIODE	1	
11	4K0-83350-40	FLASHER RELAY ASSY	1	
12	5A8-83371-20	HORN	1	
13	5A8-83371-30	HORN	1	
14	97306-08014	BOLT	2	
15	92906-08100	WASHER, sPring	2	
16	3Y6-85130-00	REAR REFLECTOR ASSY	1	
17	95302-05600	NUT	1	
18	92902-05100	WASHER, sPring	1	
19	92902-05200	WASHER	1	

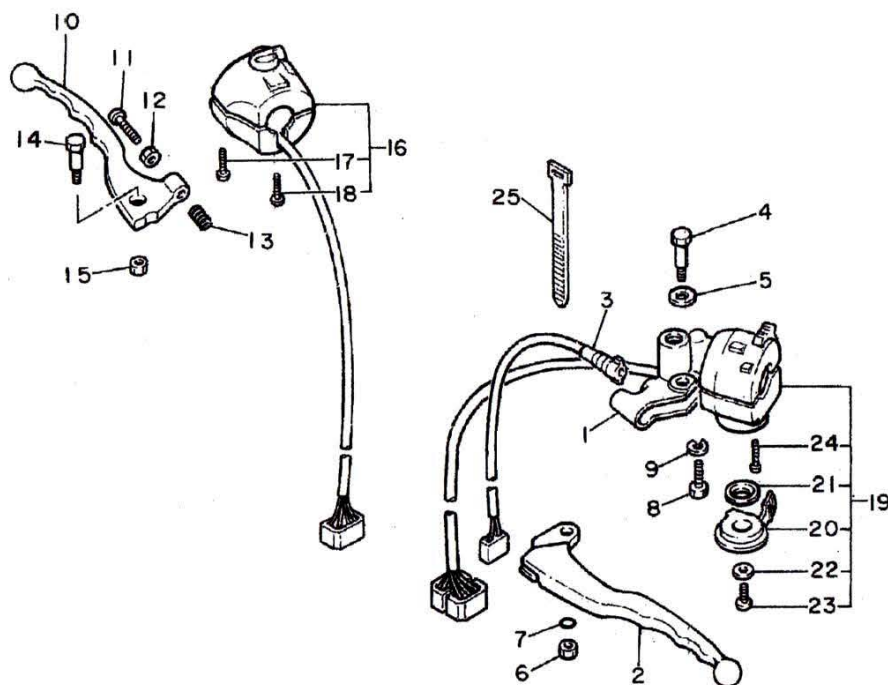


FIG. 41 HANDLE SWITCH•LEVER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4K0-82911-00	HOLDER, lever 1	1	
2	2H7-83912-00	LEVER 1	1	
3	3Y6-82917-00	SWITCH	1	
4	2H7-83945-00	BOLT, lever	1	
5	90201-08083	WASHER, Plate	1	
6	95601-06100	NUT, u	1	
7	93210-11368	O-RING	1	
8	97306-06022	BOLT	1	
9	92906-06100	WASHER, sPring	1	
10	2J2-83922-00	LEVER 2	1	
11	90149-06131	SCREW	1	
12	90170-06010	NUT	1	
13	90501-10312	SPRING, comPression	1	
14	90109-06465	BOLT	1	
15	95601-06100	NUT, u	1	
16	1U3-83963-40	SWITCH, handle 3	1	
17	98506-05030	•SCREW, Pan head	1	
18	98506-05040	•SCREW, Pan head	1	
19	4K0-83972-00	SWITCH, handle 4	1	
20	4H7-83941-00	•LEVER, starter	1	
21	90209-10131	•WASHER	1	
22	92901-06200	•WASHER, Plain	1	
23	97323-06008	•BOLT	1	
24	98506-05030	•SCREW, Pan head	2	
25	437-83936-00	BAND, switch cord	2	

5A8310-141

INDIVIDUAL SPEC.

FOR AUSTRIA BELGIUM HOLLAND ITALY

The following pages provides a listing of only the parts that meet the specifications peculiar to your market. For those parts not appearing in these pages, refer to the "GENERAL SPEC" section.

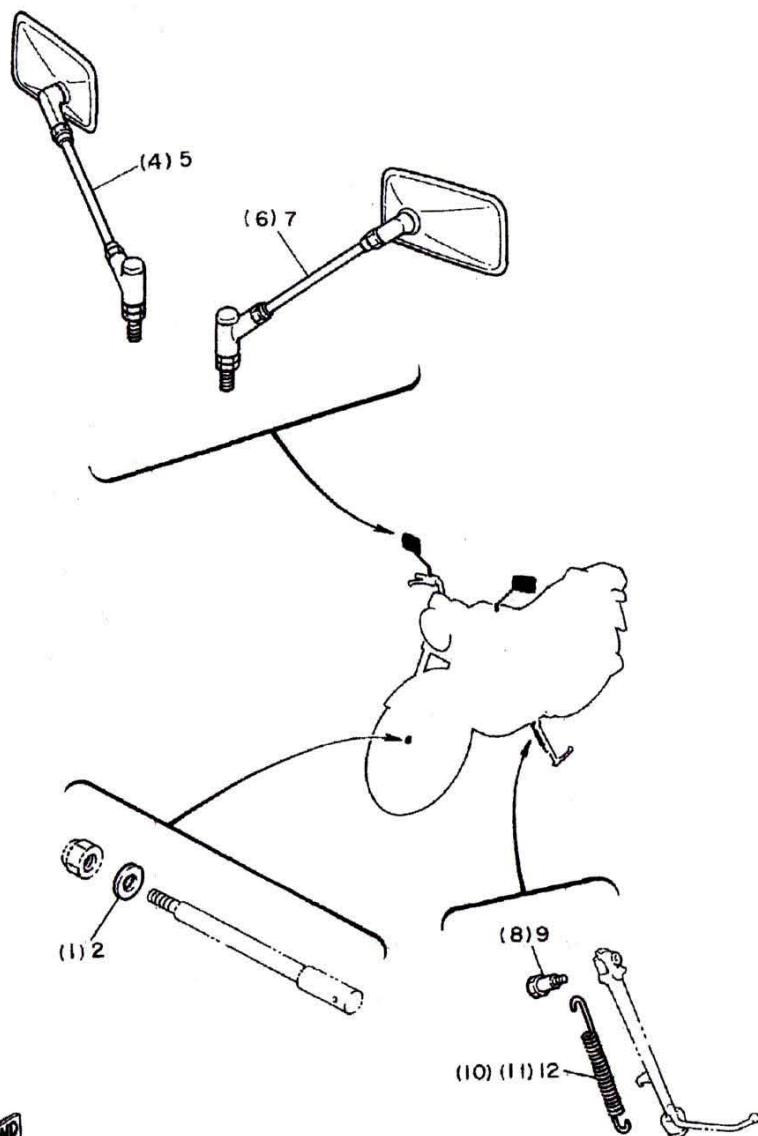


FIG. 42 CHASSIS

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	90209-14136	WASHER	*	
2	92901-14200	WASHER, Plain	1	
3	521-25188-00	CAP	*	
4	5A8-26290-00	BACK MIRROR ASSY	*	
5	4H7-26290-70	BACK MIRROR ASSY	1	
6	5A8-26290-10	BACK MIRROR ASSY	*	
7	4H7-26290-20	BACK MIRROR ASSY	1	
8	90109-10500	BOLT	*	
9	90109-10473	BOLT	1	
10	90506-26225	SPRING, tension	*	
11	90506-18224	SPRING, tension	*	
12	90507-29009	SPRING, tension	1	
13	3Y3-27315-00	LINK, side stand	*	

* For Convenience of reference:

Disregard the items asterisked (*) in the "QTY" column. These are intended for GENERAL SPEC, and NOT for INDIVIDUAL SPEC.

19T300-2420


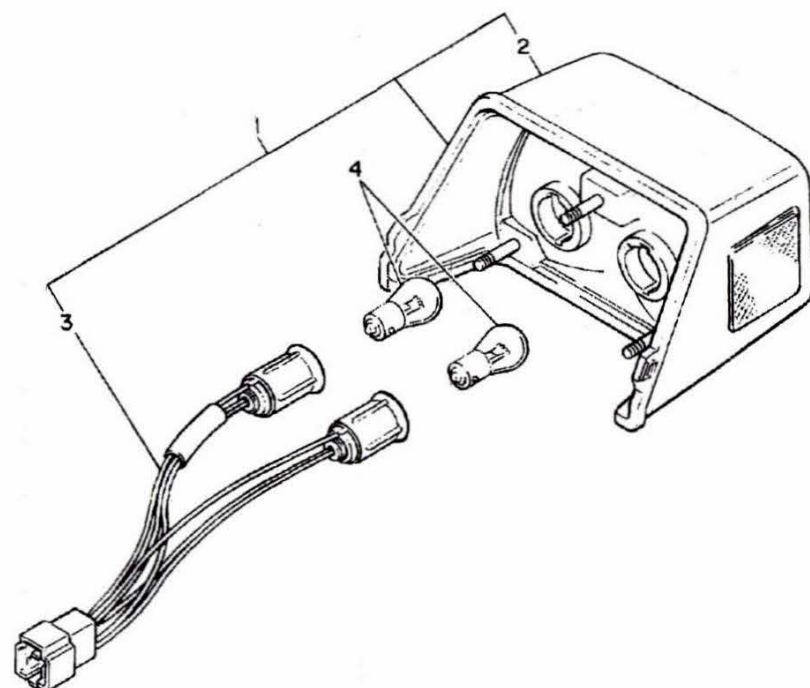


FIG. 43 TAILLIGHT

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4V8-84710-40	TAILLIGHT UNIT ASSY	1	
2	4V8-84721-00	.LENS, taillight	1	
3	4V8-84735-00	.CORD ASSY	1	
4	*	BULB (12V-21/5W)	2	LM



19T300-2430

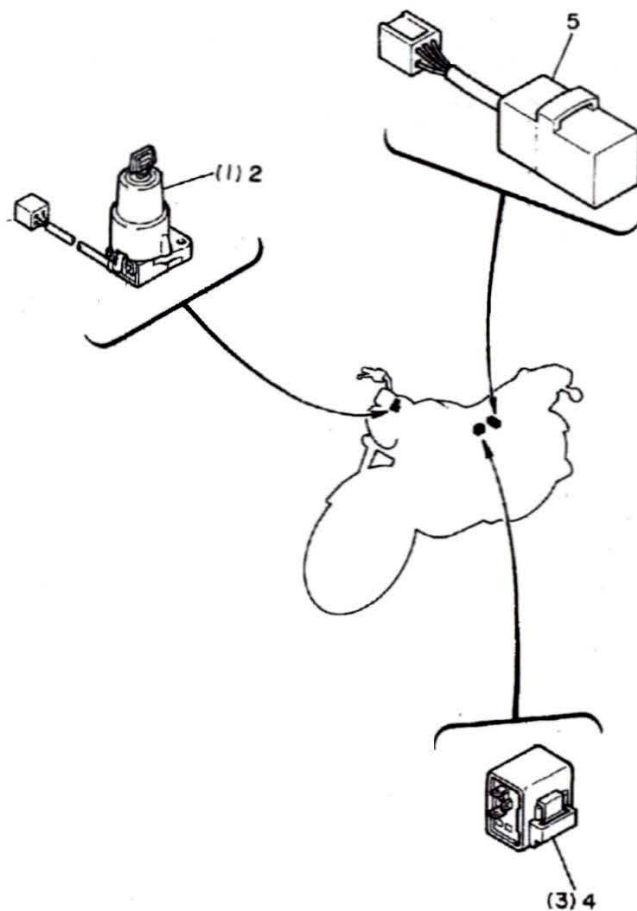

5A8300-1450

FIG. 44 ELECTRICAL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3Y8-82508-00	MAIN SWITCH ASSY	*	
2	3Y6-82508-80	MAIN SWITCH ASSY	1	
3	4K0-83350-40	FLASHER RELAY ASSY	*	
4	4E6-83350-40	FLASHER RELAY ASSY	1	
5	1A0-83395-03	FLASHER CANCELLING UNIT	1	

* For Convenience of reference:

Disregard the items asterisked (*) in the "QTY" column. These are intended for GENERAL SPEC. and NOT for INDIVIDUAL SPEC.

**FOR DENMARK
FINLAND
NORWAY
SWEDEN
SWITZERLAND**

The following pages provides a listing of only the parts that meet the specifications peculiar to your market. For those parts not appearing in these pages, refer to the "GENERAL SPEC" section.

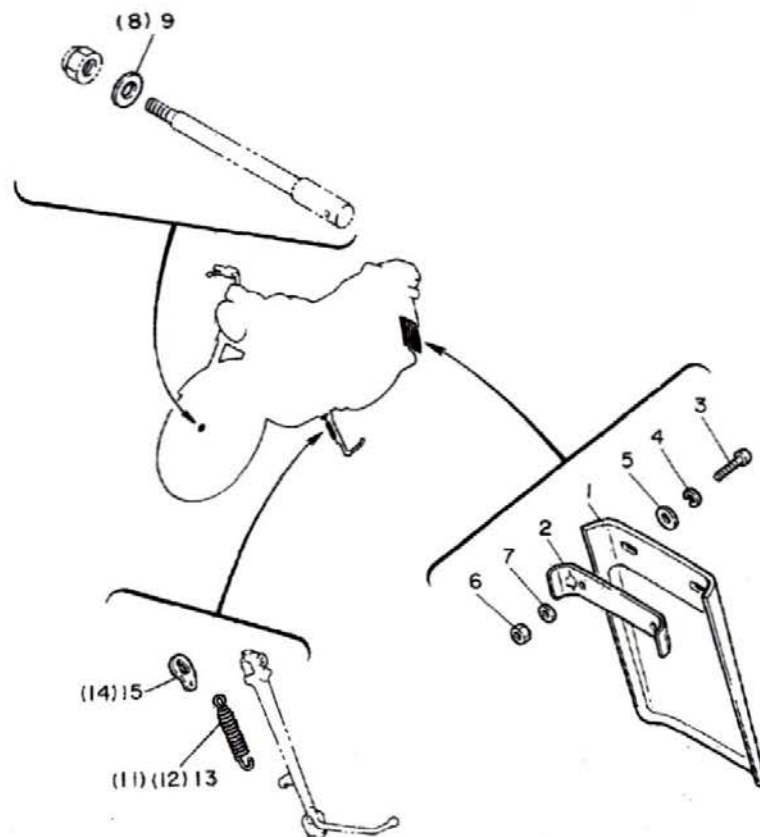


FIG. 45 CHASSIS

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	1H2-21621-00	FLAP	1	
2	1H2-21622-90	BAND, flap	1	
3	92506-06020	SCREW, Pan head	2	
4	92906-06100	WASHER, sPring	2	
5	90201-06057	WASHER, Plate	2	
6	96302-06600	NUT	2	
7	92902-06600	WASHER	2	
8	90209-14136	WASHER	*	
9	92901-14200	WASHER, Plain	1	
10	521-25188-00	CAP	*	
11	90506-26225	SPRING, tension	*	
12	90506-18224	SPRING, tension	*	
13	90507-32020	SPRING, tension	1	
14	3Y3-27315-00	LINK, side stand	*	
15	458-27315-00	LINK, side stand	1	

* For Convenience of reference:

Disregard the items asterisked (*) in the "QTY" column. These are intended for GENERAL SPEC, and NOT for INDIVIDUAL SPEC.

19T300-2450


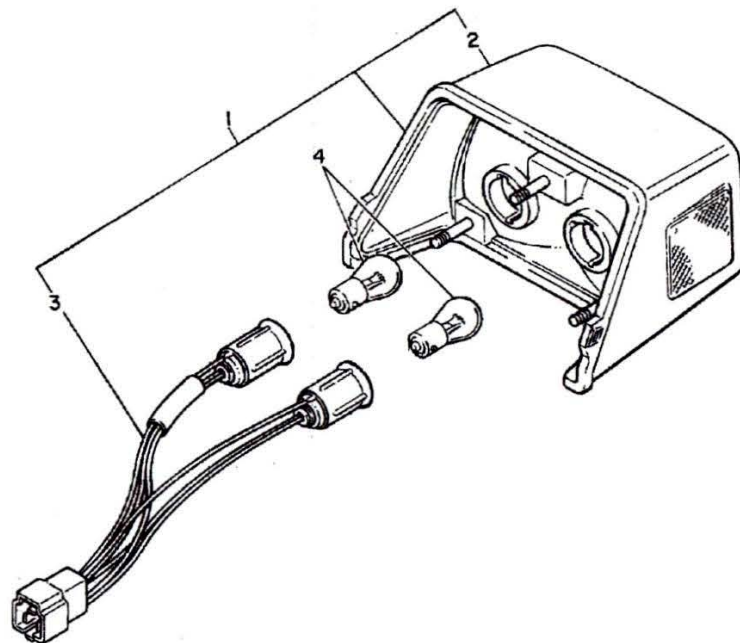


FIG. 46 TAILLIGHT

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	4V8-84710-40	TAILLIGHT UNIT ASSY	1	
2	4V8-84721-00	•LENS, taillight	1	
3	4V8-84735-00	•CORD ASSY	1	
4	*	BULB (12V-21/5W)	2	LM



19T300-2430

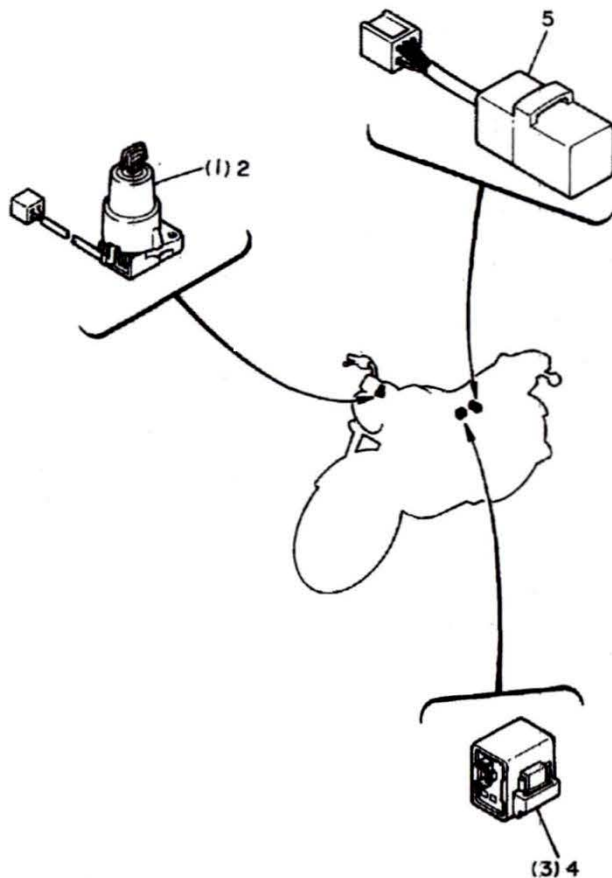

5A8300-1460

FIG. 47 ELECTRICAL

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3Y8-82508-00	MAIN SWITCH ASSY	*	
2	3Y6-82508-80	MAIN SWITCH ASSY	1	
3	4K0-83350-40	FLASHER RELAY ASSY	*	
4	4E6-83350-40	FLASHER RELAY ASSY	1	
5	1A0-83395-03	FLASHER CANCELLING UNIT	1	

* For Convenience of reference:

Disregard the items asterisked (*) in the "QTY" column. These are intended for GENERAL SPEC, and NOT for INDIVIDUAL SPEC.

INDEX

(GENERAL SPEC.)

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
4X7-W0005-00	24-16	5A8-11631-00-A0	3- 5	4X7-13541-00	8-11	4X7-14921-07	9-21	4X7-16321-00	16-28	136-18542-00	18- 7
4K0-W0041-00	33- 2	5A8-11631-00-X0	3- 5	4X7-13542-00	8-12	4X7-14925-24	9-31	4X7-16324-00	16-26	5A8-21110-01-33	20- 1
4K0-W0045-00	30-13	5A8-11633-00	3- 7	4X7-13543-01	8- 5	4X7-14925-26	9-29	4X7-16325-00	16-29	19T-21165-00	28-26
	30-22	5A8-11635-00	3- 5	4X7-13544-00	8- 3	4X7-14933-10	9- 8	4X7-16340-00	16-12	5A8-21171-00	22-18
1J3-W0047-00	30- 7	5A8-11636-00	3- 5	4X7-13556-00	8- 8	4X7-14940-01	9-22	2H7-16341-00	16- 9	19T-21190-00-33	20- 2
	30-16	5A8-11637-00	3- 5	4X7-13586-01	8- 1	4H7-14945-00	9-20	2H7-16343-00	16-10	19T-21248-00	21-20
1J3-W0048-00	30-11	5A8-11638-00	3- 5	4X7-13595-00	8-14	4X7-14948-43	9-30	4X7-16351-00	16-30		
	30-20	4X7-11654-01	3-10	4X7-13596-00	8- 2	4X7-14962-00	9-37	4X7-16356-00	16-18	4X7-21315-00	20-13
1J3-W0057-00	30- 6		3-13	4X7-14121-00	9-26	4X7-14975-00	9- 6	4X7-16357-00	16-17	4X7-21316-00	20-14
	30-15	4X7-11656-00	3-15	4H7-14173-00	9- 5	4X7-14976-00	9- 7	4X7-16371-00	16-23	4X7-21317-00	20- 7
3H3-W0092-00	27- 9	4X7-11656-10	3-15	4X7-14186-00	9-23	4X7-14984-00	9-19	4X7-16383-01	16-25	5A8-2137W-00-33	20-31
	27-15	4X7-11656-20	3-15	4X7-14188-00	9-36	4X7-14985-00	9-18	4X7-16384-00	16-24	5A8-2137X-00-33	20-32
5A8-W2121-00	22-29	4X7-11656-30	3-15	4X7-14191-01	9-24	4X7-14987-02	8-18	4X7-16385-00	16-27	5A8-2137Y-00-33	20-33
4X7-W2171-00	28-32	4X7-11656-40	3-15	4X7-14197-02	8-17	5A8-15100-02	11- 1	2H7-16395-01	16- 8	5A8-21399-00	20-41
4X7-W2241-00	24-19	5G5-11656-00	3-19	4X7-14211-01	9-28	2H7-15361-00	12- 3	2H7-16396-00	16- 6	5A8-21430-00	20-19
5A8-W2341-00-98	26-10	5G5-11656-10	3-19	4X7-14267-00	9-38	4X7-15361-00	12- 2	4X7-17121-00	17- 5	5E4-21458-00	20-24
19T-W2472-00	28- 1	5G5-11656-20	3-19	4X7-14321-01	9-25	4X7-15363-00	11-16	4X7-17141-00	17- 2	4X7-21485-00	20-18
5A8-Y1165-00	3- 9	2J2-12111-01	5- 1	4X7-14371-01	9- 4	4X7-15388-00	12-29	4X7-17151-01	17- 6	4X7-2149Y-00	20-26
5A8-Y1166-00	3-12	4X7-12116-00	5- 3	4X7-14390-00	9-16	5A8-15411-00	12- 1	4X7-17211-00	17-21	4X7-21491-00	20-21
4X7-1111F-00	1-29	4X7-12117-00	5- 7	4X7-14401-00	8-28	4X7-15415-00	12-14	4X7-17221-00	17-13	5A8-21510-00-63	21- 1
4X7-1111H-00	1-19	4X7-12118-00	5- 8	10L-14407-00	8-23	4X7-15417-00	12-18	4X7-17231-00	17-17	1A0-21518-00	21- 4
5A8-11110-00	1- 1	341-12119-02	5- 6	4X7-1441J-00	8-36	5A8-15419-00	12-21	4X7-17241-00	17-20	19T-21611-00	21- 5
4X7-11127-00	1- 4	5A8-12121-00	5- 2	4X7-14422-00	8-31	4X7-15421-01	12-27	4X7-17251-01	17-16	19T-21629-00	21-15
4X7-11133-10	1- 3	4X7-12151-00	5- 9	5A8-14437-00	8-30	4X7-15425-00	12-16	4X7-17402-00	17-12	19T-21631-00	21-21
4X7-11145-00	4-12	4X7-12156-00	5-10	4X7-14451-00	8-29	5A8-15429-00	12-24</				

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
4X7-W0005-00	24-16	5A8-11631-00-A0	3- 5	4X7-13541-00	8-11	4X7-14921-07	9-21	4X7-16321-00	16-28	136-18542-00	18- 7
4K0-W0041-00	33- 2	5A8-11631-00-X0	3- 5	4X7-13542-00	8-12	4X7-14925-24	9-31	4X7-16324-00	16-26	5A8-21110-01-33	20- 1
4K0-W0045-00	30-13	5A8-11633-00	3- 7	4X7-13543-01	8- 5	4X7-14925-26	9-29	4X7-16325-00	16-29	19T-21165-00	28-26
	30-22	5A8-11635-00	3- 5	4X7-13544-00	8- 3	4X7-14933-10	9- 8	4X7-16340-00	16-12	5A8-21171-00	22-18
1J3-W0047-00	30- 7	5A8-11636-00	3- 5	4X7-13556-00	8- 8	4X7-14940-01	9-22	2H7-16341-00	16- 9	19T-21190-00-33	20- 2
	30-16	5A8-11637-00	3- 5	4X7-13586-01	8- 1	4H7-14945-00	9-20	2H7-16343-00	16-10	19T-21248-00	21-20
1J3-W0048-00	30-11	5A8-11638-00	3- 5	4X7-13595-00	8-14	4X7-14948-43	9-30	4X7-16351-00	16-30		
	30-20	4X7-11654-01	3-10	4X7-13596-00	8- 2	4X7-14962-00	9-37	4X7-16356-00	16-18	4X7-21315-00	20-13
1J3-W0057-00	30- 6		3-13	4X7-14121-00	9-26	4X7-14975-00	9- 6	4X7-16357-00	16-17	4X7-21316-00	20-14
	30-15	4X7-11656-00	3-15	4H7-14173-00	9- 5	4X7-14976-00	9- 7	4X7-16371-00	16-23	4X7-21317-00	20- 7
3H3-W0092-00	27- 9	4X7-11656-10	3-15	4X7-14186-00	9-23	4X7-14984-00	9-19	4X7-16383-01	16-25	5A8-2137W-00-33	20-31
	27-15	4X7-11656-20	3-15	4X7-14188-00	9-36	4X7-14985-00	9-18	4X7-16384-00	16-24	5A8-2137X-00-33	20-32
5A8-W2121-00	22-29	4X7-11656-30	3-15	4X7-14191-01	9-24	4X7-14987-02	8-18	4X7-16385-00	16-27	5A8-2137Y-00-33	20-33
4X7-W2171-00	28-32	4X7-11656-40	3-15	4X7-14197-02	8-17	5A8-15100-02	11- 1	2H7-16395-01	16- 8	5A8-21399-00	20-41
4X7-W2241-00	24-19	5G5-11656-00	3-19	4X7-14211-01	9-28	2H7-15361-00	12- 3	2H7-16396-00	16- 6	5A8-21430-00	20-19
5A8-W2341-00-98	26-10	5G5-11656-10	3-19	4X7-14267-00	9-38	4X7-15361-00	12- 2	4X7-17121-00	17- 5	5E4-21458-00	20-24
19T-W2472-00	28- 1	5G5-11656-20	3-19	4X7-14321-01	9-25	4X7-15363-00	11-16	4X7-17141-00	17- 2	4X7-21485-00	20-18
5A8-Y1165-00	3- 9	2J2-12111-01	5- 1	4X7-14371-01	9- 4	4X7-15388-00	12-29	4X7-17151-01	17- 6	4X7-2149Y-00	20-26
5A8-Y1166-00	3-12	4X7-12116-00	5- 3	4X7-14390-00	9-16	5A8-15411-00	12- 1	4X7-17211-00	17-21	4X7-21491-00	20-21
4X7-1111F-00	1-29	4X7-12117-00	5- 7	4X7-14401-00	8-28	4X7-15415-00	12-14	4X7-17221-00	17-13	5A8-21510-00-63	21- 1
4X7-1111H-00	1-19	4X7-12118-00	5- 8	10L-14407-00	8-23	4X7-15417-00	12-18	4X7-17231-00	17-17	1A0-21518-00	21- 4
5A8-11110-00	1- 1	341-12119-02	5- 6	4X7-1441J-00	8-36	5A8-15419-00	12-21	4X7-17241-00	17-20	19T-21611-00	21- 5
4X7-11127-00	1- 4	5A8-12121-00	5- 2	4X7-14422-00	8-31	4X7-15421-01	12-27	4X7-17251-01	17-16	19T-21629-00	21-15
4X7-11133-10	1- 3	4X7-12151-00	5- 9	5A8-14437-00	8-30	4X7-15425-00	12-16	4X7-17402-00	17-12	19T-21631-00	21-21
4X7-11145-00	4-12	4X7-12156-00	5-10	4X7-14451-00	8-29	5A8-15429-00	12-24</				

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.
5A8-22312-00-98	23-10	3J2-23190-00	25-17
5A8-22318-00	23-22		25-40
5A8-22321-00	23-25	5A8-23340-00	25-47
5A8-22334-00	23-26	4G0-23356-00	25-19
5A8-22460-00	24-10		25-42
5A8-22463-00	24-11	5A8-23377-00	26-30
4X7-22464-00	24-13	256-23411-00	26-1
5A8-22467-00	24-12	256-23412-00	26-6
5A8-22470-00	24-18	256-23413-00	26-7
4X7-22498-00	24-22	256-23414-00	26-8
5A8-23102-00	25-1	4K0-23415-00	26-3
5A8-23103-00	25-24	4H7-23441-00-98	26-15
5A8-23110-00	25-5	3Y6-23442-00-98	26-16
	25-28	4H3-23451-00	26-5
3J2-23111-00	25-14	4H3-23454-00	26-4
	25-37	164-23462-00	26-2
3J2-23114-00	25-10	341-23469-00	26-22
	25-33	*	20-43
122-23119-01	25-18	134-23484-10	20-44
	25-41	4X7-2411M-00	27-6
5A8-23121-00	26-23	5A8-24110-00-02	27-1
5A8-23126-00	25-2	3X0-24161-01	27-31
122-23129-00	25-12	4H7-24181-00	27-3
	25-35	5A8-24182-00	27-4
5A8-23131-00	26-24	4K0-24183-00	27-5
5A8-23136-00	25-25	4K0-24186-00	27-7
5A8-23141-00	25-9	19T-24240-00	27-2
	25-32	4X7-24311-00	27-24
3H5-23144-00	25-8	4X7-24500-00	27-8
	25-31	4X7-24510-00	27-14
2H7-23145-00	25-3	2W6-24512-00	27-13
	25-26		27-19
3J2-23147-00	25-11	2G2-24522-00	27-11
	25-34		27-17
3R4-23153-00	25-4	4X7-24602-00	27-28
	25-27	4X7-24612-00	27-29
509-23158-L0	25-13	4L0-24705-00	28-22
	25-36	19T-24725-00	28-25
4X7-23168-00	25-15	19T-24728-00	28-16
	25-38	19T-24731-00	28-2
4K0-23170-00	25-6	19T-24738-00	28-17
	25-29	19T-2474F-00	28-14
5A8-23173-00	25-7	19T-2474G-00	28-15
	25-30	1L9-24741-00	28-4
278-23181-50	25-20	1T4-24741-00	28-3
	25-43	1J3-24742-00	28-13
3J2-23183-00	25-16	19T-24742-00	28-20
	25-39	19T-24756-00-63	28-18

PART NO.	REF. NO.	PART NO.	REF. NO.
4L0-24760-00	28-21		
19T-2477L-00	28-30		
19T-24773-00	28-10		
4A8-24786-00	28-29		
1T4-24796-00	28-11		
146-25115-00	29-2		
341-25149-00	29-5		
4K0-25168-20-98	29-8		
4H7-25181-00	29-11		
521-25188-00	29-16		
4K0-25190-00	29-10		
5A8-25321-00-98	31-5		
4H7-2533A-02	31-10		
5A8-25330-00	31-6		
5A8-25338-20-98	31-1		
4H7-25351-00	31-8		
1L9-25355-00	31-11		
5A8-25364-00	31-23		
5A8-25366-00	31-14		
4X7-25371-00	31-35		
5A8-25381-00	31-30		
5A8-25388-00	31-27		
1A1-25398-01	29-9		
	31-13		
1A1-25399-00	29-9		
	31-13		
2M0-25399-00	29-9		
	31-13		
256-25412-00	31-21		
5A8-25435-20	31-19		
4K0-25810-01	30-5		
4K0-25810-11	30-14		
5G9-25831-00	30-1		
5G9-25831-10	30-2		
1J3-25834-01	30-3		
1J3-25838-00	30-9		
	30-18		
1J3-25845-01	30-10		
	30-19		
341-25846-00	29-6		
4K0-25850-01	33-1		
4K0-25852-00	33-4		
4K0-25854-00	33-3		
4L0-25862-00	33-17		
4L0-25867-00	33-6		
5A8-25872-00	33-9		
5A8-25873-00	33-10		
5A8-25874-00	33-11		

PART NO.	REF. NO.	PART NO.	REF. NO.
4E2-25875-00	33-18		
4E2-25876-00	33-19		
4K0-25885-00	33-12		
1J3-25917-00	30-8		
	30-17		
5A8-26111-00	32-1		
2H7-26240-00	32-3		
2H7-26241-00	32-2		
5A8-26290-00	32-13		
5A8-26290-10	32-14		
5A8-26311-00	32-4		
5A8-26331-00	32-12		
5A8-26335-00	32-6		
1E6-26342-00	32-7		
1E6-26372-00	32-8		
1T5-26372-00	32-9		
584-26393-02	32-5		
4K0-26399-01	33-13		
5A8-27111-00-R4	34-1		
371-27114-00	10-29		
4X4-27114-00	10-28		
5A8-27211-00-93	34-5		
5A8-27212-00	34-8		
5A8-27231-00	34-12		
5A8-27311-00-R4	34-19		
3Y3-27315-00	34-24		
5A8-27410-00	34-25		
1J7-27413-01	34-26		
	34-31		
5A8-27420-00	34-30		
2H9-27427-00	34-28		
	34-33		
5A8-27430-00	34-37		
1J7-27433-00	34-38		
5A8-27440-00	34-42		
5A8-27442-00	34-50		
5A8-27443-00	34-51		
1J7-27444-00	34-43		
5A8-28100-10	28-31		
395-28185-00	28-19		
4X7-81410-20	13-2		
4X7-81450-21	13-1		
4X7-81670-20	13-4		
5A8-81800-60	14-1		
371-81809-20	14-4		
371-81811-20	14-7		
371-81812-20	14-8		
5A8-81815-00	14-11		
371-81826-20	14-2		

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.
1J7-81840-60	14-6	5A8-83371-20	40-12
4X7-81844-60	14-3	5A8-83371-30	40-13
1J7-81847-60	14-9	19T-83507-00	36-12
371-81847-20	14-5	19T-83508-00	36-13
4H7-81950-01	40-5	5A8-83509-00	36-9
5A8-81950-00	40-4	3H3-83513-00	36-21
5A8-81960-A0	40-6	5A8-83519-00	36-11
4L6-81980-M0	40-10	5A8-83520-00	36-5
2H8-82110-61	39-1	584-83523-00	36-20
5A8-82115-01	39-2	3G1-83536-01	36-2
5A8-82116-00	39-4	5A8-83540-00	36-4
4X7-82119-00	39-3	584-83541-00	36-27
120-82131-00	21-25	584-83548-00	36-14
3H5-82150-00	39-30	5A8-83550-00	36-30
1A0-82151-00	39-24	4K0-83568-00	36-7
2H7-82151-00	39-31	4K0-83569-00	36-8
4X7-82151-00	39-25	5A8-83570-F0	36-1
5A8-82170-00	39-22	2H7-83912-00	41-2
4X7-82172-00	39-26	2J2-83922-00	41-10
4X7-82175-00	39-23	437-83936-00	41-25
4X7-82305-21	39-32	4H7-83941-00	41-20
4X7-82310-70	39-8	2H7-83945-00	41-4
4X7-82341-00	39-12	1U3-83963-40	41-16
4X7-82342-00	39-13	4K0-83972-00	41-19
1J7-82370-10	39-14	1A0-83980-30	39-18
3Y8-82508-00	39-15	457-84146-85	37-7
5A8-82530-00	39-19	5A8-84303-G0	37-1
2H7-82540-00	39-6	5A8-84315-00	37-2
19T-82590-70	39-20	4E2-84321-G0	37-4
5A8-82591-00	39-21	5A8-84330-00-33	37-13
4K0-82911-00	41-1	447-84331-61	37-9
3Y6-82917-00	41-3	447-84332-60	37-10
19T-83310-40	35-1	198-84334-60	37-11
*	35-5	584-84338-60	37-14
	35-10	584-84345-60	37-15
4G0-83312-00	35-2	4E2-84347-00	37-6
4V8-83312-00	35-7	4E2-84395-00	37-3
4G0-83313-00	35-3	4E2-84397-00	37-5
	35-8	4V8-84710-45	38-1
4G0-83317-00	35-12	*	38-4
10L-83318-00	35-17	4V8-84721-45	38-2
19T-83318-00	35-16	4G0-84725-00	38-7
10L-83321-00	35-11	4V8-84735-45	38-3
341-83321-01	35-19	4G1-84744-00	36-3
4X7-83325-00	35-18		36-6
19T-83328-00	35-22		36-10
19T-83330-40	35-6	4V8-84751-40	38-5
4K0-83350-40	40-11	4G0-84754-00	38-6

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
3Y6-85130-00	40-16	90170-16278	24-17	90201-10591	4-13	90387-06763	22-21	90467-14015	8-20	91311-06040	12-33
4X7-85720-00	39-36	90170-20257	16-35	90201-10752	34-3	90387-087A5	2-4		20-42	91311-06050	7-8
5A8-86110-50	40-1	90170-20274	16-5	90201-12166	19-10	90387-100E2	20-17	90467-14057	8-19	91311-06055	11-13
90101-05496	22-27	90171-14020	29-13	90201-125A3	1-11	90387-102E9	19-16	90468-02111	8-7		12-19
90101-06291	31-12	90171-18008	31-32		20-12	90387-124F4	19-8	90468-05113	6-16	91311-06070	12-26
90101-08312	30-4	90176-10033	1-14	90201-12588	19-7	90387-15550	29-15		6-23	91311-06080	11-12
90101-10074	20-20	90179-05322	22-28		19-9	90387-170E5	15-9	90468-12006	26-20	91311-10060	11-11
90101-10303	4-14	90179-06176	34-17	90201-127A1	35-20	90387-172E5	15-7	90480-01141	22-11	91311-10070	11-10
90101-10308	30-23	90179-06337	15-18	90201-14226	3-17	90387-203E4	31-17	90480-12053	22-4	91311-10100	11-9
90101-10507	31-28	90179-08148	32-10	90201-14577	31-9	90387-203E5	31-34		22-12	91312-06100	8-37
90101-10524	20-5	90179-08210	10-26	90201-151A7	16-20	90387-296E0	17-26	90480-14101	26-25	91316-06010	6-8
90101-12498	24-23	90179-09331	3-11	90201-20276	17-7	90401-10034	33-15	90480-20302	11-20		6-12
90105-06154	4-9		3-14	90201-244A8	23-5	90401-10066	6-20	90501-10245	34-18	91316-06012	10-6
	6-6	90179-10247	20-10	90201-244A9	23-5	90401-16071	6-18	90501-10312	41-13		10-20
90105-08145	30-12		20-22	90201-245A0	23-5	90401-16073	1-31	90501-15636	15-8	91316-06016	11-22
	30-21		20-25	90201-30297	18-8	90430-06014	11-15	90501-21133	4-3		12-30
90105-08172	37-17		34-54	90202-04003	22-9	90430-10148	39-7	90501-23391	16-31		13-5
90105-10105	20-9	90179-10321	34-47	90202-06010	27-20	90430-15169	6-21	90501-31454	5-4	91316-06018	23-11
90105-10183	20-8	90179-12248	20-11	90202-10120	8-39	90430-17168	1-32	90501-44455	5-5	91316-06020	33-14
90105-10184	34-53	90179-12325	1-13	90208-04029	20-46		6-19	90501-75638	17-27	91316-06025	2-9
90105-10186	20-15	90179-12326	1-10	90209-06205	4-8	90445-08338	39-5	90506-08227	19-2		4-26
90105-10192	34-52	90179-14317	3-18	90209-07170	22-22	90445-09578	27-23	90506-10069	16-15	91316-06040	2-5
90109-06465	41-14	90183-04005	22-8	90209-08098	37-18		27-25	90506-18224	34-23		6-4
90109-06468	34-6	90185-10035	20-4	90209-10131	41-21	90445-11452	20-28	90506-20193	34-9		13-3
90109-06667	7-6	90185-10060	34-36	90209-14136	29-12	90445-11542	27-22	90506-26225	34-22	91316-08030	26-21
90109-08368	31-41	90201-05031	36-18	90209-18070	34-39	90445-11545	20-27	90506-35149	34-4	91316-08040	26-14
90109-08397	25-48	90201-053E0	28-7		34-44	90460-01176	23-24	90507-20002	31-7	91316-08050	1-16
90109-08406	31-36	90201-06008	8-38	90209-22191	17-3	90460-01177	23-23	90508-20023	34-27	91401-16012	34-41
90109-08592	4-23	90201-06042	34-29	90209-27192	17-14	90460-58204	8-16		34-32		34-46
90109-10500	34-20		34-34		17-18	90460-65195	8-24	90508-26494	15-15	91401-20015	31-40
90116-10221	31-20	90201-06057	37-23	90214-20022	16-3		8-25	90508-29531	19-6		34-15
90116-10344	1-9	90201-06067	21-18	90215-10192	20-6	90462-08073	12-4	90508-32535	19-4	91401-30030	29-14
90116-10352	20-23	90201-061A5	16-32	90215-20170	16-34	90462-08075	12-35	90560-06203	8-40	91401-40040	24-25
90116-12350	1-8	90201-065A1	22-17	90215-20182	16-4	90462-08076	12-13	90560-15116	29-1		31-33
90119-08048	28-12	90201-06552	26-27	90215-30191	17-37		12-37	90560-20135	31-2	91701-06035	34-40
90123-08046	32-11	90201-06557	23-19	90240-06040	34-13	90462-08093	8-15	91311-06016	1-28		34-45
90149-08011	27-21	90201-06674	13-6	90249-12008	34-16	90462-10085	12-36		12-20	91800-06030	1-5
90149-08131	41-11	90201-08083	41-5	90269-04003	20-45	90482-10098	7-11		24-26	91810-18016	6-2
90149-08166	15-16	90201-08544	25-23	90280-05013	3-16	90484-12027	21-19		39-37	91830-21014	12-7
90151-06013	15-13		25-46	90282-07042	16-2	90465-08171	11-23	91311-06020	7-7	91830-21020	12-32
90152-05005	37-16		25-51	90338-07043	20-40	90467-07029	8-13		12-10	91830-24016	11-2
90153-06018	34-10	90201-08748	21-10	90340-14042	6-24	90467-08003	8-4		12-23	92501-06010	12-5
90157-06021	24-14	90201-101A4	1-15	90340-14063	23-15		27-27		12-40	92501-06012	39-33
90170-06010	41-12	90201-10118	33-16	90380-12051	24-3	90467-10008	8-6	91311-06025	1-24	92501-06014	9-34
90170-06184	34-11	90201-10136	34-35	90380-25081	4-15		27-26		12-34	92501-06030	12-25
90170-06228	19-22	90201-10139	34-49	90387-08249	36-29	90467-11010	20-30	91311-06030	11-14	92502-06016	28-23
90170-08173	5-12	90201-10141	26-17	90387-06388	26-26	90467-13042	20-29		12-9		
90170-10136	31-22	90201-104A7	20-16	90387-064E8	11-8	90467-14015	1-22	91311-06040	12-8	92502-06030	39-28

NUMERICAL INDEX

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
92506-06016	37-21	92902-06100	22-25	93210-07135	7- 5	93604-10011	4-18	95611-10630	11- 4	98501-03008	27-16
92506-06025	20-34				11- 7	93604-16092	18- 5	95611-10635	11- 5	98501-04008	9- 9
92506-06050	20-37		28-24	93210-07155	6- 3	93604-20156	18- 4	95611-10650	11- 3	98501-05010	9-11
92603-06016	12-17		38-10		6-11	93605-10090	4- 4	95621-10330	34-55		37- 8
92701-06015	18-14		38-11		11- 6	93606-07082	16- 7	95702-05100	28- 6	98501-05012	9-32
92901-04100	9-10		39-29	93210-08483	24-20	93612-99168	24-24	95702-06100	28- 5	98501-05016	9-13
92901-05100	9-12		39-34		24-21	94112-18693	31-42	95706-12100	35-21	98501-06008	27-12
	9-14		40- 8	93210-10096	7-10	94112-18700	31-42	95811-10035	20- 3		27-18
	9-33	92902-06200	21-14	93210-11368	41- 7	94132-19694	29-17	95821-06025	16-33	98502-05030	8-33
	35-15		21-22	93210-26240	23-14	94132-19699	29-17	95826-06025	14-14	98503-04010	24-15
92901-05600	8-34	92902-06600	8-10	93210-29198	11-17	94212-18171	31-43	95826-10035	34-48	98506-04012	36-22
	35-14		22-26	93210-32172	12-12	94212-18188	31-43	97301-06018	21-12	98506-05010	27-30
92901-06100	9-35		39-17		23-27	94232-19122	29-18		21-16	98506-05025	23-28
	23-21		39-35	93210-48364	16-11	94232-19167	29-18		23-20	98506-05030	41-17
	34- 7		40- 9	93210-54452	7- 3	94580-25066	6- 9		39-16		41-24
	36-16	92902-08100	37-19	93210-58346	7- 2	94580-29090	31-25	97301-06040	22-23	98506-05040	41-18
	36-28		40- 3	93210-62446	1-27	94590-27098	4-16	97301-08020	21- 2	98701-05035	18- 6
92901-06200	34-14	92903-06600	10- 5	93210-64297	39- 9	94680-29031	31-26	97302-05014	28- 9	98706-04012	33- 5
	36-15		10-19	93210-64488	31-24	94701-00117	1-33	97302-06012	22-15	98906-04010	39-27
	41-22	92906-04100	36-23	93210-92448	1-23	95301-05700	35-13		38- 9	*	37-12
92901-06600	4-25	92906-04600	36-24	93211-01467	2- 2	95301-05800	36-19	97302-06030	40- 7		
92901-08100	10-10	92906-06100	20-35	93212-36469	23-12	95301-06600	36-26	97302-10018	34- 2		
	10-14		20-38	93306-20401	17-23	95301-06800	36-17	97306-06010	35-23		
	10-23		23-18	93306-20417	31- 3	95301-08700	4-24	97306-06016	23-17		
	21- 3		26-29	93306-20550	17-24		16-14	97306-06022	41- 8		
	25-22		33- 8		17-33		31-39	97306-06025	26-28		
	25-45		35-24	93306-20824	31-15		40- 2	97306-08014	40-14		
	25-50		37-22	93306-30203	29- 3	95301-10700	26-19	97306-08016	28-27		
	31-38		41- 9	93306-30417	31- 4		31-29				
92901-08200	16-13	92906-06600	20-36	93306-30424	17-11		34-21	97306-08020	26-31		
92901-08600	10- 3		20-39	93306-30525	17- 9	95302-05600	40-17	97311-08020	1-30		
	10-18	92906-08100	21- 8	93306-30610	17-32	95302-06600	22-24	97311-08025	10- 2		
	10-24		26-32	93306-30806	3- 4		38- 8		10-17		
	31-37		28-28	93306-30807	3- 2		39-10	97321-06020	19-20		
92901-10100	26-18			93306-90602	18- 2	95302-06700	14-12	97321-08016	10- 9		
	30-24		40-15	93320-32403	23- 2	95302-08600	37-20		10-13		
92901-10200	19-15	92906-08600	21- 9	93340-21505	16-19	95303-06700	19-23	97321-08030	10-22		
	30-25		26-13	93410-13004	15- 2	95303-08800	25-49	97322-06016	17-38		
92901-16600	23- 7	93101-14102	12-28	93410-20009	17- 8	95306-08800	26-12	97322-06020	8- 9		
92901-18200	31-31	93101-38100	31-16	93410-25010	17- 4	95311-08600	25-21	97323-06008	41-23		
92902-05100	28- 8	93102-10247	15-11	93420-62017	31-18		25-44	97326-06025	33- 7		
	40-18	93102-12106	19-11	93430-10016	19- 5	95311-10700	19-17	97326-08025	21- 7		
92902-05200	40-19	93102-22014	29- 4	93440-14086	1- 2	95312-06600	21-24	97326-08055	26-11		
92902-06100	14-13	93102-30237	17-34	93440-30077	17-15	95312-08600	21-11	97701-40512	36-25		
	21-13	93104-14059	16-16		17-19	95601-06100	41- 6	97701-40518	35- 4		
	21-17	93104-20068	17-10	93440-48079	24- 9		41-15		35- 9		
	21-23	93104-99069	23-13	93450-24028	3- 8	95601-16100	23- 8	98501-03008	14-10		
	22-16	93105-45017	29- 7	93501-04011	26- 9	95611-08625	1-17		27-10		

PARTS NAME INDEX

DESCRIPTION	REF. NO.
ABSORBER 1	2- 3
ABSORBER 3	1- 4
ADJUST SCREW SET	9-27
AIR CLEANER CASE ASSY	8-28
AIR VALVE ASSY	24-19
AIR VALVE COMP.	25-17
*	25-40
ARM, shift	19-18
ARM, valve rocker	5- 9
AXLE, counter	17-25
AXLE, main (17T)	17- 1
AXLE, wheel	29-11
*	31-30
BACK MIRROR ASSY	32-13
*	32-14
BALANCER, wheel (10G)	29- 9
*	31-13
BALANCER, wheel (20G)	29- 9
*	31-13
BALANCER, wheel (30G)	29- 9
*	31-13
BALL	26- 9
BAND	39-21
BAND, battery	21-25
BAND, muffler	10-16
BAND, switch cord	41-25
BAR, shift fork guide 1	18-12
BAR, tension	31-35
BATTERY ASSY (G.S. GM18Z-3A)	39- 1
BEARING	16-19
*	17-32
*	18- 2
*	23- 2
*	31-15
BEARING (B6204)	17-23
BEARING (B62042RS)	31- 3
BEARING (B6205DU8)	17-24
*	17-33
BEARING (B6302Z)	29- 3
BEARING (B6304A3)	17-11
BEARING (B6304ZZ)	31- 4
BEARING (B6305)	17- 9
BEARING (B6308C3 SPECIAL)	3- 4
BEARING (B6308C4 SPECIAL)	3- 2
BODY & KEY, steering lock	20-43
BODY ASSY	37-13
BOLT	1-16

PARTS NAME INDEX

DESCRIPTION	REF. NO.
BOLT	1-24
*	1-28
*	1-30
*	2- 5
*	2- 9
*	4-14
*	4-23
*	4-26
*	6- 4
*	6- 8
*	6-12
*	7- 6
*	7- 7
*	7- 8
*	8- 9
*	8-37
*	10- 2
*	10- 6
*	10- 9
*	10-13
*	10-17
*	10-20
*	10-22
*	11- 9
*	11-10
*	11-11
*	11-12
*	11-13
*	11-14
*	11-22
*	12- 8
*	12- 9
*	12-10
*	12-19
*	12-20
*	12-23
*	12-26
*	12-30
*	12-33
*	12-34
*	12-40
*	13- 3
*	13- 5
*	14- 2
*	17-38
*	19-20
*	20- 5
*	20-20

PARTS NAME INDEX

DESCRIPTION	REF. NO.
BOLT	21- 2
*	21- 7
*	21-12
*	21-16
*	22-15
*	22-23
*	22-27
*	23-11
*	23-17
*	23-20
*	24-23
*	24-26
*	25-48
*	26-11
*	26-14
*	26-21
*	26-28
*	26-31
*	28- 9
*	28-27
*	30- 4
*	30-23
*	31-12
*	31-28
*	31-36
*	31-41
*	32-11
*	33- 7
*	33-14
*	34- 2
*	34- 6
*	34-20
*	35-23
*	36-14
*	38- 9
*	39-16
*	39-37
*	40- 7
*	40-14
*	41- 8
*	41-14
*	41-23
BOLT 1	21-21
BOLT 2	25-19
*	25-42
BOLT, cap	25-14
*	25-37

PARTS NAME INDEX

DESCRIPTION	REF. NO.
BOLT, chain case 2	23-26
BOLT, connecting rod	3-10
*	3-13
BOLT, cylinder holding 3	1-7
BOLT, fitting 1	26-5
BOLT, flange	14-14
*	16-33
*	20-3
*	34-48
BOLT, flasher stay fitting	35-18
BOLT, flasher 1	35-12
BOLT, hexagon socket head	25-20
*	25-43
BOLT, lever	41-4
BOLT, stud	1-8
*	1-9
*	1-17
*	11-3
*	11-4
*	11-5
*	20-23
*	31-20
*	34-55
BOLT, union	1-31
*	6-18
*	6-20
*	33-15
BOLT, washer based	4-9
*	6-6
*	20-8
*	20-9
*	20-15
*	30-12
*	30-21
*	34-52
*	34-53
*	37-17
BOLT, with washer	28-12
BOOT, cable	32-7
BOOT, caliper	30-8
*	30-17
BOOT, master cylinder	33-17
BOSS, clutch	16-23
BOX	21-20
BOX, battery	22-13
BOX, tool	22-18
BRACKET 2	34-50
BRACKET 3	34-51

PARTS NAME INDEX

DESCRIPTION	REF. NO.
BRACKET, horn	26-30
BRACKET, licence	38-5
BRACKET, master cylinder	33-6
BRACKET, meter	36-11
BRACKET, seat	28-16
*	28-17
BRACKET, side stand	20-24
BRAKE PAD KIT, front	30-13
*	30-22
BRAKE SHOE COMP.	31-6
BREATHER COMP.	12-39
BREED SCREW KIT	30-11
*	30-20
BRUSH HOLDER ASSY	14-6
BRUSH 1	14-7
BRUSH 2	14-8
BULB (12V-3.4W)	36-3
*	36-6
*	36-10
BULB (12V-4W)	37-6
BULB (12V-21/5W)	38-4
BULB (12V-60/55W)	37-12
BULB, flasher (12V-21W)	35-5
*	35-10
BUSH 2	23-3
BUSH, rear shock absorber	24-4
BUSH, shock absorber lower	24-2
BUSH, solid	4-15
*	24-3
CABLE, clutch	32-6
CABLE, control 1	24-11
CABLE, control 2	24-12
CABLE, starter 1	32-12
CABLE, throttle 1	32-4
CALIPER ASSY (LEFT)	30-14
CALIPER ASSY (RIGHT)	30-5
CALIPER SEAL KIT	30-7
*	30-16
CAM CHAIN SPROCKET ASSY(20/50T)...	4-5
*	4-6
CAM, driven	17-28
CAMSHAFT	31-8
CAMSHAFT 1	4-10
CAMSHAFT 2	4-11
CAP	29-16
CAP ASSY	27-28
CAP, adjust	24-22
CAP, bolt	26-22
CAP, cleaner case 2	8-31

PARTS NAME INDEX

DESCRIPTION	REF. NO.
CAP, front fork	25-15
*	25-38
CAP, handle lock	20-44
CAP, indicator	30-10
*	30-19
CAP, reservoir	33-4
CAP, tensioner case	2-7
CAP, tool box	20-41
CARBURETOR ASSY	9-1
CARBURETOR ASSY 1	9-2
CARBURETOR ASSY 2	9-3
CASE, chain	23-9
CASE, chain 2	23-10
CAST WHEEL, front (1.85-19)	29-8
CAST WHEEL, rear	31-1
CHAIN	4-16
*	6-9
CHAIN, drive (DID630DS-90L)	31-25
CIRCLIP	1-2
*	3-8
*	15-2
*	17-4
*	17-8
*	17-15
*	17-19
*	19-5
*	24-9
*	25-16
*	25-39
*	31-18
CLAMP	6-14
*	6-22
*	7-11
*	8-15
*	11-23
*	12-4
*	12-13
*	12-35
*	12-36
*	12-37
*	21-19
CLAMP 2	6-15
CLAMP, hose	8-16
*	8-24
*	8-25
*	23-23
*	23-24
CLIP	1-22

PARTS NAME INDEX

DESCRIPTION	REF. NO.
CLIP	6-16
*	6-23
*	8- 4
*	8- 6
*	8- 7
*	8-13
*	8-19
*	8-20
*	20-29
*	20-30
*	20-42
*	26-20
*	27- 6
*	27-26
*	27-27
CLUTCH, hub	31-14
CLUTCH, meter	29- 5
COLLAR	2- 4
*	11- 8
*	15- 7
*	15- 9
*	17-26
*	19- 8
*	19-16
*	20-17
*	22-21
*	26-26
*	29-15
*	31-17
*	31-34
*	36-29
COLLAR 2	15-12
COLLAR, body fitting	37-14
CONNECTING ROD ASSY	3- 9
*	3-12
CONNECTOR SET	9-36
CONTROL PANEL ASSY	24-10
CORD ASSY	38- 3
CORD, high tension 1	39-12
CORD, high tension 2	39-13
COTTER, valve	5- 8
COVER	28-11
COVER, ball race 1	26- 3
COVER, cap	12-18
COVER, crankcase 1	12- 1
COVER, crankcase 2	12-27
COVER, crankcase 3	12-38
COVER, cylinder head side 1	1-18

PARTS NAME INDEX

DESCRIPTION	REF. NO.
COVER, cylinder head side 2	1-25
*	12-11
COVER, cylinder head side 3	1-26
COVER, cylinder head side 4	1-19
COVER, double seat	28- 2
COVER, dust	19-13
*	19-19
COVER, footrest	34-26
*	34-31
COVER, fuse box	39-26
COVER, generator	12-14
COVER, generator 2	12-16
COVER, handle lever 1	32- 8
*	32- 9
COVER, joint	8-23
COVER, lead wire	39- 3
COVER, oil element	7- 4
COVER, Plunger cap	9- 5
COVER, Pump gear	6- 7
COVER, rear footrest	34-38
*	34-43
COVER, shift Pedal	19-14
COVER, shifter	12-24
COVER, shifter 1	12-21
COVER, side 1	22- 1
COVER, side 2	22- 5
COVER, side 3	22- 7
COVER, socket	37- 5
COVER, speedometer	36-12
COVER, tachometer	36-13
COVER, tail	28-18
COVER, thrust 2	23- 4
COVER, upper 1	26-23
COVER, upper 2	26-24
CRANKCASE ASSY	11- 1
CRANKSHAFT	3- 1
CROWN, handle	26-10
CYLINDER	2- 1
CYLINDER COMP., front fork	25- 6
*	25-29
CYLINDER HEAD ASSY	1- 1
CYLINDER KIT, master	33- 2
DAMPER	22-14
*	22-19
*	31-23
*	36-20
*	36-21
*	36-27

PARTS NAME INDEX

DESCRIPTION	REF. NO.
DAMPER SUB ASSY	24- 1
DAMPER, battery box	22-20
DAMPER, flasher 1	35-11
*	35-19
DAMPER, headlight	37-15
DAMPER, locating 1	27- 3
DAMPER, locating 2	27- 4
DAMPER, locating 3	27- 5
DAMPER, rubber 1	20-18
DIAPHRAGM ASSY	9-22
DIAPHRAGM, reservoir	33- 3
DIODE	40-10
DISC, brake	30- 1
*	30- 2
DOUBLE SEAT ASSY	28- 1
DRIVE AXLE ASSY	17-12
DRIVE LEVER ASSY	15-10
DUCT	8-30
ELEMENT ASSY, oil cleaner	7- 1
ELEMENT, air cleaner	8-29
EMBLEM	28-29
EMBLEM 1	27-31
EMBLEM 6	22- 2
*	22- 6
FENDER, rear	21- 5
FILTER ASSY	20-26
FLANGE, spacer 1	29- 2
FLASHER RELAY ASSY	40-11
FLOAT	9-18
FORK, shift 1	18- 9
FORK, shift 2	18-10
FORK, shift 3	18-11
FRAME COMP	20- 1
FRONT FENDER COMP.	21- 1
FRONT FLASHER LIGHT ASSY 1	35- 1
FRONT FOOTREST ASSY (L.H)	34-25
FRONT FOOTREST ASSY (R.H)	34-30
FRONT FORK ASSY (L.H)	25- 1
FRONT FORK ASSY (R.H)	25-24
FRONT STOP SWITCH ASSY	39-18
FUEL COCK ASSY 1	27- 8
FUEL COCK ASSY 2	27-14
FUEL COCK VALVE SET	27- 9
*	27-15
FUEL TANK COMP.	27- 1
FUNNEL	8-27
FUNNEL, air	8-26
FUSE (12V-10A)	39-24

PARTS NAME INDEX

DESCRIPTION	REF. NO.
FUSE (12V-15A)	39-25
FUSE (12V-30A)	39-31
FUSE BOX ASSY	39-22
FUSE HOLDER ASSY	39-30
GASKET	1-32
*	6-19
*	6-21
*	6-25
*	11-15
*	14- 3
*	15-17
*	23-16
*	25-13
*	25-36
*	27-11
*	27-17
*	39- 7
*	39-23
GASKET 1	12-15
GASKET, cap	27-29
GASKET, crankcase cover	12- 6
GASKET, crankcase cover 3	12-31
GASKET, cylinder	2- 6
GASKET, cylinder head 1	1- 6
GASKET, drain Plug	25-12
*	25-35
GASKET, exhaust Pipe	10-25
GASKET, flasher lens	35- 3
*	35- 8
GASKET, float chamber	9-19
GASKET, manifold	8- 8
GASKET, muffler	10- 4
*	10-15
GASKET, shifter cover	12-22
GASKET, tensioner case	2- 8
*	4-27
GAUGE, level	12- 2
*	12- 3
GEAR UNIT ASSY	29-10
GEAR, breaker drive (35T)	4- 2
GEAR, drive (35T)	4- 1
GEAR, idler 1 (35T)	15- 5
GEAR, idler 2 (27T)	15- 6
GEAR, middle drive	17-22
GEAR, middle driven	17-29
GEAR, Primary drive (47T)	16- 1
GEAR, 1st wheel (40T)	17-21
GEAR, 2nd wheel (40T)	17-13

PARTS NAME INDEX

DESCRIPTION	REF. NO.
GEAR, 2nd/3rd Pinion (24/28T)	17- 5
GEAR, 3rd wheel (36T)	17-17
GEAR, 4th Pinion (31T)	17- 2
GEAR, 4th wheel (32T)	17-20
GEAR, 5th Pinion (33T)	17- 6
GEAR, 5th wheel (30T)	17-16
GRAPHIC SET	27- 2
GRAPHIC SET, tail cover	28-30
GRAPHIC 1	22- 3
GRAPHIC 2	22-10
GRIP (L.H.)	32- 2
GRIP ASSY	32- 3
GROMMET	11-20
*	22- 4
*	22-11
*	22-12
*	26-25
*	28-13
*	28-20
GUARD, chain	23-22
GUARD, mud	21-15
GUIDE, air	20-33
GUIDE, cable	33-13
GUIDE, in./ex. valve	1- 3
GUIDE, spring 2	24- 7
GUIDE, stopper 1	4-20
GUIDE, stopper 2	4-21
GUIDE, stopper 3	4-22
HANDLE, seat	28-10
HANDLE, standing	28-26
HANDLEBAR	32- 1
HEADLIGHT UNIT ASSY	37- 1
HOLDER	32- 5
HOLDER, brake hose 1	33-18
HOLDER, brake hose 2	33-19
HOLDER, cable	21- 4
HOLDER, handle lower	26-16
HOLDER, handle upper	26-15
HOLDER, lever 1	41- 1
HOLDER, sprocket	17-36
HORN	40-12
*	40-13
HOSE	8-18
*	20-27
*	20-28
*	27-22
*	27-23
*	27-25

PARTS NAME INDEX

DESCRIPTION	REF. NO.
HOSE	39- 5
HOSE, air	8- 5
*	24-18
HOSE, brake	33-11
HOSE, brake 1	33- 9
HOSE, brake 2	33-10
HOSE, vacuum sensing 1	8-12
HOSE, vacuum sensing 2	8- 3
HOUSING, Push screw	16- 6
IGNITION COIL ASSY	39- 8
IGNITOR UNIT ASSY	39-32
INNER TUBE COMP.1	25- 5
*	25-28
JET	9-30
JET, main 1 (#126)	9-29
JET, main 2 (#124)	9-31
JOINT	8-14
*	33-12
JOINT, air cleaner 1	8-21
JOINT, air cleaner 2	8-22
JOINT, carburetor 1	8- 1
JOINT, carburetor 2	8- 2
JOINT, chain	31-26
KEY, straight	16- 2
KEY, woodruff	3-16
KNOB, control	24-13
LENS, flasher	35- 2
*	35- 7
LENS, headlight	37- 4
LENS, taillight	38- 2
LEVER 1	41- 2
LEVER 2	41-10
LEVER, camshaft	31-11
LEVER, drive	15-14
LEVER, starter	41-20
LEVER, starter 1	9- 6
LEVER, starter 2	9- 7
LID	28-19
LINK, side stand	34-24
MAIN SWITCH ASSY	39-15
MASTER CYLINDER ASSY	33- 1
MUFFLER 1	10- 7
MUFFLER 2	10-11
NEEDLE	9-15
*	9-17
NEEDLE VALVE ASSY	9-16
NEUTRAL SWITCH ASSY	39- 6
NOZZLE, main	9-21

PARTS NAME INDEX

DESCRIPTION	REF. NO.
NUT	1-10
*	1-13
*	3-11
*	3-14
*	3-18
*	4-24
*	5-12
*	10-26
*	14-12
*	15-18
*	16- 5
*	16-14
*	16-35
*	19-17
*	19-22
*	19-23
*	20-10
*	20-11
*	20-22
*	20-25
*	21-11
*	21-24
*	22-24
*	22-28
*	24-17
*	25-21
*	25-44
*	26-12
*	26-19
*	31-22
*	31-29
*	31-39
*	32-10
*	34-11
*	34-17
*	34-21
*	34-47
*	34-54
*	35-13
*	36-26
*	37-20
*	38- 8
*	39-10
*	40- 2
*	40-17
*	41-12
NUT, adjusting	37-11
NUT, castle	29-13

PARTS NAME INDEX

DESCRIPTION	REF. NO.
NUT, castle	31-32
NUT, crown	1-14
*	25-49
*	36-17
*	36-19
NUT, fitting 2	26- 4
NUT, flange	28- 5
*	28- 6
*	35-21
NUT, ring	10-27
NUT, self-locking	20- 4
*	34-36
NUT, sPring	22- 8
NUT, u	23- 8
*	41- 6
*	41-15
O-RING	1-23
*	1-27
*	2- 2
*	6- 3
*	6-11
*	7- 2
*	7- 3
*	7- 5
*	7-10
*	11- 6
*	11- 7
*	11-17
*	12-12
*	14- 5
*	14- 9
*	16-11
*	23-12
*	23-14
*	23-27
*	24-20
*	24-21
*	25-10
*	25-11
*	25-33
*	25-34
*	27-13
*	27-19
*	31-24
*	39- 9
*	41- 7
OIL LEVEL GAUGE ASSY	39-36
OIL PIPE COMP. 1	6-13

PARTS NAME INDEX

DESCRIPTION	REF. NO.
OIL PIPE COMP. 2	6-17
OIL PUMP ASSY	6- 1
OIL SEAL	12-28
*	15-11
*	16-16
*	17-10
*	17-34
*	19-11
*	23-13
*	25- 3
*	25-26
*	29- 4
*	29- 7
*	31-16
PAD, seat	28- 3
*	28- 4
PEDAL, brake	34- 5
PEDAL, shift	19-12
PICK-UP ASSY	13- 4
PILOT BOX, lower	36- 8
PILOT BOX, upper	36- 7
PIN	34-16
PIN, clevis	34-13
*	34-40
*	34-45
PIN, cotter	24-25
*	29-14
*	31-33
*	31-40
*	34-15
*	34-41
*	34-46
PIN, dowel	1- 5
*	4- 4
*	4-18
*	6- 2
*	11- 2
*	12- 7
*	12-32
*	16- 7
*	18- 4
*	18- 5
*	24-24
PIN, float	9-23
PIN, Piston	3- 7
PIPE	8-17
PIPE, breather 1	1-21
PIPE, delivery 2	6-10

PARTS NAME INDEX

DESCRIPTION	REF. NO.
PIPE, exhaust 1	10-1
PIPE, exhaust 2	10-21
PIPE, fuel 1	27-24
PIPE, silencer	8-36
PISTON (STD)	3-5
*	3-5
PISTON (1ST O/S 0.25MM)	3-5
PISTON (2ND O/S 0.50MM)	3-5
PISTON (3RD O/S 0.75MM)	3-5
PISTON (4TH O/S 1.00MM)	3-5
PISTON ASSY, calliper	30-6
*	30-15
PISTON RING SET (STD)	3-6
PISTON RING SET (1ST O/S)	3-6
PISTON RING SET (2ND O/S)	3-6
PISTON RING SET (3RD O/S)	3-6
PISTON RING SET (4TH O/S)	3-6
PLANE BEARING, connecting rod	3-15
*	3-15
*	3-15
*	3-15
*	3-15
*	3-19
*	3-19
*	3-19
PLATE	1-29
PLATE, bearing cover	12-29
PLATE, brake shoe	31-5
PLATE, breather	1-20
PLATE, breather 2	4-12
PLATE, bridge	22-29
PLATE, clutch 1	16-26
PLATE, clutch 2	16-29
PLATE, friction	16-28
PLATE, indicator	31-10
PLATE, Pressure 1	16-30
PLATE, seat	16-24
PLATE, thrust 1	16-22
*	17-30
PLUG	11-19
*	20-40
PLUG CAP ASSY	39-14
PLUG, drain	9-24
*	25-18
*	25-41
PLUG, oil	11-16
PLUG, spark (NGK BP-7ES)	1-33
PLUG, straight screw	8-24

PARTS NAME INDEX

DESCRIPTION	REF. NO.
PLUG, straight screw	23-15
POINT, neutral	18-7
PRI. DRIVEN GEAR COMP. (78T)	16-21
PROTECTOR	11-18
*	11-21
PULLER, chain 1	31-27
PUSH LEVER ASSY	16-12
RACE, ball 1	26-1
RACE, ball 2	26-6
RACE, ball 3	26-7
RACE, ball 4	26-8
REAR ARM BRACKET COMP.	20-19
REAR ARM COMP.	23-1
REAR FLASHER LIGHT ASSY 1	35-6
REAR FOOTREST ASSY 1	34-37
REAR FOOTREST ASSY 2	34-42
REAR FRAME COMP.	20-2
REAR REFLECTOR ASSY	40-16
RECTIFIER & REGULATOR ASSY	40-6
REINF. COMP.	21-6
RELAY ASSY	40-4
RELIEF VALVE ASSY	7-9
RETAINER, ball	16-8
RETAINER, clutch	29-6
RETAINER, valve spring	5-7
RIM, headlight	37-2
RING, clutch boss	16-27
RING, retaining	37-3
RING, snap	25-4
*	25-27
RIVET	20-45
ROD, brake	34-12
ROD, push 1	16-18
ROD, push 2	16-17
ROD, shift	19-21
ROLLER	9-38
ROTOR ASSY	13-1
SAFT	34-28
*	34-33
SCOOP, air 1	20-31
SCOOP, air 2	20-32
SCREW	15-16
*	27-21
*	41-11
SCREW, adjusting	16-10
SCREW, bind	39-27
SCREW, countersunk	15-13
*	37-18

PARTS NAME INDEX

DESCRIPTION	REF. NO.
SCREW, flat head	18-6
*	18-14
*	33-5
SCREW, hexagon	34-10
SCREW, oval head	12-17
SCREW, Pan head	8-33
*	9-9
*	9-11
*	9-13
*	9-32
*	9-34
*	12-5
*	12-25
*	14-10
*	20-34
*	20-37
*	23-28
*	24-14
*	24-15
*	27-10
*	27-12
*	27-16
*	27-18
*	27-30
*	28-23
*	36-22
*	37-8
*	37-21
*	39-28
*	39-33
*	41-17
*	41-18
*	41-24
SCREW, Panhead tapping	36-25
SCREW, Pilot adjusting	9-28
SCREW, Push	16-9
SCREW, rim adjusting	37-9
SCREW, tapping	35-4
*	35-9
SCREW, valve adjusting	5-11
SEAL	8-32
*	8-35
SEAL, cylinder 1	1-12
SEAL, dust	25-8
*	25-31
SEAL, steering	26-2
SEAL, valve stem	5-6

PARTS NAME INDEX

DESCRIPTION	REF. NO.
SEAT LEVER ASSY	28-21
SEAT LOCK ASSY	28-22
SEAT, sPring lower	24- 8
SEAT, sPring upper	24- 5
SEAT, valve sPring	5- 3
SEGMENT	18- 3
SHAFT 1	15- 3
SHAFT, brake Pedal	34- 8
SHAFT, Pivot	23- 6
SHAFT, rocker 2	5-10
SHAFT, tensioner	4- 7
SHIFT CAM ASSY	18- 1
SHIFT LEVER ASSY	19- 1
SLEEVE, caliper	30- 9
*	30-18
SOCKET CORD ASSY	36- 5
*	36- 9
SOCKET, meter	36- 2
SOCKET, Pilot light	37- 7
SOLENOID	40- 1
SPACER	8-40
*	28-25
*	29- 1
*	31- 2
SPEEDOMETER ASSY	36- 1
SPEEDOMETER CABLE ASSY	36-30
SPINDLE, taper	25- 7
*	25-30
SPRING	24- 6
SPRING, clutch boss	16-25
SPRING, compression	4- 3
*	5- 4
*	5- 5
*	15- 8
*	16-31
*	17-27
*	34-18
*	41-13
SPRING, diaPhra&m 2	9- 8
SPRING, front fork	25- 9
*	25-32
SPRING, screw	37-10
SPRING, tension	16-15
*	19- 2
*	31- 7
*	34- 4
*	34- 9
*	34-22

PARTS NAME INDEX

DESCRIPTION	REF. NO.
SPRING, tension	34-23
SPRING, torsion	15-15
*	19- 4
*	19- 6
*	34-27
*	34-32
SPROCKET, cam chain (28T)	4-17
SPROCKET, drive	3- 3
SPROCKET, drive (16T)	17-35
SPROCKET, driven (35T)	6- 5
*	31-19
STAND, main	34- 1
STAND, side	34-19
STARTER CIRCUIT CUT-OFF RELAY	40- 5
STARTER CLUTCH ASSY	15- 1
STARTER PLUNGER KIT	9- 4
STARTING MOTOR ASSY	14- 1
STATOR ASSY	13- 2
STAY, chain case 1	23-25
STAY, engine 2	20-13
STAY, engine 3	20-14
STAY, engine 4	20- 7
STAY, flasher 1	35-16
*	35-17
STAY, flasher 2	35-22
STAY, front 1	28-14
STAY, front 2	28-15
STAY, muffler 1	10- 8
STAY, muffler 2	10-12
STOP SWITCH ASSY	39-19
STOPPER LEVER ASSY	19- 3
STOPPER, main stand	10-28
*	10-29
STOPPER, shift bar	18-13
SWITCH	41- 3
SWITCH, handle 3	41-16
SWITCH, handle 4	41-19
TACHOMETER ASSY	36- 4
TAILLIGHT UNIT ASSY	38- 1
TENSIONER ASSY, cam chain	4-19
THROTTLE SCREW WITH SPRING 1	9-26
THROTTLE SCREW WITH SPRING 2	9-25
TIRE (120/90-18 65H)	31-42
*	31-42
TIRE (3.25-19)	29-17
*	29-17
TOOL KIT	28-31
TUBE (120/90-18)	31-43

PARTS NAME INDEX

DESCRIPTION	REF. NO.
TUBE (120/90-18)	31-43
TUBE (3.25-19)	29-18
*	29-18
TUBE, outer 1	25- 2
TUBE, outer 2	25-25
UNDER BRACKET COMP.	25-47
VALVE, exhaust	5- 2
VALVE, intake	5- 1
VALVE, mixture control	8-11
WASHER	4- 8
*	8-10
*	17- 3
*	17-14
*	17-18
*	21-14
*	21-22
*	22-22
*	22-26
*	29-12
*	31-21
*	34-39
*	34-44
*	37-18
*	39-17
*	39-35
*	40- 9
*	40-19
*	41-21
WASHER KIT	14- 4
WASHER SET	9-37
WASHER, claw	16- 3
WASHER, conical sPring	20-46
WASHER, lock	16- 4
*	16-34
*	17-37
*	20- 6
*	20-21
*	30- 3
WASHER, main Jet	9-20
WASHER, Plain	16-13
*	19-15
*	30-25
*	31-31
*	34-14
*	36-15
*	41-22
WASHER, Plate	1-11
*	1-15

PARTS NAME INDEX

DESCRIPTION	REF. NO.
WASHER, Plate	3-17
*	4-13
*	4-25
*	8-34
*	8-38
*	8-39
*	10- 3
*	10- 5
*	10-18
*	10-19
*	10-24
*	13- 6
*	16-20
*	16-32
*	17- 7
*	18- 8
*	19- 7
*	19- 9
*	19-10
*	20-12
*	20-16
*	20-36
*	20-39
*	21- 9
*	21-10
*	21-18
*	22- 9
*	22-17
*	23- 7
*	23-19
*	25-23
*	25-46
*	25-51
*	26-13
*	26-17
*	26-27
*	27-20
*	28- 7
*	31- 9
*	31-37
*	33-16
*	34- 3
*	34-29
*	34-34
*	34-35
*	34-49
*	35-14
*	35-20

PARTS NAME INDEX

DESCRIPTION	REF. NO.
WASHER, Plate	36-18
*	36-24
*	37-23
*	41- 5
WASHER, Plate (1.95T)	23- 5
WASHER, Plate (2.05T)	23- 5
WASHER, Plate (2.15T)	23- 5
WASHER, sPecial	27- 7
*	38- 6
*	38- 7
WASHER, sPring	9-10
*	9-12
*	9-14
*	9-33
*	9-35
*	10-10
*	10-14
*	10-23
*	14-13
*	20-35
*	20-38
*	21- 3
*	21- 8
*	21-13
*	21-17
*	21-23
*	22-16
*	22-25
*	23-18
*	23-21
*	25-22
*	25-45
*	25-50
*	26-18
*	26-29
*	26-32
*	28- 8
*	28-24
*	28-28
*	30-24
*	31-38
*	33- 8
*	34- 7
*	35-15
*	35-24
*	36-16

PARTS NAME INDEX

DESCRIPTION	REF. NO.
WASHER, sPring	36-23
*	36-28
*	37-19
*	37-22
*	38-10
*	39-11
*	39-29
*	39-34
*	40- 3
*	40- 8
*	40-15
*	40-18
*	41- 9
WASHER, thrust	17-31
WHEEL LOCK ASSY	28-32
WHEEL, starter (23T)	15- 4
WIRE HARNESS ASSY	39-20
WIRE, minus lead	39- 4
WIRE, Plus lead	39- 2
WIRE, starter	14-11
O-RING SET	24-16

INDEX

(INDIVIDUAL SPEC.)

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
1H2-21821-00	45- 1				
1H2-21822-90	45- 2				
521-25188-00	42- 3				
	45-10				
5A8-26290-00	42- 4				
5A8-26290-10	42- 6				
4H7-28290-20	42- 7				
4H7-26290-70	42- 5				
3Y3-27315-00	42-13				
	45-14				
458-27315-00	45-15				
3Y8-82508-00	44- 1				
	47- 1				
3Y6-82508-80	44- 2				
	47- 2				
4K0-83350-40	44- 3				
	47- 3				
4E6-83350-40	44- 4				
	47- 4				
1A0-83395-03	44- 5				
	47- 5				
4V8-84710-40	43- 1				
	46- 1				
4V8-84721-00	43- 2				
	46- 2				
4V8-84735-00	43- 3				
	46- 3				
90109-10473	42- 9				
90109-10500	42- 8				
90201-06057	45- 5				
90209-14136	42- 1				
	45- 8				
90506-18224	42-11				
	45-12				
90506-26225	42-10				
	45-11				
90507-29009	42-12				
90507-32020	45-13				
92506-06020	45- 3				
92901-14200	42- 2				
	45- 9				
92902-06600	45- 7				
92906-06100	45- 4				
95302-06600	45- 6				

COPY RIGHT: ALL RIGHTS RESERVED
NO PART OF THIS PUBLICATION MAY BE
REPRODUCED WITHOUT PERMISSION.



YAMAHA

YAMAHA MOTOR CO., LTD.
2500 SHINGAI IWATA-SHI SHIZUOKA-KEN JAPAN

PRINTED IN JAPAN
First edition Dec., 1981

